

**NRAG7.E183151**  
**Programmable Controllers for Use in Hazardous Locations**  
**Certified for Canada**

**PROSOFT TECHNOLOGY INC** E183151  
5201 TRUXTUN AVE. 3<sup>rd</sup> Floor  
BAKERSFIELD, CA 93309 USA

**Class I, Division 2, Groups A, B, C and D.**

**Communication Modules**, Models MVI69-BASE, MVI69-EBASE for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations.

**DeviceNet scanner module** , PTQ-DNET.

**I/O communication modules**, Models 1560-MBP, 1560-PDP, 3170-INTB, -INTB-4, 3170-MBS, 3300-MBP, 3350-MBP, 3700-DEM, 3750-DEM.

Models 4101, 4102, 4104, 4105, 4106, 4107, 4127, 4201, 4202, 4204, 4205, 4206, 4207, 4210, 4301, 4302, 4303, 4304, 4305, 4306, 4307, 4310, 4502, 4506, 4507, 4601, 4602, 4604, 4605, 4606 or 4607 may be followed by additional characters.

Models 5101, 5102, 5104, 5105, 5106, 5107, 5127, 5201, 5202, 5204, 5205, 5206, 5207, 5210, 5301, 5302, 5303, 5304, 5305, 5306, 5307, 5310, 5502, 5506, 5507, 5601, 5602, 5604, 5605, 5606 or 5607.

Models 6101-WA, 6102-WA, 6104-WA, 6105-WA, 6106-WA, 6107-WA, 6127-WA, 6201-WA, 6202-WA, 6204-WA, 6205-WA, 6206-WA, 6207-WA, 6210-WA, 6301-WA, 6302-WA, 6303-WA, 6304-WA, 6305-WA, 6306-WA, 6307-WA, 6310-WA, 6502-WA, 6506-WA, 6507-WA, 6601-WA, 6602-WA, 6604-WA, 6605-WA, 6606-WA and 6607-WA.

Model PTQ may be followed by XXXX; Models PTQ-AFC, PTQ-PDPMV1, PTQ-HART.

Models PS69-DPS and PS69-DPM.

**Logic units**, Models 3100-CAS, 3100-CBM, 3100-DFM, 3100-EMC, 3100-FOX, 3100-GDF, 3100-GSI, 3100-HAR, 3100-IMP, 3100-LNG, 3100-LTQ, 3100-MCM, 3100-MDA16, 3100-MDA4, 3100-MDA-USA, 3100-MTS, 3100-N2, 3100-PCX, 3100-ROC, 3100-SEA, 3100-SYS, 3100-YRK.

**Programmable controllers**, I/O Model 3170-PDP.

**Programmable controllers**, 7000-xxx, 7100-xxx, 7005-xxx, 7105-xxx, 7008-xxx, 7108-xxx, 7009-xxx, 7109-xxx, 7010-xxx, 7110-xxx, 7015-xxx, 7115-xxx, 7108-xxx, 7118-xxx, 7109-xxx, 7119-xxx.

Models 7000-XXX (#), 7005-XXX (#), 7010-XXX (#), 7105-XXX (#).

**Programmable Logic Controllers**, Models MVI56E – followed by –GSC, -MCM, -MCMR, -MCMXT, -MNET, -MNETC, -MNETCR, -MNETR, & -MNETXT;  
Model MVI56, followed by –HART, -PDPMV1; Model ILX56-MM.

Models MVI69 followed by –MNETC, -104S, -EGD, -FLN, -ADMNET, -DFNT, -DNPSNET, -GEC, -MNET, -MNET-CAP, AFC, -ADM, -101M, -101S, -103M, -DFCM, -DH485, -DNP, -GSC, -MCM, -N2, -S3964R, -PDPS, -PDPMV1, -MBP, -HART.

Model MVI69 followed by –BASE or –EBASE.

**Serial communication modules**, Models MVI46-XXX (#), MVI56-XXX (#), MVI56-MBP, MVI71-XXX (#), MVI94-XXX (#).

Models MVI56-MNETXX (#), MVI56-AFC, MVI56-DEM, MVI56-MBP, MVI56-PDPS.

(#) – Where X indicates any number of alphanumeric suffixes to indicate software changes only.

*Last Update 07/13/2011*