

AN-X3-AMX
Reliance AutoMax
DCSNet
Communication
Module

User Manual



Quest Technical Solutions

321 757-8483

qtsusa.com

qtsusa.com/dist

Throughout this manual we use notes to make you aware of safety considerations.

Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss.

These warnings help to:

WARNING!

- identify a hazard
- avoid the hazard
- recognize the consequences

IMPORTANT!

Identifies information that is especially important for successful application and understanding of the product.

TIP

Identifies information that explains the best way to use the AN-X3-DCSNet

Microsoft is a registered trademark of Microsoft Corporation.

Windows, Windows XP etc. are trademarks of Microsoft Corporation.

ControlLogix, RSLinx and RSLogix 5000 are trademarks of the Allen-Bradley Company, Inc.

AN-X3-AMX DCSNET MODULE OVERVIEW	2
Hardware Features	3
Package Contents	3
Other Requirements	3
Identifying the AN-X3 versus the Original AN-X	4
Differences from the Original AN-X	4
Using the MicroSD Card	4
AN-X3 Modes of Operation	5
INSTALLATION	6
Prevent Electrostatic Discharge	6
Power	6
DCSNet Cabling and Termination	6
Ethernet Cabling	7
CONFIGURATION	8
Initial Ethernet Configuration	8
DHCP	9
Static IP Address	10
Hostname	10
Firmware	10
Submitting the Configuration	10
Reconfiguring an AN-X from an Unknown State	11
The Configuration File	11
If the link-local address is not accessible...	12
DCSNET CONFIGURATION	15
DCS Diagnostic Counters	15
USING THE AUTOMAX PROGRAMMING SOFTWARE	17

Requirements	17
Installing and Configuring the VDD	17
Configuring the Programming Software	18
Multiple Programmer Access	19
Connecting to a Different AN-X3	20
EXCHANGING SCHEDULED DATA WITH A CONTROLLOGIX	21
Configuring the AN-X in RSLogix 5000	21
Mapping the DCS Data	24
Sample DCS-SLV File	25
Sample DCS-MAS File	26
Sending the Configuration to AN-X3	26
Viewing the Current Configuration	27
Ethernet/IP Log	27
ControlLogix Tags	27
Diagnostic Data – Connection 15	27
AN-X TO AN-X COMMUNICATION	30
ETHERNET PLC-5 FILE EMULATION	31
USING RSLINX TO VIEW DATA	32
TROUBLESHOOTING	34
LEDs	34
Ethernet LEDs	34
SYS LED	34
“Railroading” – SYS and NET LEDs	35
SYS and NET LEDs: Runtime	35
Fatal Errors	36
UPDATING THE FIRMWARE	37
Obtaining the Latest Software	37
SPECIFICATIONS	38

SUPPORT

39

WARRANTY

40

AN-X3-AMX DCSNet Module Overview

The AN-X3-AMX supports several firmware images. This manual focuses on AN-X3-DCS-MAS and AN-X3-DCS-SLV firmware.

Information that applies to both is referred to as AN-X3-DCSNet.

The AN-X3-DCSNet communications module connects a computer or other device to a Reliance DCSNet network, using Ethernet. The module supports DCSNet master or a DCS slave.

As a DCS master, the module:

- Scans up to 55 slave drops
- Transmits 8 words of broadcast data every 2.8 ms.
- Maintains standard DCS diagnostic counters

As a DCS slave, the module:

- Acts as any drop from 1 to 55, with drop depth from 1 to 55. It supports 32 words of input data and 32 words of output data per drop
- Receives 8 words of broadcast data from the master every 2.8 ms.
- Monitors the input and output data on others drops on the network
- Maintains standard DCS diagnostic counters

You can use the AN-X3-DCSNet module to communicate with an AutoMax processor, using AutoMax Programming Executive 3.9A or 4.3A or above. Refer to page 17 for details.

The AN-X3-DCSNet module supports exchanging scheduled data over Ethernet with an Ethernet/IP Originator, including ControlLogix processors, with any available RPI. Refer to page 21 for details.

You can use a DDE or OPC server such as RSLinx to access the DCS data directly on the AN-X3-DCSNet. The module "emulates" PLC-5 integer files N100-N155. Each file is 64 words and corresponds to DCS drops 0-55. Refer to page 31 for details.

The AN-X3-DCSNet module has a web interface for configuration and monitoring.

A watchdog timer is implemented in the module's hardware. If the firmware does not kick the watchdog within the timeout period the watchdog times out and places the module into a safe fatal failure state.

A jabber inhibit timer is implemented in the module's hardware. If the network transmitter is on longer than 150% of the longest network frame time, the transmitter is forced off and the module is placed into a safe fatal failure state.

The module firmware can be updated from the web interface, or copied to the modules micro SD card. Refer to page 37 for details.

Hardware Features



The module has:

- LEDs to indicate the status of the connection to the Ethernet, its own internal state, and the connection to the DCS network
- an Ethernet connector
- a 9-pin D-shell connector to connect to the DCS network
- a power connector

Package Contents

- AN-X3-DCSNet module
- 3 pin Phoenix power connector

Other Requirements

To use the AN-X3-DCSNet with the AutoMax Programming Executive requires:

- version 3.9A or 4.3A or above of the programming executive
- version 3.1.0.4 or above of the Virtual Device Driver

To exchange scheduled data with a ControlLogix processor over Ethernet requires:

- version 12 or above of RSLogix 5000
- version 12 or above of the ControlLogix firmware
- 100 Mbit/second Ethernet network and hardware (ENBT etc.)

Identifying the AN-X3 versus the Original AN-X

The label on the bottom toward the front says AN-X3.

There is a slot at the back for the microSD card.

When initially powered up:

- AN-X3 railroads (alternates) SYS and NET LEDs green as it starts up
- without the Ethernet cable attached, the Ethernet 10/100 (upper) LED is on for AN-X3 (both Ethernet LEDs are off for the original AN-X)

Differences from the Original AN-X

AN-X3 modules have a microSD card for storage of firmware and configuration data.

You no longer need AnxInit; everything can be done from the web interface or by editing files on the microSD card.

Operation is simplified, there are production and maintenance modes only.

The AN-X3 requires firmware version 4 and above.

The AN-X3 uses the same hardware interface to the automation networks.

The AN-X3 uses two Data – INT connections. RIO Data in slot 0, diagnostic and status information in slot15.

Using the MicroSD Card

The AN-X3 microSD card stores configuration data and firmware.

There are no restrictions on the size or speed of the card. The format must be FAT-16 or FAT-32.

The card must be present while the AN-X3 is running.

WARNING!

Do not remove the card while the AN-X3 is powered on!

If the AN-X3 is inaccessible from Ethernet because of its settings, you can remove the card and edit the file config.txt. Refer to page 11 for details.

Reinsert the card in the slot at the back of the AN-X3, with the pins facing up.

WARNING!

If you remove the card to edit the configuration file, push the card in straight or the card might fall inside the case and you will have to disassemble the AN-X3 to retrieve it (7/64 Allen wrench) .

AN-X3 Modes of Operation

There are two AN-X3 modes of operation:

- Maintenance mode. The AN-X3 runs the maintenance firmware at startup. It performs diagnostics (memory tests, etc), copies any changes from the microSD card. If there are no errors, it starts the AN-X3 in production mode.
- Production mode. This is the normal runtime mode of operation.

Installation

Prevent Electrostatic Discharge

The module is sensitive to electrostatic discharge.


Electrostatic discharge can damage integrated circuits or semiconductors. Follow these guidelines when you handle the module:

WARNING!

- Touch a grounded object to discharge static potential
- Do not touch the connector pins

Power

AN-X3 requires a DC power input of anywhere from 12 to 24 VDC. Left to right the pins on the power connector are chassis ground, negative voltage and positive voltage.

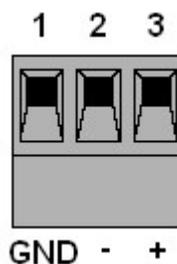

The chassis ground should be connected.

Maximum power consumption is 3.6 watts, 300 mA @ 12VDC, 150 mA @ 24VDC.

The part number for the power connector is:

Phoenix 1757022

(Old part number: MSTB 2.5/3-ST-5.08)

DCSNet Cabling and Termination

Use a DCSNet drop cable (612574-36R or 612403-036R) and passive tap (M/N 57C380) to connect the module to the coaxial network cable.

The drop cable is a 3-foot long multiconductor cable with 9-pin D-shell connectors at each end. Connect one end to the connector on the module and the other end to the passive tap.

The passive tap has two BNC connectors for connection to the coaxial cables and terminating loads.

The network coaxial cable must be terminated with 75 ohm terminating loads attached to the taps at the physical ends of the network. There should be two and only two terminators on the network.

The DCS network cable can be RG-59/U or RG-11/U.

Ethernet Cabling

AN-X3 has a standard RJ-45 connector for connecting to Ethernet.

If you are connecting AN-X3 to an existing network through a router or switch, use a standard Ethernet cable.

If you are connecting a computer or PLC directly to an AN-X3, use a crossover cable.

Configuration

The AN-X3-DCSNet module connects a computer or other device on Ethernet to a Reliance DCS network.

Before you can use the AN-X3-DCSNet , you must configure its Ethernet network properties.

Initial Ethernet Configuration

AN-X can be configured:

- to use a static (unchanging) IP address
- to obtain its IP address from a DHCP server
- to use the fixed link-local address 169.254.42.84

AN-X modules are shipped with the link-local address 169.254.42.84.

Unless you have control of the DHCP server, in most applications you will assign the AN-X a static IP address. Otherwise the DHCP server may assign a different IP address when the AN-X powers up, and any software that accesses the AN-X module would have to be reconfigured.

If you are using multiple AN-X modules, connect and configure one at a time, since initially they will all be set to the same link-local IP address.

IMPORTANT!

If you are connecting AN-X to an existing Ethernet network, consult the network administrator to obtain information about how you should configure AN-X or to obtain a static IP address for AN-X.

You configure the Ethernet properties using the web interface.

Start a web browser and enter the address 169.254.42.84

TIP

The AN-X3 must be on the same subnet as the computer to use the link-local IP address. It cannot be connected through a router.

You configure the Ethernet properties using the web interface.

Start a web browser and enter the address 169.254.42.84

Select *Administration/AN-X IP/FW Configuration*.

Home Page

▼ Automation Network

▼ Log Files

▼ Administration

AN-X IP/FW Configuration

AN-X Firmware Update

AN-X Diagnostic Capture

AN-X Module RESTART

▼ Support

Quest Technical Solutions

AN-X3-DCS-SLV AutoMax DCSNet Slave Ethernet/IP Gateway (4.1.2)

Introduction:

This is the AN-X3-DCS-MAS Configuration Web Page. The AN-X3-DCS-MAS acts as a DCSNet Master and allows data exchange on Ethernet.

The module supports the following protocols:

- Ethernet/IP-Scheduled - a text configuration file maps DCSNet registers into up to 15 connections of 248 words.
- Ethernet/IP-PLC-5 - Drops 0-55, Registers 0-63 are mapped to PLC-5 Files N100-N155, each 64 words.
- QTS Virtual Device Driver (VDD) - Allows AutoMax Programming Software to bridge from Ethernet to DCSNet.

Directions:

The main menu, located on the left, provides a list of options that can be configured using this web interface. To see the sub-menus for each item, click on the down arrow icon beside each main option.

Menu Details:

Automation Network:

Configure DCSNet

The *AN-X3 IP/FW Configuration* page appears.

Home Page

▼ Automation Network

▼ Log Files

▼ Administration

AN-X IP/FW Configuration

AN-X Firmware Update

AN-X Diagnostic Capture

AN-X Module RESTART

▼ Support

AN-X Configuration

Serial Number: 1a0011fa
MAC Address: 00:0C:1A:00:11:fa

DHCP:

Link-Local:

Static:

AN-X Hostname: AnxAmxDcs

AN-X IP Address: 10.10.2.102

NET Mask: 255.255.0.0

Gateway Address: 10.10.0.1

Firmware Type: AN-X3-DCS-SLV

SUBMIT

At the top the screen the serial number and MAC address of the AN-X being configured are shown.

Check either DHCP or Static.

DHCP

If the AN-X3 finds a DHCP server on the network, it obtains an IP address and other network parameters (netmask and default gateway) from the DHCP server.

To find the address assigned, you have to look at DHCP server.

When you submit the changes, if the AN-X3 does not find a DHCP server, it reverts to the default link local address 169.254.42.84 and repeatedly flashes the SYS LED 3 times red followed by a pause.

Static IP Address

If you select static IP address, enter:

- the IP address for the AN-X.
- the netmask for the AN-X
- the default gateway for your network.

You must enter a valid default gateway address even if there is no device at the gateway address on the network.

Hostname

Enter a *Hostname* for the AN-X3. This name is used internally by AN-X and may be used to identify the AN-X if you have a DNS server on your network. The name can be from 1 to 30 characters long.

This name may be used when configuring Ethernet/IP ControlLogix scheduled connections as well.

TIP

When you configure the AN-X in RSLogix 5000, use this same name for the emulated ENBT. See page 22.


Firmware

Select the firmware the AN-X is to load from the list provided. AN-X builds the list from the firmware files on the microSD card that are compatible with the AN-X hardware.

Submitting the Configuration

Once you have entered all required parameters, click SUBMIT to write the configuration to the file config.txt on the microSD card. The changes do not take effect until the AN-X restarts.

The following page appears when you click SUBMIT

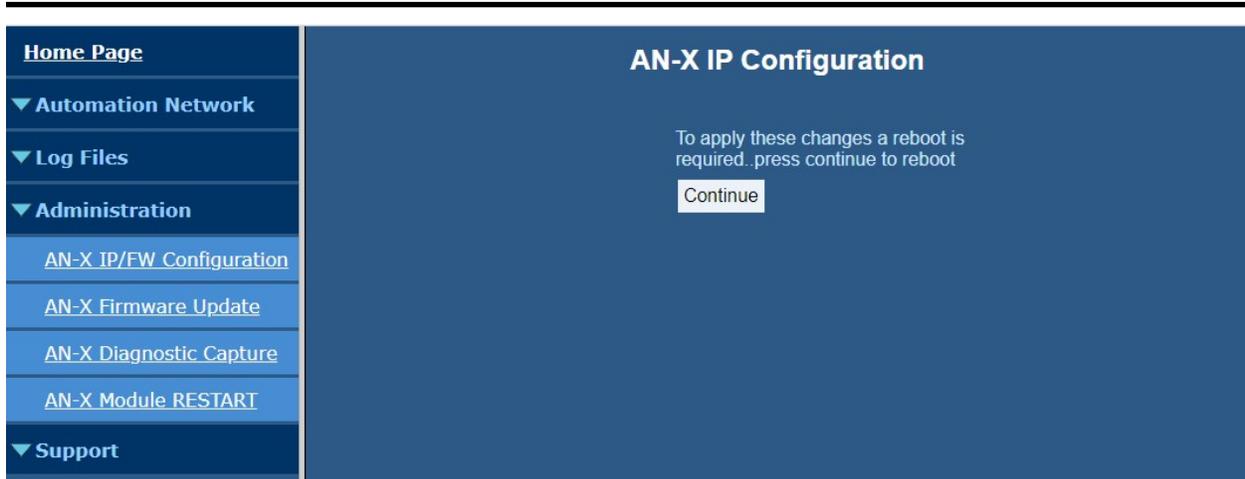

Click *Continue* to restart the AN-X3, then wait until the AN-X has completely restarted before continuing.

If you have changed the IP address, you will have to enter the new IP address in the browser's address field.

Reconfiguring an AN-X from an Unknown State

It sometimes happens that an AN-X has been previously configured with an IP address that causes it to be inaccessible on the current Ethernet network or the IP address is unknown.

Remove the microSD card and edit the file `config.txt` using a text editor such as Windows Notepad to set the AN-X3 to the desired configuration.

The Configuration File

The Ethernet configuration and the name of the production firmware file to load are stored in the text file `config.txt` on the microSD card.

When you perform the *Administration/AN-X IP/FW Configuration* command from the web interface, it writes the results to `config.txt`.

Each line consists of a keyword followed by a colon and then a value.

Example:

```
IP: 192.168.1.12
```

Anything after a semicolon on a line is treated as a comment.

Keyword	Possible Values
IP	LOCAL DHCP static IP address

Netmask	Ethernet netmask, used only if IP is a static IP address
DefGtwy	default gateway, used only if IP is a static IP address
Hostname	Ethernet host name, from 1 to 30 characters
Firmware	Firmware file to run at startup, must be present on microSD card

If you edit the file and AN-X3 finds an error during startup, it flashes an error code on the SYS LED, see page 34.

Example config.txt files

Example: Link- Local IP address

```
IP: LOCAL
Hostname: AnxAmxDcs
Firmware: AN-X3-DCS-MAS
```

Example: DHCP

```
IP: DHCP
Hostname: AnxAmxDcs
Firmware: AN-X3-DCS-MAS
```

Example: static IP address

```
IP: 192.168.1.14
NetMask: 255.255.255.0
DefGtwy: 192.168.1.1
HostName: AnxAmxDcs
Firmware: AN-X3-DCS-MAS
```

If the link-local address is not accessible...

Addresses 169.254.1.0 to 169.254.254.255 are reserved for use on a local network. AN-X3 modules are shipped set to the address 169.254.42.84 for initial configuration. This address is almost always accessible from a computer on the same local Ethernet as the AN-X.

If you cannot access the AN-X3 at address 169.254.42.84 using a web browser, there are two options for setting the AN-X Ethernet parameters.

Option 1: Edit config.txt on the SD card

Turn off power to the AN-X, remove the microSD card, insert it in a card reader in your computer, and edit the file config.txt. Refer to page 11 for details on the file contents.

Replace the microSD card in the AN-X and turn on the power. Confirm that you can access the AN-X at the address you set.

Option 2: Add a route to 169.254.42.84

Open a command prompt window and type

```
route print
```

TIP

It may be necessary to start the command prompt as administrator.

The routing table appears

```
=====
Interface List
0x1 ..... MS TCP Loopback interface
0x2 ...00 18 8b c5 9d f7 ..... Broadcom 440x 10/100 Integrated Controller -
Packet Scheduler Miniport
=====
=====

Active Routes:

Network Destination          Netmask          Gateway          Interface        Metric
-----
0.0.0.0                      0.0.0.0          10.10.0.1       10.10.0.20       20
10.10.0.0                    255.255.255.0   10.10.0.20     10.10.0.20       20
10.10.0.20                   255.255.255.255 127.0.0.1      127.0.0.1        20
10.255.255.255               255.255.255.255 10.10.0.20     10.10.0.20       20
64.215.255.122              255.255.255.255 10.10.0.1      10.10.0.20       20
127.0.0.0                    255.0.0.0       127.0.0.1      127.0.0.1        1
169.254.0.0                255.255.0.0    10.10.0.20    10.10.0.20    20
224.0.0.0                    240.0.0.0       10.10.0.20     10.10.0.20       20
255.255.255.255             255.255.255.255 10.10.0.20     10.10.0.20       1

Default Gateway:            10.10.0.1
=====

Persistent Routes:

None
```

If there is no entry in the network destination column that starts with 169.254.0.0 (highlighted above), add a route using

```
route add 169.254.0.0 mask 255.255.0.0 10.10.0.20 metric 20
```

where 10.10.0.20 is replaced with the IP address of the interface (network card) in your computer that is to communicate with the AN-X3.

Repeat the route print command and confirm that the table now has an entry similar to the one shown.

Now try pinging the AN-X3 at 169.254.42.84. You should now be able to access it using a browser to set the desired Ethernet configuration.

When you add a route in Windows and you want it to be 'persistent', use the -p option:

```
route -p add 169.254.0.0 mask 255.255.0.0 10.10.0.20 metric 20
```

That puts the route in the registry and it is added at each start up.

DCSNet Configuration

You set the DCS mode of operation (master or slave) by choosing AN-X3-DCS-MAS or AN-X3-DCS-SLV firmware.

If DCS-MAS firmware is selected, the Drop Number is 0 and there is nothing to configure.

If DCS-SLV firmware is selected, select *Automation Network/Configure DCSNet* to set the DCS drop number and depth.

AN-X3 defaults to DCS slave operation with drop number 55 and drop depth 1.

The DCS-SLV can be configured to “Listen Only Mode” by setting the Drop Number to 254 and the Drop Depth to 0. In this mode, the AN-X is not an active drop and cannot send any registers to them DCS Master, but it listens to and makes available register data for all active drops on the DCSNet.

DCS Diagnostic Counters

AN-X3 maintains standard DCS drop 0 diagnostic counters. Use *Automation Network/Monitor DCSNet* in the web interface to view the diagnostic counters.

The counters are:

Register	Meaning
4-7	Drop status table
12	Local station's drop number
14	Messages received
15	Receive timeouts
16	CRC errors
17	Overrun errors
18	Abort errors
19	Messages transmitted

Register	Meaning
20	Local station's drop depth

In the drop status table, register 4 contains status for drops 0 to 15, bit 0 corresponds to drop 0 (the master), bit 1 corresponds to drop 1, and so on. Register 5 contains the status of drops 16 to 31, register 6 contains the status of drops 32 to 47 and register 7 contains the status of drops 48 to 55.

Using the AutoMax Programming Software

Any computer with Ethernet access can use an AN-X3-DCSNet module to connect to an AutoMax processor over DCSNet.

AN-X3 offers fast access to the DCS network and does not require a specific format (ISA, PCI, etc.) interface card. AN-X3-DCSNet works with any computer that can connect to Ethernet.

A Virtual Device Driver (VDD) is used to support AutoMax programming software. This VDD intercepts programming software access to a virtual PCLink card.

Support for 16 bit VDD's was removed from Windows XP after KB2661254-V2 (and its dependents KB2756822, KB2749655 & KB2724197).

Typically a Virtual Machine (VM) is used for this purpose.

An earlier version of Windows XP that does not include the updates listed above is required.

The following instructions assume that:

- AN-X3 has been configured and is active on the Ethernet network
- AN-X3 has been connected to the DCS network
- the AN-X3 DCS drop number and drop depth have been assigned (see page 15)

To use AN-X3-DCSNet with the AutoMax Programming Executive, you must complete the following steps:

1. Install and configure the Virtual Device Driver (VDD)
2. Configure the programming software to use AN-X3


Requirements

- Virtual Device Driver (VDD) version 3.1.0.4 or above, available on the AN-X3 web distribution (qtsusa.com/dist)
- AutoMax Programming Executive 3.9 or 4.3 or above

Installing and Configuring the VDD

1. Install the virtual device driver.
2. Run the Control Panel Applet (Start/Control Panel/QTS PC Link Card Configuration) and set the Port Address and Memory Address. You can leave them at their default values.
3. Check *Enable AN-X3-DCSNet Link*
4. Enter the IP address of the AN-X3 in the *AN-X IP Address* field.


5. Click OK.

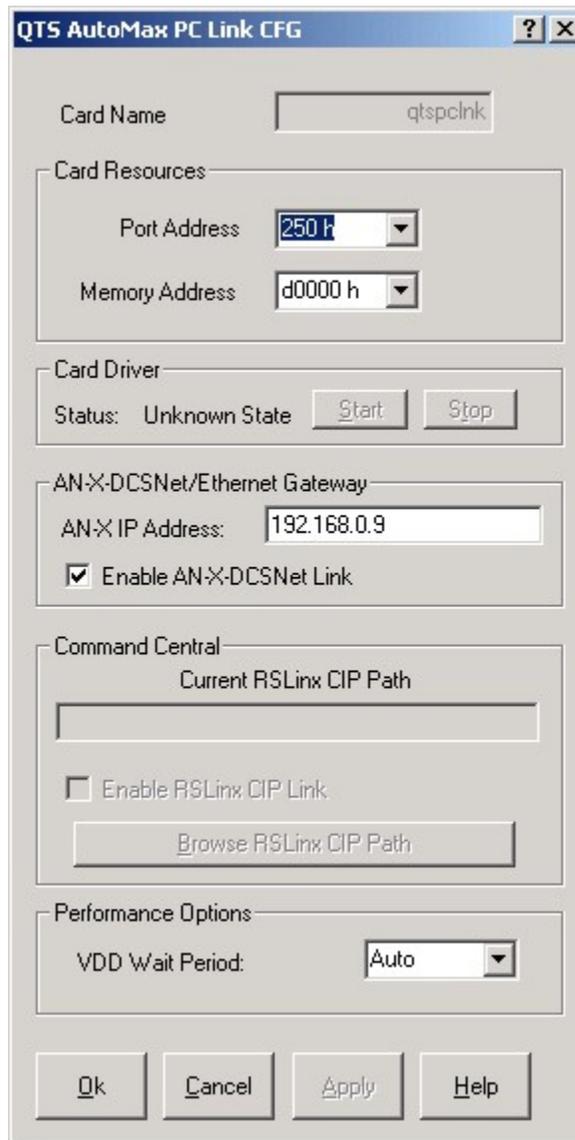

Configuring the Programming Software

To configure the AutoMax Programming Executive to use AN-X3:

1. Run the Programming Executive
2. Select *Setup/Communications*. The Communications Setup dialog appears.

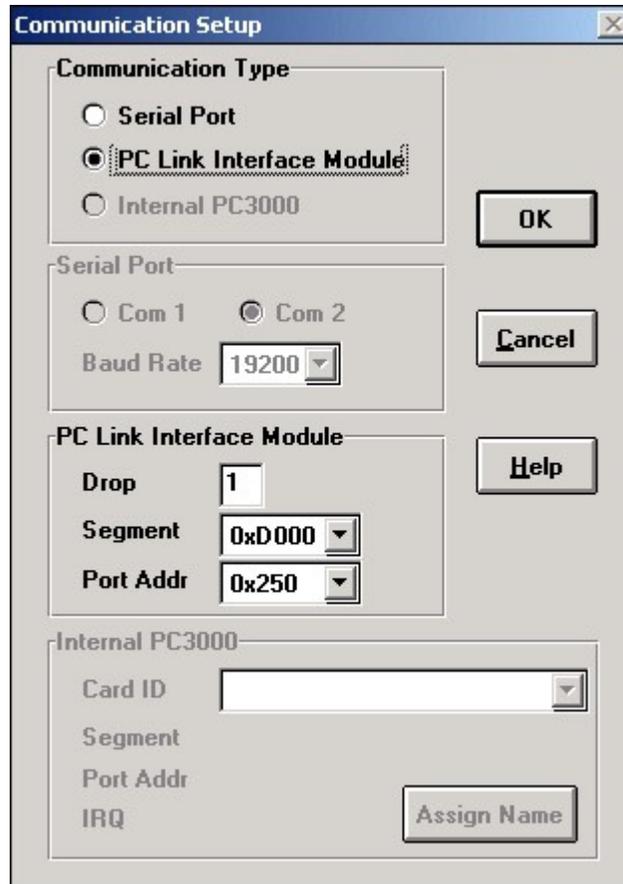

3. Set the *Communications Type* to PC Link Interface Module.
4. Set the *Drop* to match the AN-X3 drop number on DCS
5. Set the *Segment* to match the Memory Address in the VDD Configuration.
6. Set the *Port Addr* to match the Port Address in the VDD configuration.
7. Click *OK* to complete the configuration.

You should now be able to go online with the AutoMax Programming Executive.

Multiple Programmer Access

The AutoMax operating system uses the source of programming messages (direct connection to the serial port or drop number on DCSNet) to distinguish between programmers. It uses the identity of each programmer to manage levels of access (None, Data, Task) and to return requests for data to the programming devices. The AutoMax operating system controls the operations that programming device can perform, depending on their access level.

If multiple copies of the Programming Executive attempt to program an AutoMax through the same AN-X3-DCSNet, the AutoMax sees them as a single user since they are all connected using the drop number of the AN-X3-DCSNet.

This causes the following anomalous behavior in the programming devices:

- variables, I/O and ladder logic may be displayed incorrectly since the same data is sent to all devices connected to the same AN-X3-DCSNet
- each Programming Executive connected through the same AN-X3-DCSNet receives the same access level. If you change the access level on one, the AutoMax operating system changes to the same level on all of them. This defeats the built-in access management in the AutoMax.

Each copy of the Programming Executive should communicate with the AutoMax using a different AN-X3-DCSNet to ensure that the AutoMax operating system can properly detect them as separate copies of the Programming Executive. Multiple copies of the Programming Executive should NOT be connected through the same AN-X3-DCSNet. Each programmer should use a separate AN-X3.

Connecting to a Different AN-X3

If you have more than one AN-X3 on the Ethernet network, each connected to a different DCS network, to change the AN-X3 your programming software is using, run the Control Panel Applet (*Start/Control Panel/QTS PC Link Card Configuration*) and change the IP address in the *AN-X3 IP Address* field.

Exchanging Scheduled Data with a ControlLogix

Each scheduled connection with a ControlLogix contains up to 250 words of input data and up to 248 words of output data. In order to be able to exchange all DCSNet data, the AN-X-DCSNet module supports multiple scheduled connections with a ControlLogix processor over Ethernet.

The AN-X-DCSNet module behaves like a 17-slot ControlLogix rack with an ENBT/A module in slot 16 and generic modules in slots 0 to 15.

A ControlLogix processor can open scheduled connections to each of these 16 generic modules. Each scheduled connection consists of up to 248 words of output data from the ControlLogix processor to the AN-X and up to 250 word of input data from the AN-X to the ControlLogix processor.

Each connection can have its own RPI, from 1 to 750 ms.

In general, you should try to use as few connections as possible. There is significant overhead in opening and maintaining each connection.

You map DCSNet registers to these scheduled connections.

In addition, the AN-X module has diagnostic data that is mapped to ControlLogix slot 15 scheduled input data.

The mapping file can also contain options that apply to the entire configuration.

Configuring the AN-X in RSLogix 5000

The AN-X3-DCSNet emulates a 17-slot 1756 chassis with an ENBT/A in slot 16 and up to 16 generic modules in slots 0 to 15.

Connections to slots 0 to 14 are used for I/O data; the connection to slot 15 is reserved for diagnostic data (see page 27).

To configure the AN-X3-DCSNet in RSLogix 5000:

1. Right click on the ControlLogix Ethernet bridge module that will be communicating with the AN-X and select *Add Module*. Add a 1756-ENBT/A module.

The screenshot shows the 'New Module' dialog box with the following configuration:

- General Tab:**
 - Type: 1756-ENBT 1756 10/100 Mbps Ethernet Bridge, Twisted-Pair Media
 - Vendor: Allen-Bradley
 - Parent: LocEnBt
 - Name: AnxDcsMas
 - Description: (empty)
- Ethernet Address:**
 - Private Network: 192.168.1.
 - IP Address: 10 . 10 . 2 . 102
 - Host Name: (empty)
- Slot:** 16
- Module Definition:**
 - Revision: 1.1
 - Electronic Keying: Disable Keying
 - Rack Connection: None
 - Time Sync Connection: None
 - Chassis Size: 17

Buttons at the bottom: OK, Cancel, Help. Status: Creating.

Enter the *Name*. Use the host name you assigned to AN-X when you configured its IP properties. (see page 10)

Set the *Revision* to 1.

Set *Electronic Keying* to *Disable Keying*.

Set the *Rack Connection* to None.

Set the *Time Sync Connection* to None.

Set the chassis size to 17.

Set the Slot to 16.

Set the IP address to match the AN-X module.

Click OK to accept the module.

2. Add Generic modules for each required connection, at least slot 0 for data and usually slot 15 for diagnostics. Use *Automation Network/Configuration View* in the web interface to determine which connections are mapped. In RSLogix 5000,

right click on the backplane and select *New Module*. From the *Other* category, select 1756-MODULE and click OK.

The 'New Module' dialog box is shown with the following settings:

- Type: 1756-MODULE Generic 1756 Module
- Parent: AnxModMas
- Name: AnxSlot0
- Description: (empty text box)
- Comm Format: Data - INT
- Slot: 0
- Open Module Properties:

	Assembly Instance:	Size:	
Input:	1	250	(16-bit)
Output:	2	248	(16-bit)
Configuration:	4	0	(8-bit)
Status Input:			
Status Output:			


Buttons: OK, Cancel, Help

Set the *Name* and *Description* as desired.

Set the *Comm Format* to Data – INT.

Set the other parameters as shown. Set the Slot to 0 for connection 0, 1 for connection 1, and so on.

3. Set the RPI for each connection.

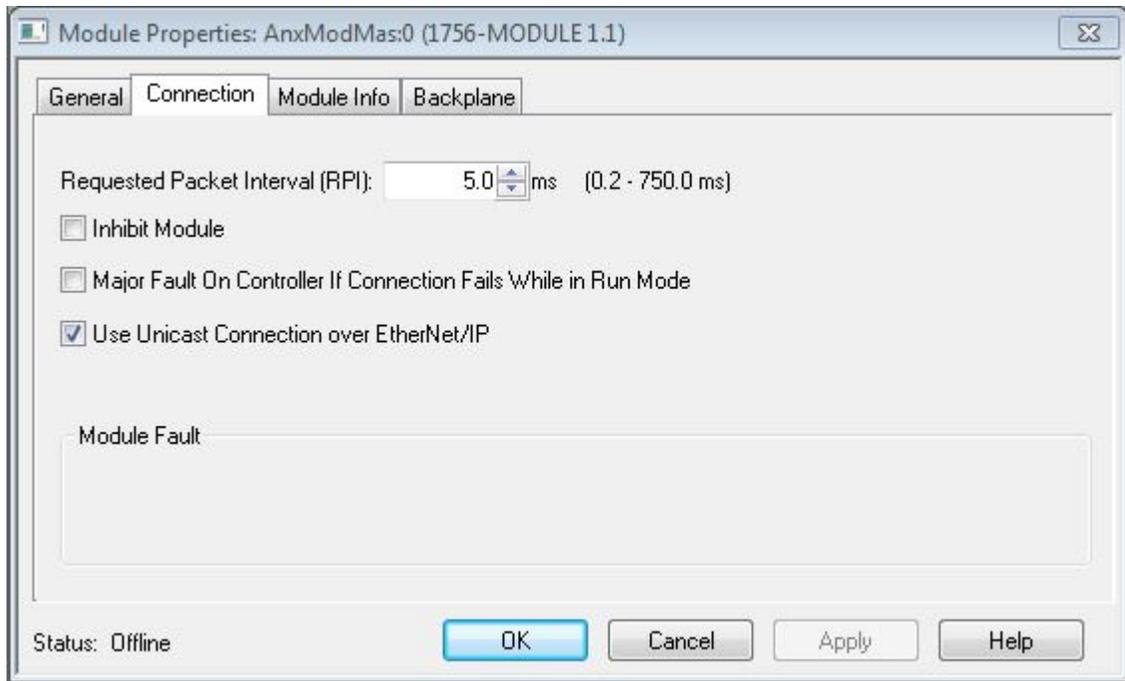

AN-X accepts RPIs from 1 to 750 ms.

Select an RPI appropriate to the remote I/O network scan time and to your application.

TIP

The AN-X-DCSNet supports Unicast connections from the ControlLogix.

TIP

Use the web interface of the ENBT module that connects to the AN-X to view the communication loading of the ENBT module.

Mapping the DCS Data

You define the DCS data that is exchanged between the AN-X3 and the ControlLogix processor in a text file, which can be created using a text editor.

Sample MAS and SLV are available from the web interface.

These sample configurations document the configuration keywords and format. *Automation Network/Configuration Sample*.

Sample DCS-SLV File

```

;-----
; QTS-AN-X-DCS-SLV Sample Configuration File
; Text after a semi-colon is a comment and is ignored

; They layout of the Slot 15 connection is shown at the end of this file

AnxDcsSlvCfgFile      ; Identifies this file as an AN-X-DCS-SLV Configuration file
ClxName AnxDcsSlv     ; Name of module in CLX - defaults to AN-X Hostname
;ClxPrefix ANX_       ; prefix to all module tagnames - useful for unique aliases for multiple AN-X modules
;ClearOnProgram       ; If the Ethernet/IP scanner is on Program Mode, all data sent on DCSNet will be zero

;-----
; This sample shows Maps the following:
; Monitored Drop 1 Depth 2 (1-2)
; Active Drop 10 Depth 2 (10-11) (This AN-X Module)
; Ethernet/IP Run/Idle Header is mapped so DCSNet devices can monitor
; Monitored Drop 40 Depth 1
; Monitored Drop 54 Depth 2 (54-55)
; Broadcast Registers 33-39
; Note that not all 32 registers need to be mapped, so many more drops
; may be mapped into a connection if just the necessary registers are chosen
; Broadcast Register 32 to Ethernet/IP Run/Idle
;
ClxSlot 0 DCS_1_11 ; Slot/Connection Number and optional Name
DataInput          ; Inputs to ControlLogix from DCSNet
;<Ofs>,Drop Reg Length <Ofs> optional - comma if not specified
  0 1 0 32         ; Master from Drop 1 Slave Registers 0-31
 32 1 32 32        ; Master to Drop 1 Slave Registers 32-63
 64 2 0 32         ; Master from Drop 2 Slave Registers 0-31
 96 2 32 32        ; Master to Drop 2 Slave Registers 32-63
128 10 32 32       ; Master to Drop 10 Slave Registers 32-63 (This AN-X module)
160 11 32 32       ; Master to Drop 11 Slave Registers 32-63 (This AN-X module)
192 0 32 8         ; Master Broadcast Registers 32-39

DataOutput          ; Outputs from ControlLogix to DCSNet
;<Ofs>,Drop Reg Length <Ofs> optional - comma if not specified
Run 10 0 1         ; Master from Drop 10 Slave Register 0
                   ; Ethernet/IP Run/Idle
  0 10 1 31        ; Master from Drop 10 Slave Registers 1-31 (This AN-X module)
 32 11 0 32        ; Master from Drop 11 Slave Registers 0-31 (This AN-X module)

ClxSlot 1 DCS_40_55 ; Slot/Connection Number and optional Name
DataInput          ; Inputs to ControlLogix from DCSNet
;<Ofs>,Drop Reg Length <Ofs> optional - comma if not specified
  0 40 0 32        ; Master from Drop 40 Slave Registers 0-31
 32 40 32 32       ; Master to Drop 40 Slave Registers 32-63
 64 54 0 32        ; Master from Drop 54 Slave Registers 0-31
 96 54 32 32       ; Master to Drop 54 Slave Registers 32-63
128 55 0 32        ; Master from Drop 55 Slave Registers 0-31
160 55 32 32       ; Master to Drop 55 Slave Registers 32-63
;-----

```

Sample DCS-MAS File

```

;-----
; QTS-AN-X-DCS-MAS Sample Configuration File
; Text after a semi-colon is a comment and is ignored

; They layout of the Slot 15 connection is shown at the end of this file

AnxDcsMasCfgFile      ; Identifies this file as an AN-X-DCS-MAS Configuration file
ClxName AnxDcsMas     ; Name of module in CLX - defaults to AN-X Hostname
;ClxPrefix ANX_      ; prefix to all module tagnames - useful for unique aliases for multiple AN-X modules
;ClearOnProgram      ; If the Ethernet/IP scanner is on Program Mode, all data sent on DCSNet will be zero

;-----
; This sample shows Maps the following:
; Broadcast Register 32 to Ethenet/IP Run/Idle
; Drop 1 Depth 2 (1-2)
; Drop 10 Depth 2 (10-11)
; Drop 40 Depth 1
; Drop 54 Depth 2 (54-55)
; Broadcast Registers 33-39
; Note that not all 32 registers need to be mapped, so many more drops
; may be mapped into a connection if just the necessary registers are chosen
;
ClxSlot 0 DCS_Data    ; Slot/Connection Number and optional Name
DataOutput            ; Outputs from ControlLogix to DCSNet
;<Ofs>,Drop Reg Length <Ofs> optional - comma if not specified
Run 0 32 1           ; Ethernet/IP Run/Idle value into This DCSNet Masters Broadcast Register 32
  0 1 32 32          ; This Master to Drop 1 Slave Registers 32-63
  32 2 32 32         ; This Master to Drop 2 Slave Registers 32-63
  64 10 32 32        ; This Master to Drop 10 Slave Registers 32-63
  96 11 32 32        ; This Master to Drop 11 Slave Registers 32-63
 128 40 32 32        ; This Master to Drop 40 Slave Registers 32-63
 160 54 32 32        ; This Master to Drop 54 Slave Registers 32-63
 192 55 32 32        ; This Master to Drop 55 Slave Registers 32-63
 224 0 33 7          ; This Master Broadcast Registers 33-39

DataInput             ; Inputs to ControlLogix from DCSNet
;<Ofs>,Drop Reg Length <Ofs> optional - comma if not specified
  0 1 0 32           ; This Master from Drop 1 Slave Registers 0-31
  32 2 0 32          ; This Master from Drop 2 Slave Registers 0-31
  64 10 0 32         ; This Master from Drop 10 Slave Registers 0-31
  96 11 0 32         ; This Master from Drop 11 Slave Registers 0-31
 128 40 0 32         ; This Master from Drop 40 Slave Registers 0-31
 160 54 0 32         ; This Master from Drop 54 Slave Registers 0-31
 192 55 0 32        ; This Master from Drop 55 Slave Registers 0-31
;-----

```

Sending the Configuration to AN-X3

To send the configuration to the AN-X:

1. Start your web browser
2. Enter the AN-X3 IP address as the address, for example, 192.168.0.10
3. Select *Automation Network/Configure Ethernet/IP*

4. Browse or type in the configuration file name
5. Click '*Send File to AN-X*'

The web interface displays the result of the upload, the Configuration File uploaded and the Configuration Log.

The configuration log shows any errors encountered, or a Success Message at the bottom.

Viewing the Current Configuration

To view the configuration in an AN-X3 module, access the AN-X3 using the web interface, and select *Automation Network/Configuration View*.

Use *Retrieve Current Configuration* to save the current configuration on the AN-X to your computer.

Ethernet/IP Log

Errors that occur during operation of Ethernet/IP scheduled data or unscheduled messaging are logged in the AN-X3.

You can view the log using the AN-X3 web interface. Select *Log Files/Ethernet/IP Log* to view the log.

ControlLogix Tags

When AN-X3-DCSNet Ethernet/IP scheduled connections are configured, it creates a csv file that can be imported into RSLogix 5000.

This csv file creates tag aliases for access to DCSNet data in the ControlLogix. The tags alias to I/O tree using the name defined by 'ClxName' in the configuration file, which defaults to the hostname of the AN-X module.

To retrieve the alias csv file, select *Automation Network/ Configuration View* then *Logix Aliases*.

There are two sets of tag files, one for exclusive owner connections and one for input only connections.

To import the tags into RSLogix 5000, you must be offline. Select *Tools/Iport Tags* and import the tag file.

Diagnostic Data – Connection 15

```

;-----
; Slot 15 Diagnostics Connection Data Layout
; DataOutput
; 0 "AnxAmxDcs Zero Diagnostic Counters on bit 0 transition to 1"
; DataInput
; 4 "AnxAmxDcs Drop List 0-15"
; 5 "AnxAmxDcs Drop List 16-31"
; 6 "AnxAmxDcs Drop List 32-47"
; 7 "AnxAmxDcs Drop List 48-55"
;
; 8 "AnxAmxDcs Ethernet/IP Slot Connection Status"
; 10 "AnxAmxDcs Rx Protocol Errors/Type"

```

```
; 11 "AnxAmxDcs Rx Noise Errors/Type"
; 12 "AnxAmxDcs Drop Number/Type"
; 14 "AnxAmxDcs Rx Frames Good"
; 15 "AnxAmxDcs Rx Timeout Errors"
; 16 "AnxAmxDcs Rx CRC Error"
; 17 "AnxAmxDcs Rx Overrun Errors"
; 18 "AnxAmxDcs Rx Abort Errors"
; 19 "AnxAmxDcs Tx Frames"
; 20 "AnxAmxDcs Drop Depth/Type"
;
; 24 "AnxAmxDcs Primary Drop List 0-15"
; 25 "AnxAmxDcs Primary Drop List 16-31"
; 26 "AnxAmxDcs Primary Drop List 32-47"
; 27 "AnxAmxDcs Primary Drop List 48-55"
;
; 35 "AnxAmxDcs UDP TX Count"
; 36 "AnxAmxDcs UDP RX Count"
; 37 "AnxAmxDcs UDP EthErr Ctr(Lo) Typ(Hi) "
; 38 "AnxAmxDcs UDP PrtErr Ctr(Lo) Typ/Slr(Hi) "
;
; 40 "AnxAmxDcs CLX -> AN-X Slot 0 Upd Time (*100us, Avg)"
; 42 "AnxAmxDcs CLX -> AN-X Slot 0 Upd Time (*100us, Min)"
; 44 "AnxAmxDcs CLX -> AN-X Slot 0 Upd Time (*100us, Max)"
;
; 50 "AnxAmxDcs CLX -> AN-X Slot 1 Upd Time (*100us, Avg)"
; 52 "AnxAmxDcs CLX -> AN-X Slot 1 Upd Time (*100us, Min)"
; 54 "AnxAmxDcs CLX -> AN-X Slot 1 Upd Time (*100us, Max)"
;
; 60 "AnxAmxDcs CLX -> AN-X Slot 2 Upd Time (*100us, Avg)"
; 62 "AnxAmxDcs CLX -> AN-X Slot 2 Upd Time (*100us, Min)"
; 64 "AnxAmxDcs CLX -> AN-X Slot 2 Upd Time (*100us, Max)"
;
; 70 "AnxAmxDcs CLX -> AN-X Slot 3 Upd Time (*100us, Avg)"
; 72 "AnxAmxDcs CLX -> AN-X Slot 3 Upd Time (*100us, Min)"
; 74 "AnxAmxDcs CLX -> AN-X Slot 3 Upd Time (*100us, Max)"
;
; 80 "AnxAmxDcs CLX -> AN-X Slot 4 Upd Time (*100us, Avg)"
; 82 "AnxAmxDcs CLX -> AN-X Slot 4 Upd Time (*100us, Min)"
; 84 "AnxAmxDcs CLX -> AN-X Slot 4 Upd Time (*100us, Max)"
;
; 90 "AnxAmxDcs CLX -> AN-X Slot 5 Upd Time (*100us, Avg)"
; 92 "AnxAmxDcs CLX -> AN-X Slot 5 Upd Time (*100us, Min)"
; 94 "AnxAmxDcs CLX -> AN-X Slot 5 Upd Time (*100us, Max)"
;
; 100 "AnxAmxDcs CLX -> AN-X Slot 6 Upd Time (*100us, Avg)"
; 102 "AnxAmxDcs CLX -> AN-X Slot 6 Upd Time (*100us, Min)"
; 104 "AnxAmxDcs CLX -> AN-X Slot 6 Upd Time (*100us, Max)"
;
; 110 "AnxAmxDcs CLX -> AN-X Slot 7 Upd Time (*100us, Avg)"
; 112 "AnxAmxDcs CLX -> AN-X Slot 7 Upd Time (*100us, Min)"
; 114 "AnxAmxDcs CLX -> AN-X Slot 7 Upd Time (*100us, Max)"
;
; 120 "AnxAmxDcs CLX -> AN-X Slot 8 Upd Time (*100us, Avg)"
; 122 "AnxAmxDcs CLX -> AN-X Slot 8 Upd Time (*100us, Min)"
; 124 "AnxAmxDcs CLX -> AN-X Slot 8 Upd Time (*100us, Max)"
;
; 130 "AnxAmxDcs CLX -> AN-X Slot 9 Upd Time (*100us, Avg)"
; 132 "AnxAmxDcs CLX -> AN-X Slot 9 Upd Time (*100us, Min)"
; 134 "AnxAmxDcs CLX -> AN-X Slot 9 Upd Time (*100us, Max)"
;
; 140 "AnxAmxDcs CLX -> AN-X Slot 10 Upd Time (*100us, Avg)"
; 142 "AnxAmxDcs CLX -> AN-X Slot 10 Upd Time (*100us, Min)"
; 144 "AnxAmxDcs CLX -> AN-X Slot 10 Upd Time (*100us, Max)"
;
; 150 "AnxAmxDcs CLX -> AN-X Slot 11 Upd Time (*100us, Avg)"
; 152 "AnxAmxDcs CLX -> AN-X Slot 11 Upd Time (*100us, Min)"
; 154 "AnxAmxDcs CLX -> AN-X Slot 11 Upd Time (*100us, Max)"
;
; 160 "AnxAmxDcs CLX -> AN-X Slot 12 Upd Time (*100us, Avg)"
; 162 "AnxAmxDcs CLX -> AN-X Slot 12 Upd Time (*100us, Min)"
; 164 "AnxAmxDcs CLX -> AN-X Slot 12 Upd Time (*100us, Max)"
```

```
;
; 170 "AnxAmxDcs CLX -> AN-X Slot 13 Upd Time (*100us, Avg)"
; 172 "AnxAmxDcs CLX -> AN-X Slot 13 Upd Time (*100us, Min)"
; 174 "AnxAmxDcs CLX -> AN-X Slot 13 Upd Time (*100us, Max)"
;
; 180 "AnxAmxDcs CLX -> AN-X Slot 14 Upd Time (*100us, Avg)"
; 182 "AnxAmxDcs CLX -> AN-X Slot 14 Upd Time (*100us, Min)"
; 184 "AnxAmxDcs CLX -> AN-X Slot 14 Upd Time (*100us, Max)"
;
; 190 "AnxAmxDcs CLX -> AN-X Slot 15 Upd Time (*100us, Avg)"
; 192 "AnxAmxDcs CLX -> AN-X Slot 15 Upd Time (*100us, Min)"
; 194 "AnxAmxDcs CLX -> AN-X Slot 15 Upd Time (*100us, Max)"
;-----
```

AN-X to AN-X Communication

The AN-X3-DCSNet module does not support AN-X to AN-X communication.

Ethernet PLC-5 File Emulation

You can use a DDE or OPC server, such as RSLinx, or an Allen-Bradley PLC etc. to access DCS data registers directly on the AN-X3-DCSNet. The module "emulates" PLC-5 integer files N100 to N155. Each file corresponds to a DCS drop. For example, if you access N102:32 this corresponds to Drop 2 Register 32.

The AN-X3-DCSNet supports Word Range read/write, Typed read/write, Read/Modify/Write, and PLC-3 Bit Write messages, with both logical ASCII and logical binary addressing.


To configure a topic in RSLinx to access data on the AN-X3-DCSNet:

1. Create a new topic. From the main menu select *DDE/OPC/Topic Configuration*. Click *New* and give the topic a name.
2. For the Data source, browse the path to the AN-X3 module and click *Apply*.
3. On the *Data Collection* tab, set the *Processor Type* to *PLC-5*. Check *Polled Messages* and select an appropriate update rate. Leave everything else unchecked. Click *Apply*.
4. You do not need to set anything on the *Advanced Communication* tab.
5. Click *Done* to complete the topic configuration.

You can now access data using any DDE or OPC client capable of communicating with RSLinx.

Using RSLinx to View Data

AN-X3 appears to RSLinx to be an Ethernet PLC-5, specifically a PLC-5/20E.

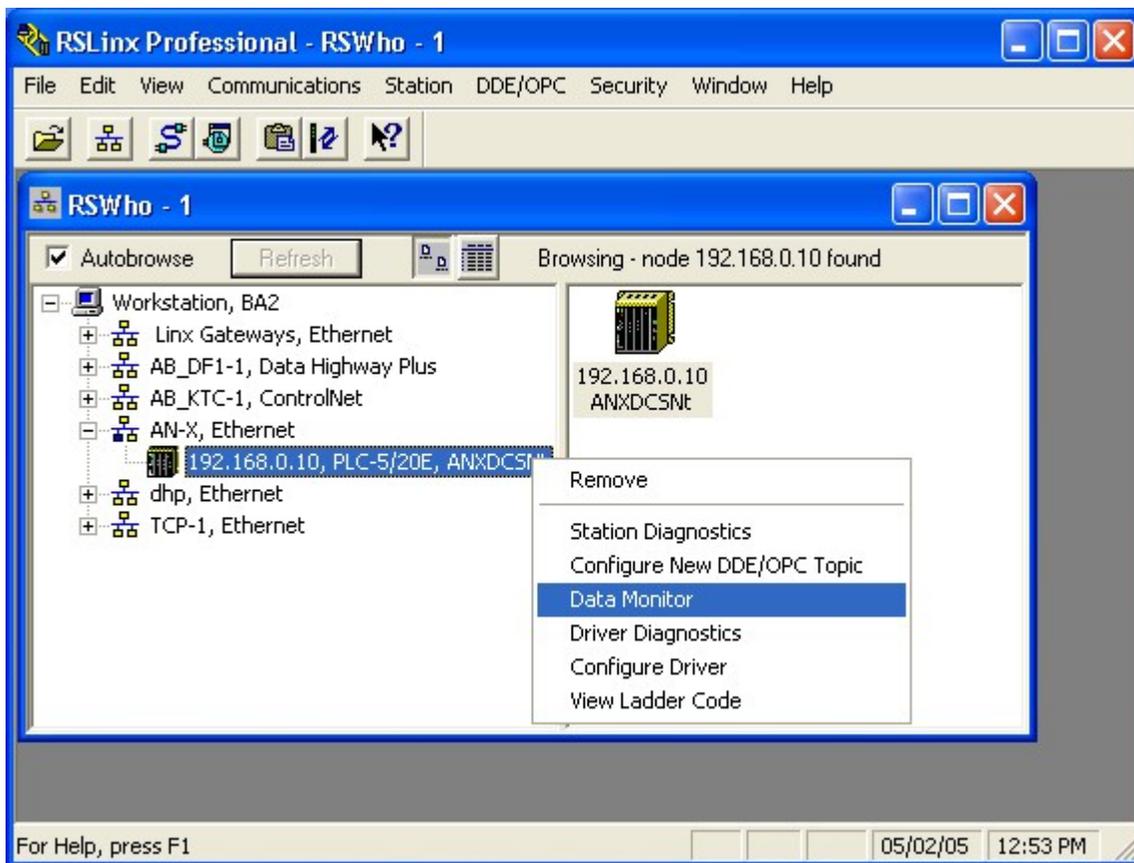

First create an Ethernet driver to communicate with the AN-X3.

If you right click on the AN-X3 module in RSLinx and select Data Monitor, a list of files appears.

File	Type	Elements	Length
N100	Integer	64	128
N101	Integer	64	128
N102	Integer	64	128
N103	Integer	64	128
N104	Integer	64	128
N105	Integer	64	128
N106	Integer	64	128
N107	Integer	64	128
N108	Integer	64	128
N109	Integer	64	128
N110	Integer	64	128
N111	Integer	64	128
N112	Integer	64	128
N113	Integer	64	128
N114	Integer	64	128
N115	Integer	64	128
N116	Integer	64	128
N117	Integer	64	128
N118	Integer	64	128

Found 156 of 156

Each file corresponds to the data for one DCS drop. File N100 corresponds to drop 0, N101 corresponds to drop 1 and so on.

To view the drop data, double click on the appropriate file.

	0	1	2	3	4	5	6	7	8	9
N100:0	0	0	0	0	-1	-1	-1	255	0	0
N100:10	0	0	1	0	-26131	0	0	0	0	-22126
N100:20	55	0	0	0	0	0	0	0	0	0
N100:30	0	0	423	0	0	0	0	0	0	0
N100:40	0	0	0	0	0	0	0	0	0	0
N100:50	0	0	0	0	0	0	95	122	103	211
N100:60	89	105	100	301						

Status: Active Selection: N100:0

To change the display format, right click on the data display and select *Properties*, then select the format you want.

Troubleshooting

LEDs

The AN-X3-DCSNet has LEDs that indicate the state of the Ethernet connection, the overall module state and the connection to the remote I/O network.

Ethernet LEDs

There are two LEDs that indicate the state of the Ethernet connection.

The upper, yellow LED, labelled 100, is on if the link is running at 100 Mbits/second and is off otherwise.

The lower green Link/Act LED is off if the link is inactive and is on if the link is active. If activity is detected, the link blinks at 30 ms intervals and continues blinking as long as activity is present.

If the AN-X3 is not connected to Ethernet, the 10/100 LED is on.

SYS LED

The SYS is used by the AN-X operating system and software to indicate the state of operations and errors. Errors or status indication in boot mode cause the LED to flash yellow. Otherwise, the LED flashes red.

The SYS should be used in conjunction with the logs to locate the cause of problems.

In the following, red 3 means three red flashes followed by a pause, and so on.

SYS LED State	Possible cause
Red 3	DHCP configuration failed
Yellow 2	microSD card not present
Yellow 3	AN-X3 Maintenance firmware file not found on microSD card
Yellow 4	config.txt file not found on microSD card or error parsing file
Yellow 5	Production firmware filename was not specified in config.txt
Yellow 6	AN-X3 production firmware file not found on microSD card
Yellow 7	Production firmware file invalid or error programming to flash
Yellow 8	Daughterboard mismatch
Yellow 9	Error processing option file or file not found
Yellow 10	Option file mismatch
Flashing red/green	Unscheduled messaging, addressing or connection problem

SYS LED State	Possible cause
Flashing red/off	Configuration file problem

“Railroading” – SYS and NET LEDs

AN-X3 alternates (railroads) flashing the SYS and NET LEDs to indicate its state.

It railroads the LEDs red while it is copying new maintenance firmware files from the microSD card to flash memory.

It railroads the LEDs yellow while it is copying new production firmware files from the microSD card to flash memory.

It railroads the LEDs green for 15 to 20 seconds as it starts production mode.

SYS and NET LEDs: Runtime

SYS

The SYS is used by the AN-X operating system and software to indicate the state of operations and errors.

The SYS should be used in conjunction with the logs to locate the cause of problems.

SYS LED State	Possible cause
Flashing red/green	Unscheduled messaging, addressing or connection problem
Flashing red/off	Configuration file problem
Flashing green/off	Not all required connections open

NET LED – Network Status

The NET LED indicates the status of the DCS network connection.

DCS Master

All drops operating correctly	Solid green
No other drops	Yellow
Network error	Flashes red

DCS Slave

All drops operating correctly	Solid green
No other drops	Solid red

Network error	Flashes red
---------------	-------------

Fatal Errors

AN-X3 monitors its operation for “unrecoverable” conditions and generates a fatal error if it detects one. It generates a fatal error code on the SYS LED by flashing 8 bits followed by a pause. The least significant bit is first, with green for 1 and red for 0.

If a fatal error occurs, record the SYS sequence and contact technical support.

Updating the Firmware

The AN-X3 operating software consists of the maintenance firmware and the runtime firmware.

The maintenance firmware runs at startup. It performs diagnostics, updates any firmware that has been transferred to the AN-X, and starts the runtime firmware.

The firmware files are supplied in files that begin with AN-X3 and have extension *qtf*. They are updated using the web interface. Run the command *Administration/AN-X Firmware Update* and select the file you wish to transfer.

WARNING!

Do not update firmware on the AN-X while applications that use the AN-X are running.

The web page displays the update progress at the bottom left of the page.

You must restart the AN-X3 to run the firmware that you transferred.

WARNING!

It is essential that you do not disrupt power while updating firmware, especially maintenance firmware, to the AN-X3 or while the AN-X3 is restarting following a firmware update.

Interrupting power at some points in the update process could render the AN-X inoperative and it would have to be returned to the factory for reinitialization.

The web interface displays the version of the firmware the AN-X3 is running on the home page and on the tab at the top of the page.

You can also update the firmware by copying *qtf* files to the microSD card from a computer. If you do, make sure that there is only one version of each *qtf* file on the microSD card, the one you want AN-X to use.

Obtaining the Latest Software

Version numbers and software for the most recent AN-X3 releases are available from the QTS website, qtsusa.com/dist

Specifications

Parameter	Specification
Function	Bridge between Ethernet and Reliance AutoMax DCSNet network
Maximum Power Consumption	300 mA @ 12 VDC or 150 mA @ 24 VDC
Maximum Power dissipation	3.6W
Environmental Conditions:	
Operational Temperature	0-50°C (32-122°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Relative Humidity	5-95% without condensation

Support

How to Contact Us: Sales and Support

Sales and Technical Support for this product are provided by ProSoft Technology. Contact our worldwide Sales or Technical Support teams directly by phone or email:

Asia Pacific

Languages Spoken: Chinese, English

[+603.7724.2080](tel:+603.7724.2080), support.AP@prosoft-technology.com

Europe – Middle East – Africa

Languages Spoken: French, English

[+33 \(0\) 5.34.36.87.20](tel:+33(0)5.34.36.87.20), support.EMEA@prosoft-technology.com

North America

Languages Spoken: English, Spanish

[+1.661.716.5100](tel:+1.661.716.5100), support@prosoft-technology.com

Latin America (Brasil)

Languages Spoken: Portuguese, English

[+55.11.5083.3776](tel:+55.11.5083.3776), support.brazil@prosoft-technology.com

Latin America (Spanish Speaking Countries)

Languages Spoken: Spanish, English

[+52.222.399.6565](tel:+52.222.399.6565), latinam@prosoft-technology.com

Warranty

Quest Technical Solutions warrants its products to be free from defects in workmanship or material under normal use and service for three years after date of shipment. Quest Technical Solutions will repair or replace without charge any equipment found to be defective during the warranty period. Final determination of the nature and responsibility for defective or damaged equipment will be made by Quest Technical Solutions personnel.

All warranties hereunder are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without Quest Technical Solutions approval or which have been subjected to accident, improper maintenance, installation or application, or on which original identification marks have been removed or altered. This Limited Warranty also will not apply to interconnecting cables or wires, consumables nor to any damage resulting from battery leakage.

In all cases Quest Technical Solutions' responsibility and liability under this warranty shall be limited to the cost of the equipment. The purchaser must obtain shipping instructions for the prepaid return of any item under this Warranty provision and compliance with such instruction shall be a condition of this warranty.

Except for the express warranty stated above Quest Technical Solutions disclaims all warranties with regard to the products sold hereunder including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of Quest Technical Solutions for damages including, but not limited to, consequential damages arising out of/or in connection with the use or performance of the Product.