Question:

Is there a way to enable/disable the logging feature in ArchestrA Logger (SMC-> PC56-OPC)?


Answer:

You can enable/disable the logging feature in ArchestrA Logger and control the logging features by following the below steps:

Below are few screen shots of the SMC on PC56-OPC:

Under Log View-> Default Group -> Local

Right click on Local icon -> then click on "Configure"

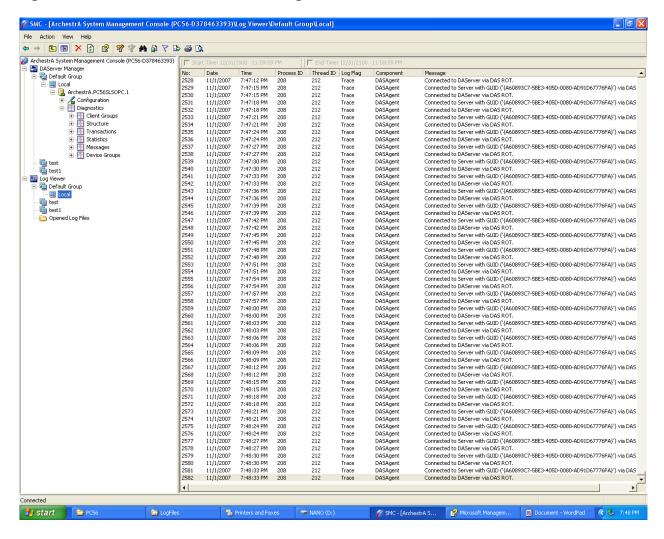

Click on the "Storage" tab. It is possible to disable the logging feature by un-clicking on the "Enable Logging" or adjust by using "Delete log messages older than ... " and

"Limit the total diskspace used for storing log messages to " parameters to adjust the storage capacity.

