



Where Automation Connects.



**inRAX<sup>®</sup>**  
**MVI46-PDPMV1**  
SLC Platform  
PROFIBUS DPV1 Master

March 25, 2011

**USER MANUAL**

## **Your Feedback Please**

We always want you to feel that you made the right decision to use our products. If you have suggestions, comments, compliments or complaints about our products, documentation, or support, please write or call us.

## **How to Contact Us**

### **ProSoft Technology**

5201 Truxtun Ave., 3rd Floor

Bakersfield, CA 93309

+1 (661) 716-5100

+1 (661) 716-5101 (Fax)

[www.prosoft-technology.com](http://www.prosoft-technology.com)

[support@prosoft-technology.com](mailto:support@prosoft-technology.com)

**Copyright © 2011 ProSoft Technology, Inc., all rights reserved.**

MVI46-PDPMV1 User Manual

March 25, 2011

ProSoft Technology<sup>®</sup>, ProLinx<sup>®</sup>, inRAx<sup>®</sup>, ProTalk<sup>®</sup>, and RadioLinx<sup>®</sup> are Registered Trademarks of ProSoft Technology, Inc. All other brand or product names are or may be trademarks of, and are used to identify products and services of, their respective owners.

## **ProSoft Technology<sup>®</sup> Product Documentation**

In an effort to conserve paper, ProSoft Technology no longer includes printed manuals with our product shipments. User Manuals, Datasheets, Sample Ladder Files, and Configuration Files are provided on the enclosed CD-ROM in Adobe<sup>®</sup> Acrobat Reader file format (.PDFs). These product documentation files may also be freely downloaded from our web site: [www.prosoft-technology.com](http://www.prosoft-technology.com)

## Important Installation Instructions

Power, Input, and Output (I/O) wiring must be in accordance with Class I, Division 2 wiring methods, Article 501-4 (b) of the National Electrical Code, NFPA 70 for installation in the U.S., or as specified in Section 18-1J2 of the Canadian Electrical Code for installations in Canada, and in accordance with the authority having jurisdiction. The following warnings must be heeded:

**WARNING** - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIV. 2;

**WARNING** - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES

**WARNING** - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.  
THIS DEVICE SHALL BE POWERED BY CLASS 2 OUTPUTS ONLY.

## MVI (Multi Vendor Interface) Modules

**WARNING** - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.

**AVERTISSEMENT** - RISQUE D'EXPLOSION - AVANT DE DÉCONNECTER L'ÉQUIPEMENT, COUPER LE COURANT OU S'ASSURER QUE L'EMPLACEMENT EST DÉSIGNÉ NON DANGEREUX.

## Warnings

### North America Warnings

- A** Warning - Explosion Hazard - Substitution of components may impair suitability for Class I, Division 2.
- B** Warning - Explosion Hazard - When in Hazardous Locations, turn off power before replacing or rewiring modules.  
Warning - Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known to be nonhazardous.
- C** Suitable for use in Class I, division 2 Groups A, B, C and D Hazardous Locations or Non-Hazardous Locations.

### ATEX Warnings and Conditions of Safe Usage:

Power, Input, and Output (I/O) wiring must be in accordance with the authority having jurisdiction

- A** Warning - Explosion Hazard - When in hazardous locations, turn off power before replacing or wiring modules.
- B** Warning - Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.
- C** These products are intended to be mounted in an IP54 enclosure. The devices shall provide external means to prevent the rated voltage being exceeded by transient disturbances of more than 40%. This device must be used only with ATEX certified backplanes.
- D** DO NOT OPEN WHEN ENERGIZED.

**Warning: This module is not hot-swappable!** Always remove power from the rack before inserting or removing this module, or damage may result to the module, the processor, or other connected devices.

## Battery Life Advisory

The MVI46, MVI56, MVI56E, MVI69, and MVI71 modules use a rechargeable Lithium Vanadium Pentoxide battery to backup the real-time clock and CMOS. The battery should last for the life of the module. The module must be powered for approximately twenty hours before the battery becomes fully charged. After it is fully charged, the battery provides backup power for the CMOS setup and the real-time clock for approximately 21 days. When the battery is fully discharged, the module will revert to the default BIOS and clock settings.

**Note:** The battery is not user replaceable.

## Markings

### Electrical Ratings

- Backplane Current Load: 800 mA @ 5 Vdc
- Operating Temperature: 0°C to 60°C (32°F to 140°F)
- Storage Temperature: -40°C to 85°C (-40°F to 185°F)
- Shock: 30 g operational, 50 g non-operational; Vibration: 5 g from 10 Hz to 150 Hz
- Relative Humidity 5% to 95% (with no condensation)
- All phase conductor sizes must be at least 1.3 mm(squared) and all earth ground conductors must be at least 4mm(squared).

### Agency Approvals and Certifications

Agency	Applicable Standards
CSA	61010
CB Safety	CA/10533/CSA IEC 61010-1 Ed. 2 CB 243333-2056722 (2090408)



243333

# Contents

Your Feedback Please .....	2
How to Contact Us .....	2
ProSoft Technology® Product Documentation .....	2
Important Installation Instructions .....	3
MVI (Multi Vendor Interface) Modules .....	3
Warnings .....	3
Battery Life Advisory .....	3
Markings.....	4

## Guide to the MVI46-PDPMV1 User Manual 9

### 1 Start Here 11

1.1	System Requirements .....	12
1.2	Package Contents .....	13
1.3	Installing ProSoft Configuration Builder Software .....	14
1.4	Setting Jumpers .....	15
1.5	Installing the Module in the Rack .....	16
1.6	Connecting Your PC to the Processor .....	18
1.7	Downloading the Sample Program to the Processor .....	19
1.7.1	Configuring the RSLinx Driver for the PC COM Port .....	20
1.8	Connecting Your PC to the Module.....	22

### 2 Configuring the MVI46-PDPMV1 Module 23

2.1	Setting Up the Project .....	24
2.2	Setting Module Parameters.....	26
2.2.1	Input Data Size .....	27
2.2.2	Output Data Size .....	27
2.2.3	Input Byte Swap .....	28
2.2.4	Output Byte Swap .....	28
2.3	Configuring the PROFIBUS Master .....	29
2.3.1	Installing the GSD Files.....	30
2.3.2	Configuring the PROFIBUS Slaves.....	31
2.3.3	Calculating the Checksums.....	45
2.3.4	Printing the Processor Network Memory Map.....	45
2.3.5	Downloading the Project to the Module Using a Serial COM Port.....	47
2.3.6	Backing Up the Project.....	48
2.4	Verifying Correct Operation.....	50
2.4.1	Checking the PROFIBUS LEDs on the MVI46-PDPMV1 .....	50
2.4.2	Viewing the Online Status of the PROFIBUS Network .....	51
2.4.3	Viewing the Fieldbus Data from the MVI46-PDPMV1's Configuration/Debug Menu.....	53
2.4.4	Viewing the Data Files in RSLogix 500 .....	56
2.4.5	Sending a Mailbox Message in RSLogix 500 .....	58

### 3 Ladder Logic 59

3.1	Adding the Module to an Existing Project .....	60
-----	--	----

<b>4</b>	<b>Mailbox Messaging</b>	<b>63</b>
4.1	Mailbox Message Queuing .....	64
4.1.1	Queue Timeouts .....	64
4.2	Special Function Mailbox Messaging Commands .....	65
4.2.1	Mailbox Message: Set Slave Mode .....	66
4.2.2	Mailbox Message: Get Slave Diagnostics .....	69
4.2.3	Mailbox Message: Get Slave Configuration .....	72
4.2.4	Mailbox Message: Set Slave Address .....	73
4.2.5	Mailbox Message: Get Live List .....	76
4.2.6	Mailbox Message: Acyclic Data Read: Class 1 .....	77
4.2.7	Mailbox Message: Acyclic Data Write: Class 1 .....	79
4.2.8	Mailbox Message: Alarm Indication .....	81
4.2.9	Mailbox Message: Set Operating Mode .....	83
4.2.10	Mailbox Message: Start Slave .....	85
4.2.11	Mailbox Message: Stop Slave .....	87
4.3	Receiving Mailbox Message Responses from the Module .....	89
4.4	Mailbox Messaging Error Codes .....	90
4.4.1	Acyclic Message Status Word .....	90
4.4.2	Return Codes .....	91
4.4.3	Error Codes .....	92
4.4.4	DP-V1 Error Codes .....	93
<b>5</b>	<b>Diagnostics and Troubleshooting</b>	<b>95</b>
5.1	Basic Troubleshooting Steps .....	96
5.2	LED Status Indicators: Front of MVI46 Module .....	97
5.3	Module Faceplate Status Indicators .....	98
5.4	PROFIBUS Master Indicators .....	99
5.4.1	Examples .....	100
5.5	Using ProSoft Configuration Builder (PCB) for Diagnostics .....	102
5.5.1	Using the Diagnostic Window in ProSoft Configuration Builder .....	102
5.5.2	Navigation .....	104
5.5.3	Main Menu .....	105
5.6	Standard PROFIBUS Slave Diagnostic Bytes .....	108
5.6.1	Byte 0 - Station Status 1 Bits .....	108
5.6.2	Byte 1 - Station Status 2 Bits .....	108
5.6.3	Byte 2 - Station Status 3 Bits .....	109
5.6.4	Byte 3 - Master Address .....	109
5.6.5	Byte 4 - Ident Number High .....	109
5.6.6	Byte 5 - Ident Number Low .....	109
<b>6</b>	<b>Reference</b>	<b>111</b>
6.1	Product Specifications .....	112
6.1.1	General Specifications .....	112
6.1.2	Hardware Specifications .....	112
6.1.3	Functional Specifications .....	113
6.2	Functional Overview .....	114
6.2.1	About the PROFIBUS Protocol .....	114
6.2.2	Backplane Data Transfer .....	115
6.2.3	PROFIBUS DP Architecture .....	120
6.2.4	Communication Types .....	121

---

6.2.5	Master/Slave Communication Phases .....	121
6.3	PROFIBUS comDTM .....	122
6.3.1	ProSoft Technology Product Availability .....	122
6.3.2	Introduction to PROFIBUS comDTM .....	123
6.3.3	System Requirements .....	126
6.3.4	Installation .....	127
6.3.5	Quick Start.....	128
6.3.6	Verifying the comDTM Version and comDTM Install Version .....	135
6.4	Disabling the RSLinx Driver for the Com Port on the PC.....	140
6.5	RS-232 Configuration/Debug Port .....	142
6.6	DB9 to RJ45 Adaptor (Cable 14) .....	143
6.7	PROFIBUS Master Port .....	144
6.8	Supported PROFIBUS Services .....	145
6.9	Constructing a Bus Cable for PROFIBUS DP .....	146

---

**7 Support, Service & Warranty 151**

---

	Contacting Technical Support.....	151
7.1	Return Material Authorization (RMA) Policies and Conditions.....	153
7.1.1	Returning Any Product .....	153
7.1.2	Returning Units Under Warranty .....	154
7.1.3	Returning Units Out of Warranty .....	154
7.2	LIMITED WARRANTY.....	155
7.2.1	What Is Covered By This Warranty .....	155
7.2.2	What Is Not Covered By This Warranty .....	156
7.2.3	Disclaimer Regarding High Risk Activities .....	156
7.2.4	Intellectual Property Indemnity .....	157
7.2.5	Disclaimer of all Other Warranties .....	157
7.2.6	Limitation of Remedies ** .....	158
7.2.7	Time Limit for Bringing Suit .....	158
7.2.8	No Other Warranties .....	158
7.2.9	Allocation of Risks.....	158
7.2.10	Controlling Law and Severability.....	158

---

**Index 159**



## Guide to the MVI46-PDPMV1 User Manual

Function		Section to Read	Details
Introduction (Must Do)	→	Start Here (page 11)	This section introduces the customer to the module. Included are: package contents, system requirements, hardware installation, and basic configuration.
Diagnostic and Troubleshooting	→	Diagnostics and Troubleshooting (page 95)	This section describes Diagnostic and Troubleshooting procedures.
Reference Product Specifications	→	Reference (page 111) Product Specifications (page 112)	These sections contain general references associated with this product and its Specifications..
Support, Service, and Warranty Index	→	Support, Service and Warranty (page 151) Index	This section contains Support, Service and Warranty information. Index of chapters.



# 1 Start Here

## In This Chapter

❖ System Requirements .....	12
❖ Package Contents .....	13
❖ Installing ProSoft Configuration Builder Software.....	14
❖ Setting Jumpers .....	15
❖ Installing the Module in the Rack.....	16
❖ Connecting Your PC to the Processor.....	18
❖ Downloading the Sample Program to the Processor .....	19
❖ Connecting Your PC to the Module .....	22

To get the most benefit from this User Manual, you should have the following skills:

- **Rockwell Automation® RSLogix™ software:** launch the program, configure ladder logic, and transfer the ladder logic to the processor
- **Microsoft Windows:** install and launch programs, execute menu commands, navigate dialog boxes, and enter data
- **Hardware installation and wiring:** install the module, and safely connect PROFIBUS DPV1 and SLC devices to a power source and to the MVI46-PDPMV1 module's application port(s)

## 1.1 System Requirements

The MVI46-PDPMV1 module requires the following minimum hardware and software components:

- Rockwell Automation SLC 5/02 M0/M1 capable processors (or newer), with compatible power supply and one free slot in the rack, for the MVI46-PDPMV1 module. The module requires 800mA of available power.
- Rockwell Automation RSLogix 500 programming software.
- Rockwell Automation RSLinx communication software
- Pentium® II 500 MHz minimum. Pentium III 733 MHz (or better) recommended
- Supported operating systems:
  - Microsoft® Windows 98
  - Windows NT® (version 4 with SP4 or higher)
  - Windows 2000
  - Windows XP
- 32 Mbytes of RAM minimum, 64 Mbytes of RAM recommended
- 50 Mbytes of free hard disk space (or more based on application requirements)
- 16-color VGA graphics adapter, 640 x 480 minimum resolution (256 Color 800 × 600 recommended)
- CD-ROM drive

## 1.2 Package Contents

The following components are included with your MVI46-PDPMV1 module, and are all required for installation and configuration.

**Important:** Before beginning the installation, please verify that all of the following items are present.

Qty.	Part Name	Part Number	Part Description
1	MVI46-PDPMV1 Module	MVI46-PDPMV1	PROFIBUS DPV1 Master
1	Cable	Cable #15, RS232 Null Modem	For RS232 Connection to the CFG Port
1	Cable	Cable #14, RJ45 to DB9 Male Adapter cable	For DB9 Connection to Module's Port

If any of these components are missing, please contact ProSoft Technology Support for replacement parts.

### 1.3 Installing ProSoft Configuration Builder Software

You must install the *ProSoft Configuration Builder (PCB)* software to configure the module. You can always get the newest version of *ProSoft Configuration Builder* from the ProSoft Technology website.

#### **To install ProSoft Configuration Builder from the ProSoft Technology website**

- 1 Open your web browser and navigate to <http://www.prosoft-technology.com/pcb>
- 2 Click the **DOWNLOAD HERE** link to download the latest version of *ProSoft Configuration Builder*.
- 3 Choose **SAVE** or **SAVE FILE** when prompted.
- 4 Save the file to your *Windows Desktop*, so that you can find it easily when you have finished downloading.
- 5 When the download is complete, locate and open the file, and then follow the instructions on your screen to install the program.

If you do not have access to the Internet, you can install *ProSoft Configuration Builder* from the *ProSoft Solutions Product CD-ROM*, included in the package with your module.

#### **To install ProSoft Configuration Builder from the Product CD-ROM**


- 1 Insert the *ProSoft Solutions Product CD-ROM* into the CD-ROM drive of your PC. Wait for the startup screen to appear.
- 2 On the startup screen, click **PRODUCT DOCUMENTATION**. This action opens a *Windows Explorer* file tree window.
- 3 Click to open the **UTILITIES** folder. This folder contains all of the applications and files you will need to set up and configure your module.
- 4 Double-click the **SETUP CONFIGURATION TOOL** folder, double-click the **PCB\_\*.EXE** file and follow the instructions on your screen to install the software on your PC. The information represented by the "\*" character in the file name is the *PCB* version number and, therefore, subject to change as new versions of *PCB* are released.

**Note:** Many of the configuration and maintenance procedures use files and other utilities on the CD-ROM. You may wish to copy the files from the *Utilities* folder on the CD-ROM to a convenient location on your hard drive.

## 1.4 Setting Jumpers

The Setup Jumper acts as "write protection" for the module's flash memory. In "write protected" mode, the Setup pins are not connected, and the module's firmware cannot be overwritten. Do not jumper the Setup pins together unless you are directed to do so by ProSoft Technical Support.

The following illustration shows the MVI46-PDPMV1 jumper configuration.

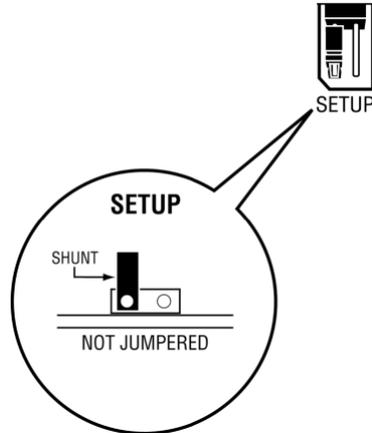

**Note:** If you are installing the module in a remote rack, you may prefer to leave the Setup pins jumpered. That way, you can update the module's firmware without requiring physical access to the module.

## 1.5 Installing the Module in the Rack


If you have not already installed and configured your SLC processor and power supply, please do so before installing the MVI46-PDPMV1 module. Refer to your Rockwell Automation product documentation for installation instructions.

**Warning:** You must follow all safety instructions when installing this or any other electronic devices. Failure to follow safety procedures could result in damage to hardware or data, or even serious injury or death to personnel. Refer to the documentation for each device you plan to connect to verify that suitable safety procedures are in place before installing or servicing the device.

After you have checked the placement of the jumpers, insert MVI46-PDPMV1 into the SLC™ chassis. Use the same technique recommended by Rockwell Automation to remove and install SLC™ modules.

**Warning: This module is not hot-swappable!** Always remove power from the rack before inserting or removing this module, or damage may result to the module, the processor, or other connected devices.

- 1 Turn power OFF.
- 2 Align the module with the top and bottom guides, and slide it into the rack until the module is firmly against the backplane connector.

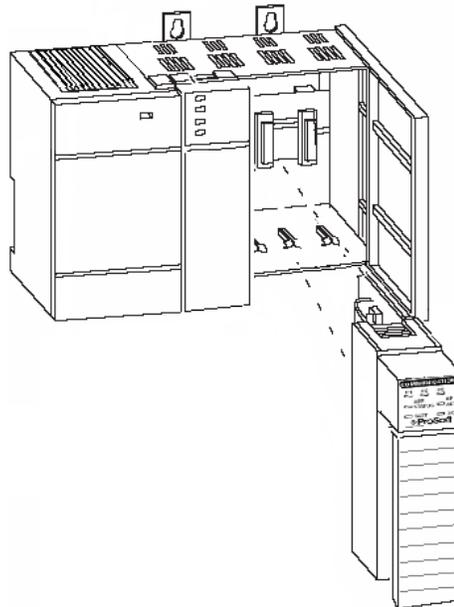


- 3 With a firm but steady push, snap the module into place.

- 4 Check that the holding clips on the top and bottom of the module are securely in the locking holes of the rack.
- 5 Make a note of the slot location. You will need to identify the slot in which the module is installed in order for the sample program to work correctly. Slot numbers are identified on the green circuit board (backplane) of the SLC rack.
- 6 Turn power ON.


**Note:** If you insert the module improperly, the system may stop working, or may behave unpredictably.

## 1.6 Connecting Your PC to the Processor

- 1 Connect the right-angle connector end of the cable to your controller at the communications port.

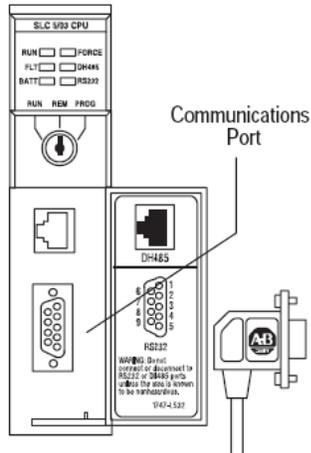

- 2 Connect the straight connector end of the cable to the serial port on your computer.

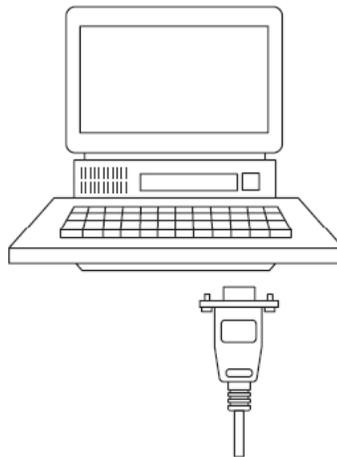


## 1.7 Downloading the Sample Program to the Processor


### To download the sample program from RSLogix 500 to the SLC processor

Note: The key switch on the front of the SLC processor must be in the REM position.


- 1 If you are not already online to the processor, open the **COMMUNICATIONS** menu, and then choose **DOWNLOAD**. RSLogix will establish communication with the processor.

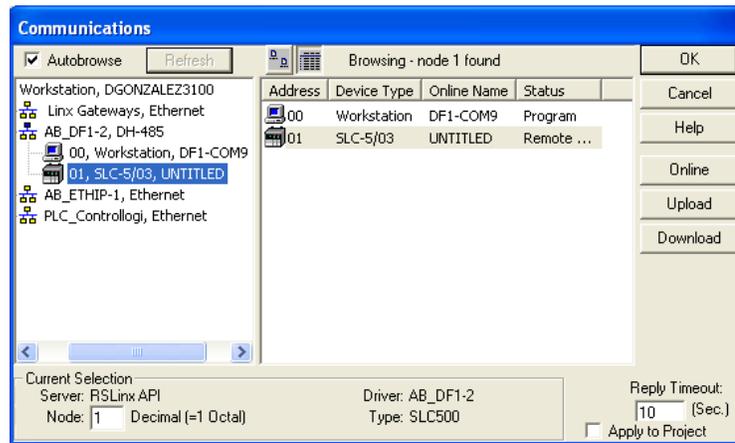

- 2 Click the **DOWNLOAD** button to transfer the sample program to the processor.
- 3 RSLogix will compile the program and transfer it to the processor. This process may take a few minutes.

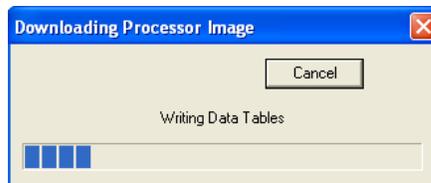

- 4 When the download is complete, RSLogix will open another confirmation dialog box. Click **YES** to switch the processor from Program mode to Run mode.

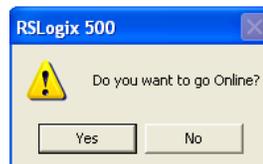


**Note:** If you receive an error message during these steps, refer to your RSLogix documentation to interpret and correct the error.


### 1.7.1 Configuring the RSLinx Driver for the PC COM Port

If RSLogix is unable to establish communication with the processor, follow these steps.

- 1 Open *RSLinx*.
- 2 Open the **COMMUNICATIONS** menu, and choose **CONFIGURE DRIVERS**.

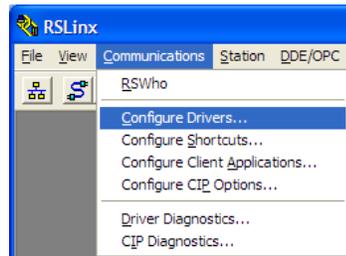


This action opens the *Configure Drivers* dialog box.

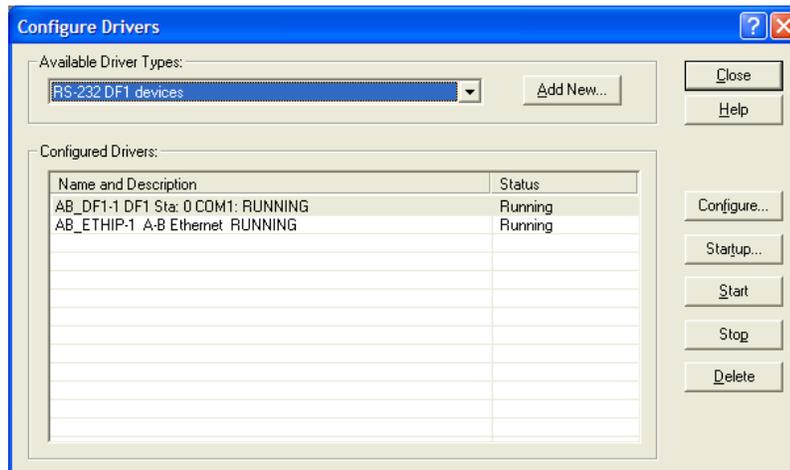

**Note:** If the list of configured drivers is blank, you must first choose and configure a driver from the *Available Driver Types* list. The recommended driver type to choose for serial communication with the processor is *RS-232 DF1 Devices*.

- 3 Click to select the driver, and then click **CONFIGURE**. This action opens the *Configure RS-232 DF1 Devices* dialog box.

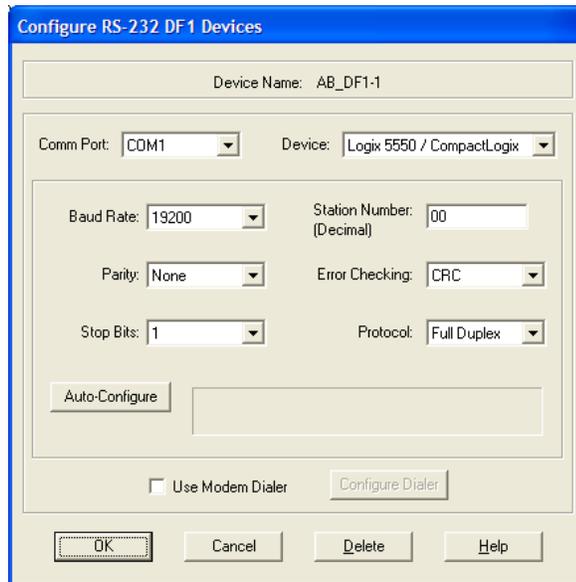

- 4 Click the **AUTO-CONFIGURE** button. RSLinx will attempt to configure your serial port to work with the selected driver.
- 5 When you see the message *Auto Configuration Successful*, click the **OK** button to dismiss the dialog box.

**Note:** If the auto-configuration procedure fails, verify that the cables are connected correctly between the processor and the serial port on your computer, and then try again. If you are still unable to auto-configure the port, refer to your RSLinx documentation for further troubleshooting steps.

## 1.8 Connecting Your PC to the Module

With the module securely mounted, connect your PC to the Configuration/Debug port using the RJ45-DB-9 Serial Adapter Cable and the Null Modem Cable included in the package with the MVI46-PDPMV1 module.

- 1 Connect the RJ45-DB-9 Serial Adapter Cable to the Null Modem Cable.
- 2 Insert the RJ45 cable connector from the RJ45-DB-9 cable into the Configuration/Debug port of the module.
- 3 Attach the other end to the serial port on your PC.

## 2 Configuring the MVI46-PDPMV1 Module

### *In This Chapter*

❖ Setting Up the Project .....	24
❖ Setting Module Parameters .....	26
❖ Configuring the PROFIBUS Master .....	29
❖ Verifying Correct Operation .....	50


Because the task of configuring the PROFIBUS network can be challenging, ProSoft Technology has provided a configuration tool called ProSoft Configuration Builder (PCB) that will help you with the following tasks:

- Creating a configuration project (page 24)
- Setting module parameters (page 26)
- Configuring the PROFIBUS network (page 29) (Master and slaves)
- Downloading the project to the module (page 47)

The following topics of this chapter explain each task step-by-step.

## 2.1 Setting Up the Project


To begin, start ProSoft Configuration Builder. If you have used other Windows configuration tools before, you will find the screen layout familiar. ProSoft Configuration Builder's window consists of a tree view on the left, and an information pane and configuration pane on the right side of the window. When you first start ProSoft Configuration Builder, the tree view consists of folders for *Default Project* and *Default Location*, with a *Default Module* in the *Default Location* folder. The following illustration shows the ProSoft Configuration Builder window with a new project.

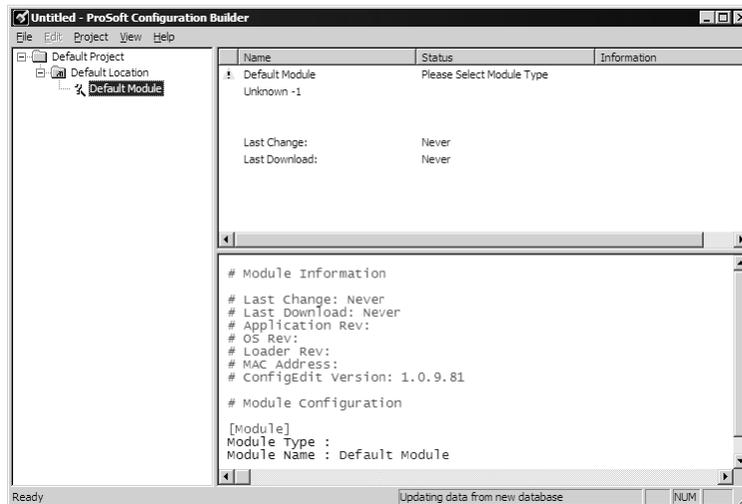

Your first task is to add the MVI46-PDPMV1 module to the project.

- 1 Use the mouse to select **DEFAULT MODULE** in the tree view, and then click the right mouse button to open a shortcut menu.


- 2 On the shortcut menu, select **CHOOSE MODULE TYPE**. This action opens the *Choose Module Type* dialog box.

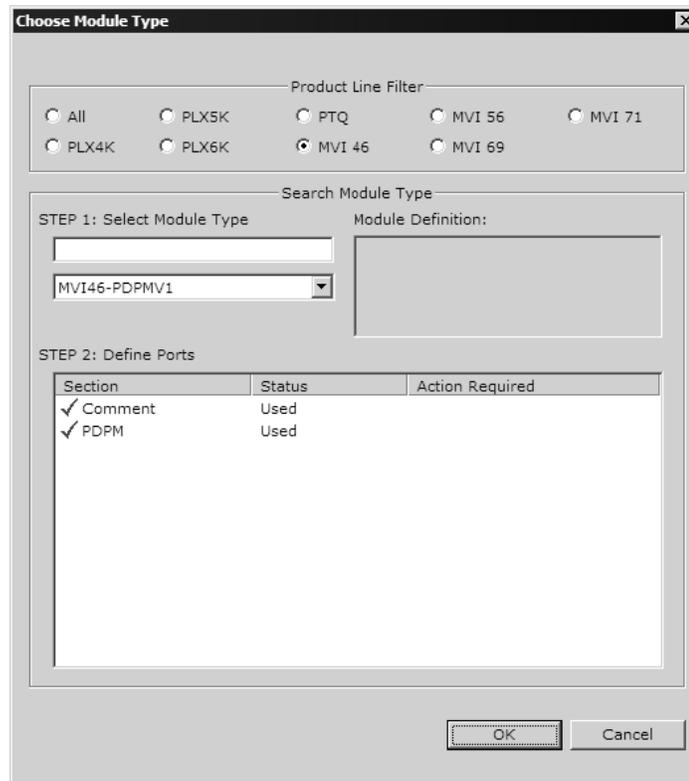

- 3 In the *Product Line Filter* area of the dialog box, select **MVI46**. In the *Select Module Type* dropdown list, select *MVI46-PDPMV1*, and then click **OK** to save your settings and return to the *ProSoft Configuration Builder* window. The next task is to set the module parameters.

## 2.2 Setting Module Parameters


Notice that the contents of the information pane and the configuration pane changed when you added the MVI46-PDPMV1 module to the project. The red "X" icon indicates that the module's configuration is incomplete.

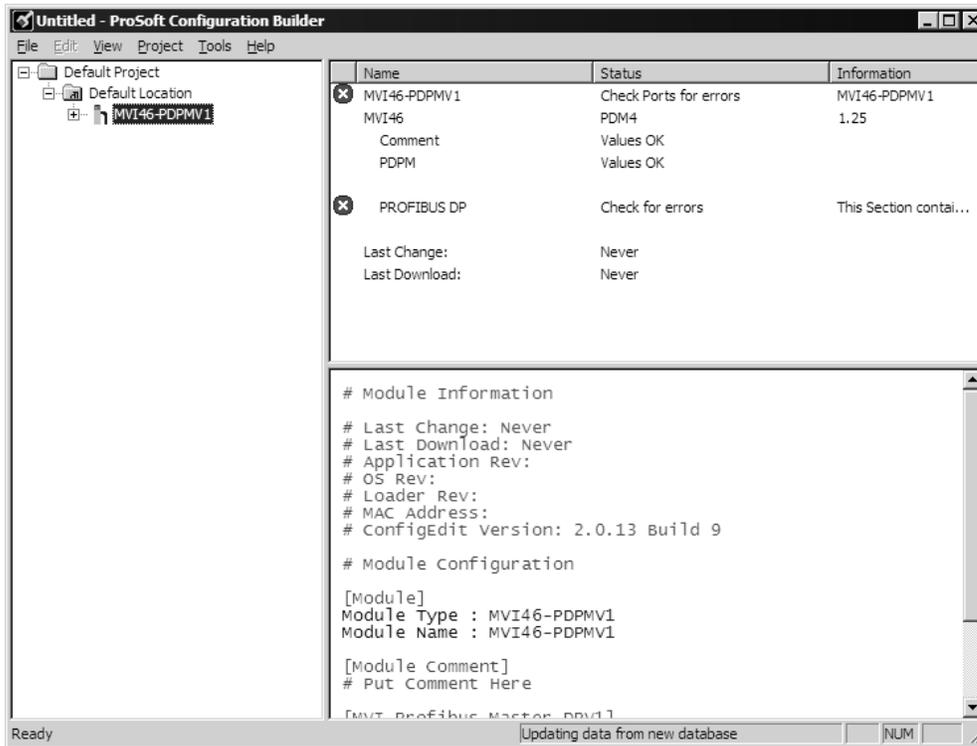

In the following steps, you will provide the missing information to begin configuring the module.

- 1 Click the plus sign **[+]** next to the module icon to expand the module tree, and then expand the **MVI PDPM-V1** tree.
- 2 Double-click the **MVI PROFIBUS MASTER DPV1** icon. This action opens the *Edit* dialog box.
- 3 In the *Edit* dialog box, configure the values for *Input Data Size* and *Output Data Size* (PROFIBUS input and output point words) to match the values required by your application. To change a value, select the parameter to modify in the left pane, and then type the new value in the edit field in the right pane.

For the sample application, the *Input Data Size* and *Output Data Size* values should both be **768**.

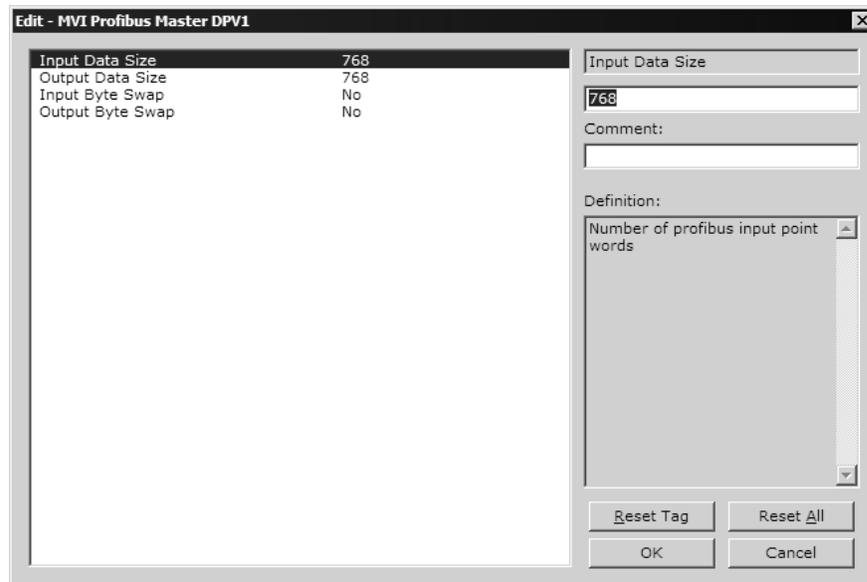

- 4 Click **OK** to save your settings and return to the *ProSoft Configuration Builder* window.

At this time, you may wish to rename the *Default Project* and *Default Location* folders in the tree view.

#### **To rename an object**

- 1 Select the object, and then click the right mouse button to open a shortcut menu. From the shortcut menu, choose **RENAME**.
- 2 Type the name to assign to the object.
- 3 Click away from the object to save the new name.

### **2.2.1 Input Data Size**

**0 to 768**

Number of words to transfer from the PROFIBUS input image to the controller.

### **2.2.2 Output Data Size**

**0 to 768**

Number of words to transfer to the PROFIBUS output image from the controller.

### **2.2.3 Input Byte Swap**

#### **YES or NO**

This parameter determines if the bytes in the PROFIBUS Input Data area are swapped before being stored in the module memory database. If the parameter is set to **NO**, no swapping will be applied. If the parameter is set to **YES**, the order of bytes in each word will be swapped before being stored in memory.

Example:

- With Input Byte Swap set to **NO**, incoming order is unchanged - ABCDEF
- With Input Byte Swap set to **YES**, each byte pair is swapped - BADCFE

### **2.2.4 Output Byte Swap**

#### **YES or NO**

This parameter determines if the bytes in the PROFIBUS Output Data area are swapped before being transmitted to slaves on the PROFIBUS network. If the parameter is set to **NO**, no swapping will be applied. If the parameter is set to **YES**, the order of bytes in each word will be swapped before being transmitted.


Example:

- With Output Byte Swap set to **NO**, outgoing output order is unchanged - ABCDEF
- With Output Byte Swap set to **YES**, each output byte pair is swapped - BADCFE


## 2.3 Configuring the PROFIBUS Master

In this task, you will configure the PROFIBUS Master, and then add PROFIBUS slaves to the PROFIBUS network. When this step is complete, you will download the configuration information to the MVI46 module. You will also export the I/O maps for the processor.

- 1 In *PCB* tree view, click **[+]** to expand the *MVI46-PDPMV1* tree, and then double-click the **PROFIBUS DP** icon. This action opens the *PDPMV1 PROFIBUS Master Setup* dialog box.
- 2 In the *PDPMV1 PROFIBUS Master Setup* dialog box, click the **CONFIGURE PROFIBUS** button. This action opens the *ProSoft Configuration Builder for PROFIBUS* application.
- 3 Click **[+]** to expand the PROFIBUS Master tree.
- 4 Drag the *PROFIBUS Master* icon into the *Bus Configuration* window. This is automatically done by the software for new applications.

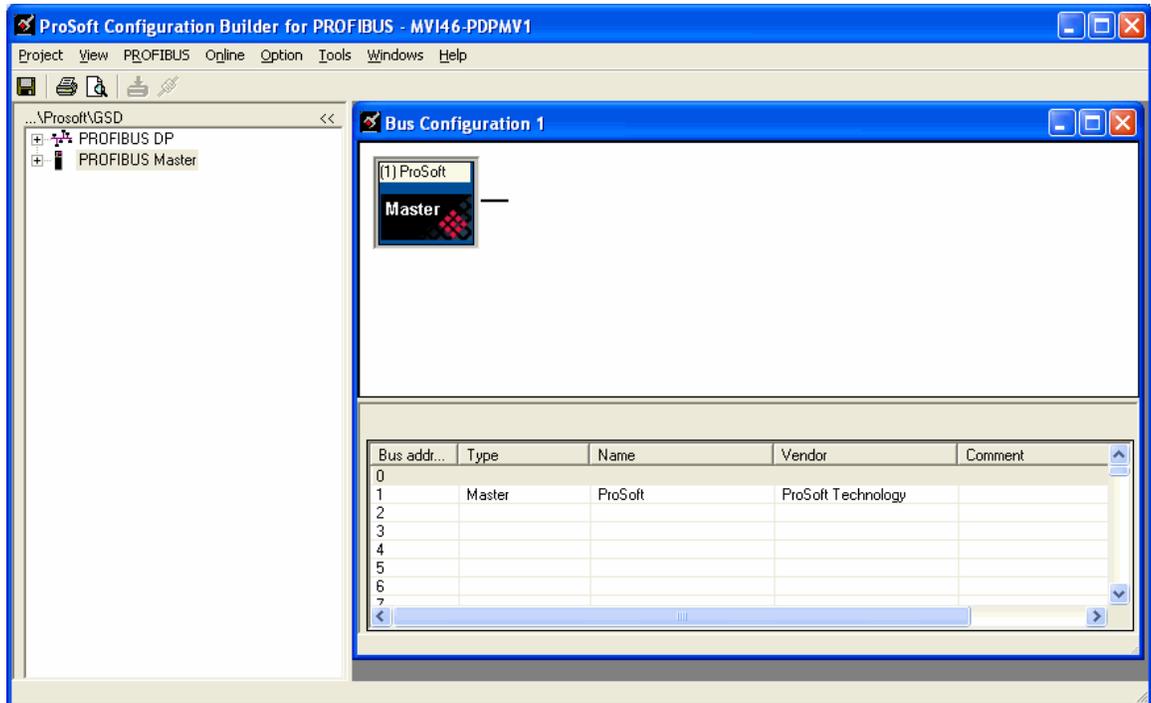

- 5 Double-click the *PROFIBUS Master* icon in the *Bus Configuration* window. This action opens the *Master Properties* dialog box.

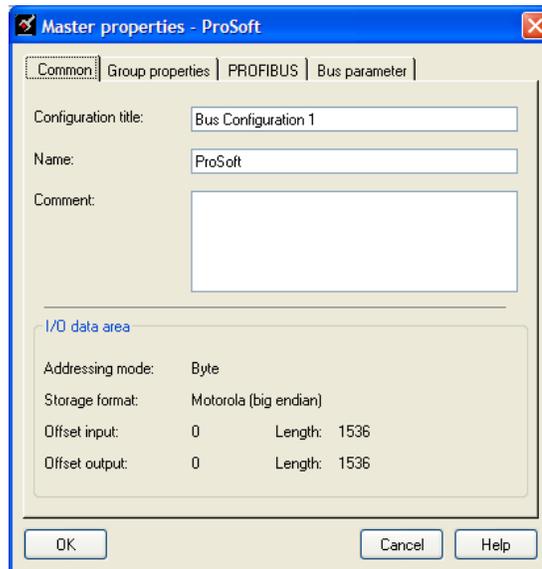

- 6 On the *Common* tab, name your PROFIBUS drop.

**Note:** The *PROFIBUS* tab contains the address setting and advanced configuration settings for the Master. The default settings on this tab work best in most applications.

- 7 Click **OK** to save your changes and return to the *Bus Configuration* window.

### 2.3.1 Installing the GSD Files

ProSoft Configuration Builder (PCB) uses PROFIBUS slave device definition files (GSD files) to obtain basic configuration information about the PROFIBUS slaves you add to the network. The GSD configuration files identify the slave's capabilities so that the MVI46-PDPMV1 can communicate with it correctly. Slave device manufacturers provide the GSD files for the equipment they make. Slave device files sometimes come in various languages. When a manufacturer provides slave device files in several languages, it is a common practice to use the third letter of the file extension to indicate the language used in the file. For instance:

- .GSD is the most commonly used file extension and will usually be in either English or German
- .GSE will usually be in English
- .GSS will usually be in Spanish
- .GSF will usually be in French
- other combinations may also be seen, as well as other languages using the letters indicated above

Follow these steps to install the GSD file or files for your slave device or devices.

**Tip:** GSD configuration files for popular PROFIBUS slaves and ProSoft Technology solutions are included with PCB. Before installing GSD files, browse the list of available slaves in the Tree View window to see if GSD files for your slave are already installed.

GSD files are often both model number specific as well as model revision specific. Just because you may have an older GSD file from a manufacturer for the particular make and model of your slave device does not guarantee it will work for a newer revision of that device. Be sure you obtain from the device manufacturer the correct GSD file or files for your PROFIBUS slave or slaves.

#### ***To install GSD files manually***

- 1 In ProSoft Configuration Builder tree view, click **[+]** to expand the module tree, and then double-click the **PROFIBUS DP** icon. This action opens the *PDPMV1 PROFIBUS Master Setup* dialog box.
- 2 Click the **CONFIGURE PROFIBUS** button. This action opens the *ProSoft Configuration Builder for PROFIBUS* application.
- 3 Open the **TOOLS** menu, and then choose **INSTALL NEW GS\* FILE**. This action opens a dialog box that allows you to browse for the location of the GSD configuration files to install. (Depending on the device and language used in the file, the actual extension may be ".GSD", ".GSE", ".GSS", or other combinations; hence the generic reference to ".GS\*" files, where "\*" is a wildcard that stands for any letter.)
- 4 Choose the file to install, and then click **OPEN**. If the file already exists in the configuration file path, you will be prompted to overwrite the file.
- 5 You will be prompted to associate the GSD configuration file with a bitmap image of the slave device. Use the **FILE / OPEN** dialog box to browse for the location of the image file to use. If you have no device-specific bitmap file, you may **CANCEL** the bitmap upload, and a generic device icon will be used in the *Bus Configuration* window for this slave device.

### **2.3.2 Configuring the PROFIBUS Slaves**


There are two essential steps to configuring a slave:

- 1 Add the slave in ProSoft Configuration Builder (PCB) as a device connected to the PROFIBUS Master, specifying the slave address and any necessary input and output configuration. Download the PROFIBUS Master configuration to the MVI46-PDPMV1 module.
- 2 Configure the slave (using PCB or the configuration tool supplied by the manufacturer, for some PROFIBUS slaves). Verify that the slave address configured in the slave module matches the slave address configured in PCB. Download the PROFIBUS Slave configuration to the slave module.


Scanning for Slaves Manually

In this part of the procedure, you will add and configure the PROFIBUS slaves. In the following steps, you will add and configure a ProLinx PROFIBUS slave module. The configuration information (.GSD file) for this module is provided on the MVI46-PDPMV1 Solutions CD-ROM.

- 1 In ProSoft Configuration Builder for PROFIBUS, click the plus sign **[+]** to expand the *PROFIBUS DP* tree.
- 2 Navigate to the folder containing the type of slave device to add, and then click the plus sign **[+]** to expand the folder.
- 3 Drag the slave icon into the *Bus Configuration* window. The slave device appears in the *Bus Configuration* window as a network location to the Master.

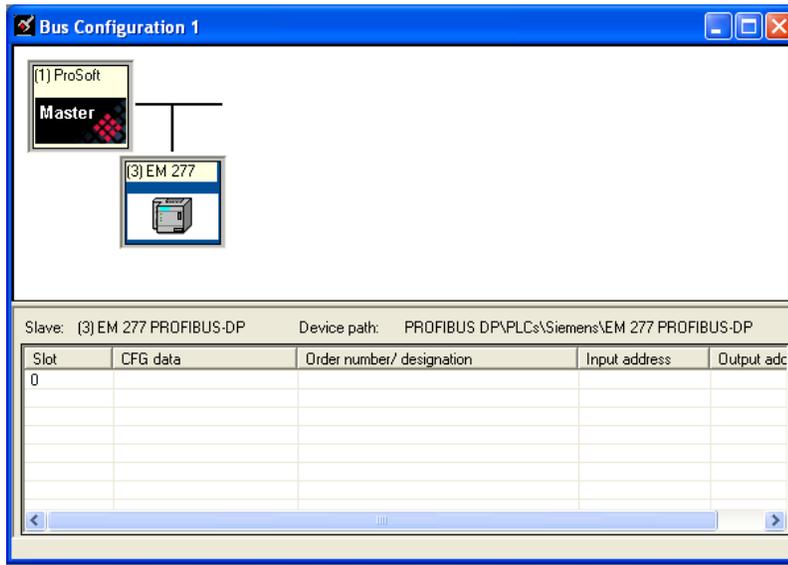

- 4 In the tree view, click the plus sign **[+]** to expand the slave device you added. This action opens a list of device configuration values. The following illustration shows the device configuration values for a ProLinX PROFIBUS slave. The values for other devices may be different, so you should review the specifications for the product you are installing in order to determine the correct values to use.

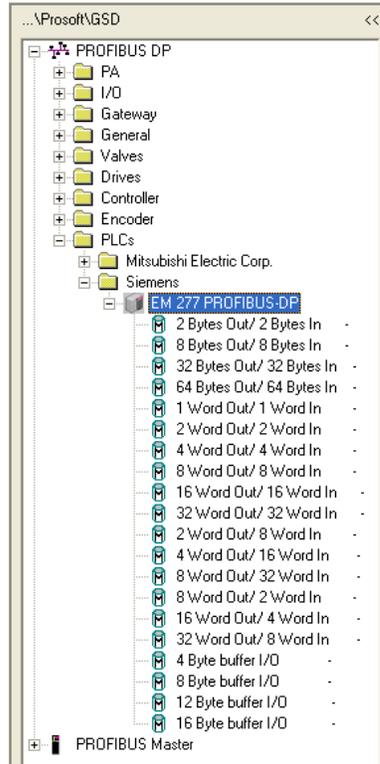



In particular, note the following settings:


- Automatic PROFIBUS Address Assignment:  
ProSoft Configuration Builder automatically assigns a PROFIBUS address to each new slave. The address assignment begins at address 3, and is incremented by 1 for each new slave added to the network. You can change the address in the *Common* tab of the *Slave Properties* dialog box.
  - Automatic Input/Output Address Assignment:  
For each new slave added to the PROFIBUS network, ProSoft Configuration Builder automatically converts the input/output byte addresses to word input/output addresses for the State RAM in the processor.
- 7 Repeat steps 2 through 6 for all slaves you intend to place on the network.
  - 8 When you are finished adding slaves, open the *Project* menu and choose **EXIT** to return to the *Master Setup* dialog box.

#### Using The Autoscan Feature

The concept of *Automatic network scanning* means that the user can instruct the *Bus Configuration* window to automatically gather information about slaves that are connected to the network. When the scan is completed the user can adopt the detected slaves to the *bus configuration* and download to the Master.

This is a quick way to get a network up and running. However, one should be aware that it is not guaranteed that any particular slave will enter data exchange since the user parameter data might not match. This is especially obvious if no associated GSD-file is found during the network scan, this means that no user parameter data would be sent to the slave.


**NETWORK SCAN** is selectable from the *Online* menu as well as from the drop-down menu for the **MASTER** icon.

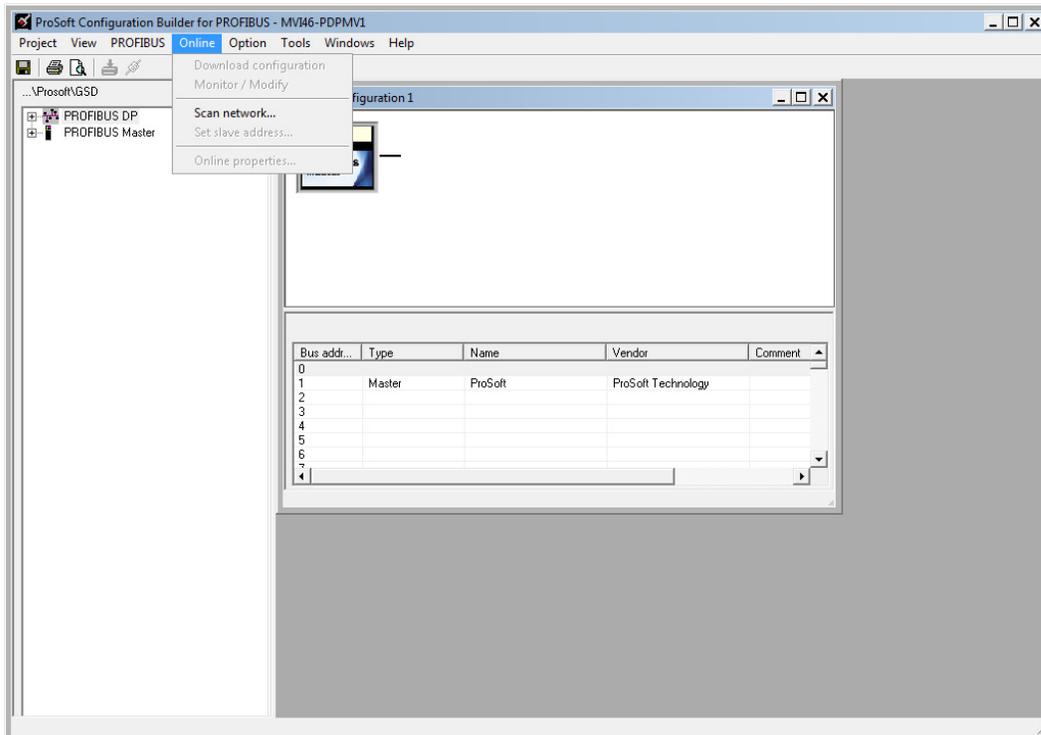

When the download is completed, the *PROFIBUS Master Configuration* window will initialize the Master to operate as a *Class 2 Master only*. In this mode it is possible to initialize the Master even if the database does not contain any slaves. After successful initialization, the *PROFIBUS Master Configuration* window will issue the following mailboxes in order to gather information about the connected slaves:

- 1 1. Send FB\_APPL\_GET\_LIVE\_LIST in order to detect connected slaves,
- 2 2. Send FB\_APPL\_GET\_SLAVE\_DIAG (external request) to all devices identified as slaves according to the Live list.
- 3 3. Send FB\_APPL\_GET\_SLAVE\_CONFIG to all devices identified as slaves according to the Live list.

When the information is collected the *PROFIBUS Master Configuration* window will find a matching GSD-file and extract information from it. Refer to the flowchart below for this sequence:

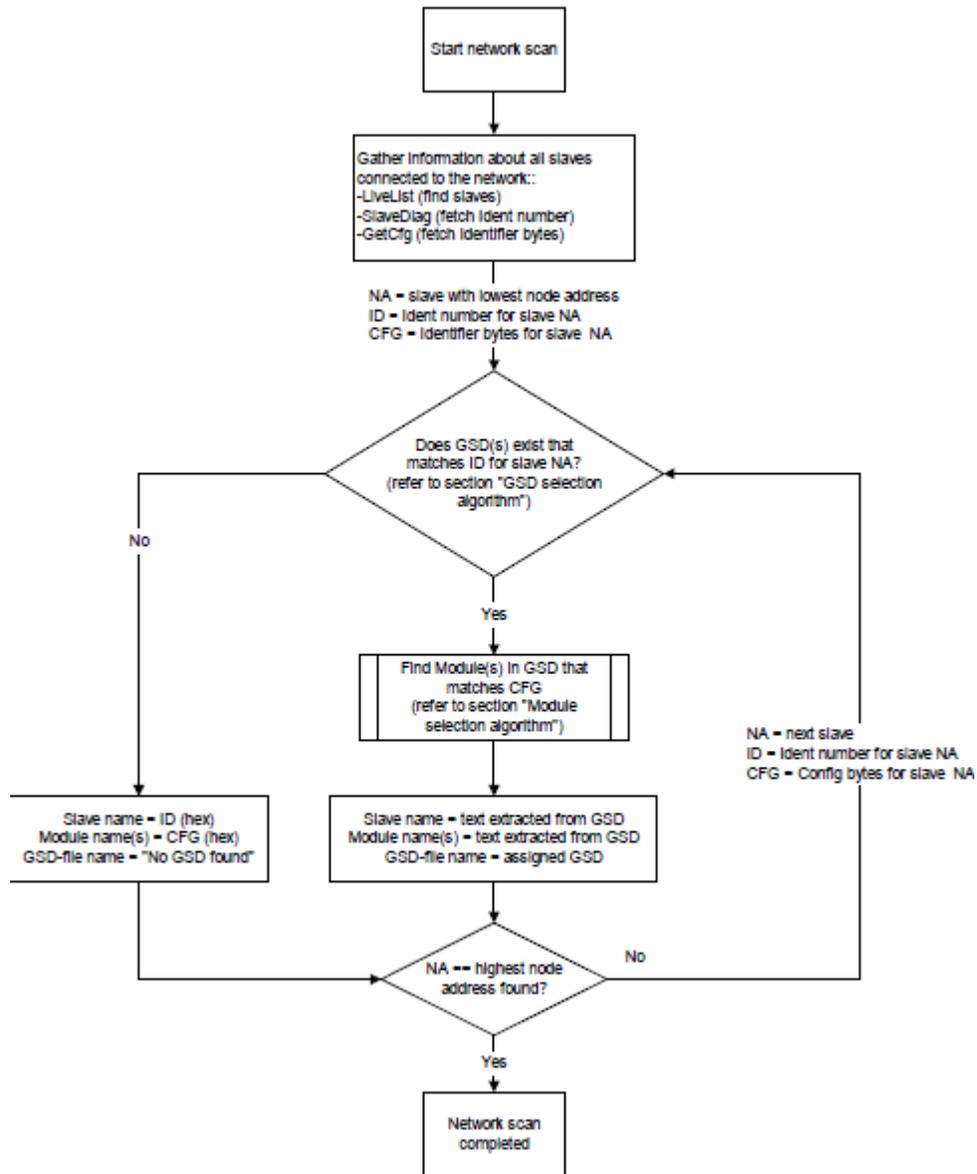

## GSD Selection Algorithm

If two or more matching GSD-files are found, the first one found should be selected. The other compatible files should be stored so that the user can select one of them instead. If the user selects another GSD-file, the *PROFIBUS Master Configuration* window will run through the *Module Selection Algorithm* (described below) again.

## Module Selection Algorithm

The algorithm used to find modules in the GSD based on the Identifier byte(s) is as follows:

Select the module that matches the largest number of Identifier bytes. If the GSD contains two or more modules with the exact set of Identifier bytes, use the first module found.

### Example:

If a slave responds with identifier bytes: 0x11, 0x21, 0x31 and that the associated GSD-file contains five modules: "A" = 0x11, "B" = 0x21, "C" = 0x31, "AB" = 0x11, 0x21 and "BC" = 0x21, 0x31. The *PROFIBUS Master Configuration* window will then select modules "AB" and "C".

**Note:** If no matching module is found in the GSD, The *PROFIBUS Master Configuration* window will display the identifier byte(s) instead.

## Network scan window

The information extracted from the GSD-file(s) will be displayed in the *Network scan* window.

### Select


In this column all found slaves will be marked as selected by default, except for slaves with the special address 126 (refer to the next section that describes the Address column). Only selected slaves will be added to the *PROFIBUS Master Configuration* when the **ADOPT SELECTED SLAVES** button is clicked.

### Address

In this column the node address of the slaves will be displayed. Found slaves should be listed in ascending order according to their node addresses.

**Special address 126 -Set Slave address:**

If a slave with node address 126 is detected during the network scan, the *PROFIBUS Master Configuration* window will display the address in red color. It will not be possible for the user to adopt the slave to the configuration since it is not allowed to exchange data with devices having this address. The check box in the *Select* column will be grayed out.

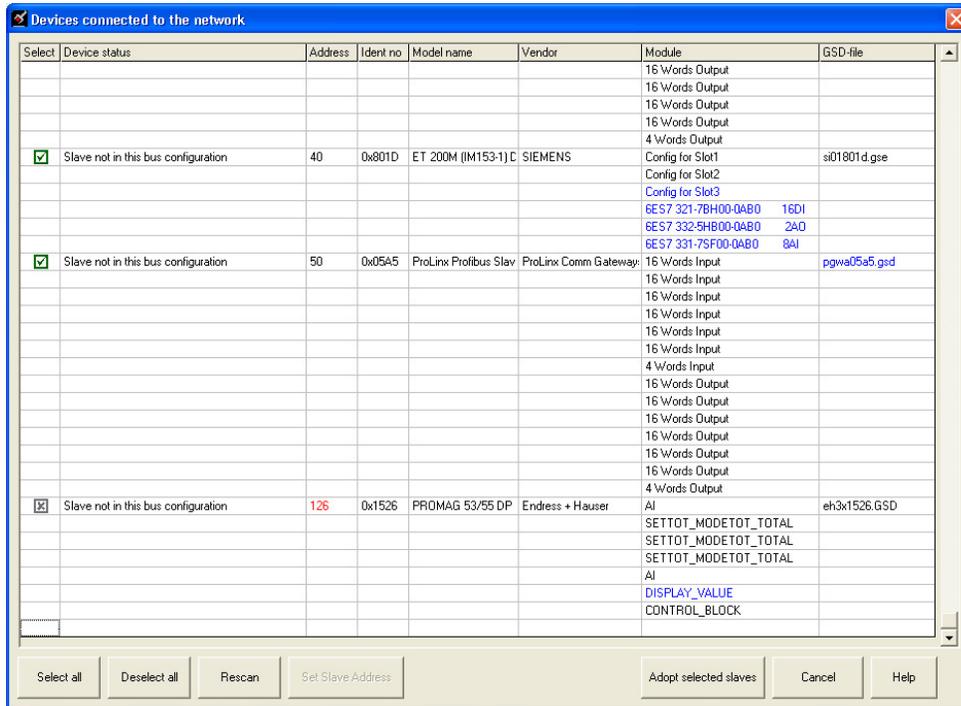


To be able to adopt a slave with address 126 the user must first assign a valid address by clicking the icon next to the node address. By doing so the *Set Slave Address* dialog box is started.

**Note** that the *Old slave address* is preset to a value of 126 that is not editable (grayed out).




If the Slave is in the configuration already then it will not affect the addressing.

Example:

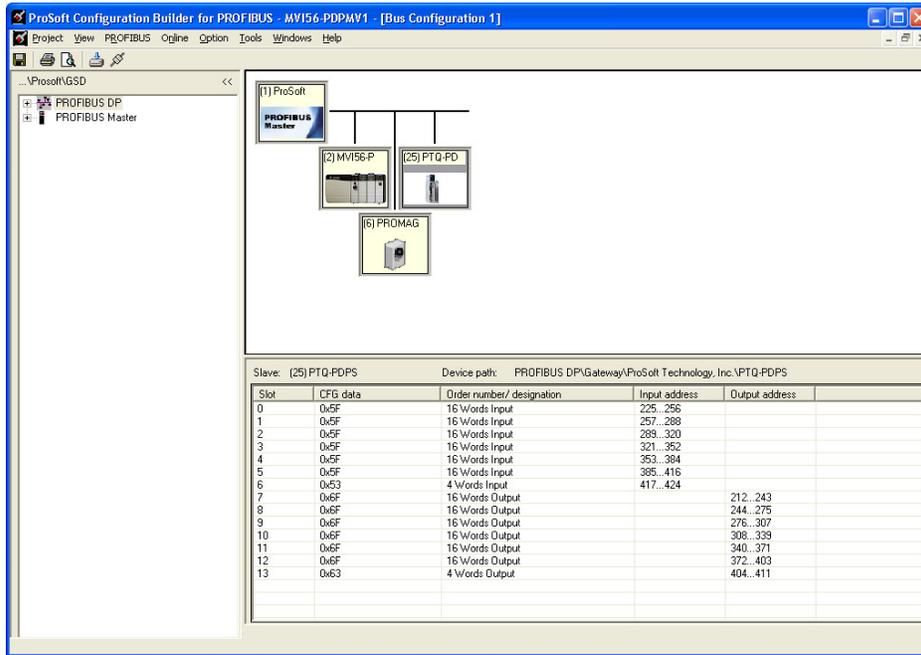

After scanning, the network finds these other slaves: 2, 6, 25, and 40  
 Slaves 2, 6, and 25 are found, but are marked as in the bus configuration (the mapping of the inputs and outputs will not be affected)  
 Slaves 40 is new and could be added and the input/output addressing will be appended to the end as shown on the last screen.

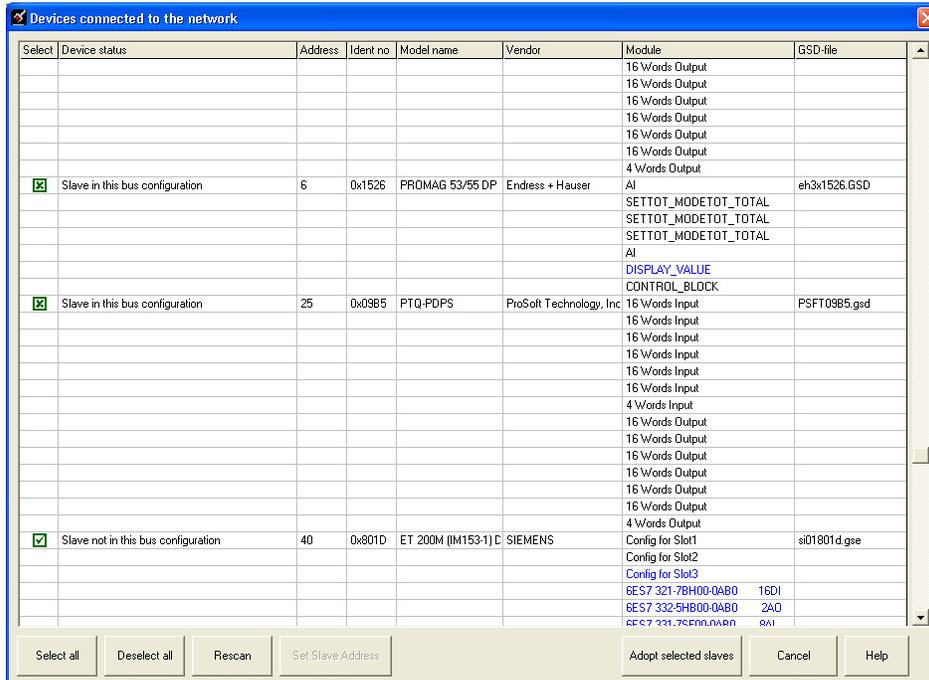

The *PROFIBUS Master Configuration* window will prevent the user from selecting a *New slave address* that is already occupied by another device; this includes detected Master stations as well. If the user selects an occupied address, a message similar to the one shown here will open.



When an address has been successfully assigned, the *PROFIBUS Master Configuration* window will update the *Network scan* window as shown here. The node address will be updated to the one that the user selected in the *Set Slave* dialog box.

### Slave

In this column the name of the slave as stated in the assigned GSD-file will be displayed. If no matching GSD-file is found the Ident number will be displayed in red color in the drop-down list.

### Module

This column shows the name of the module(s) as stated in the assigned GSD-file, which matches the Identifier byte(s) derived from the *GetCfg* mailbox message. If no GSD-file or no matching module is found the Identifier byte(s) will be displayed in red color. If the configuration for a slave is constructed of several modules, the modules will be listed under each other.

If there is more than one module in the GSD-file that matches the Identifier bytes, the first matching module will be displayed in blue color in a drop-down list. The drop-down list will contain all other matching modules so that the user can select the desired one.

Select	Address	Slave	Modules
<input checked="" type="checkbox"/>	3	PROFIBUS DP-64 MODULE	AB-PDP-64 I/O
<input checked="" type="checkbox"/>	4	1794-APB/B	1794-APB/B Status
			1794-IA16
			1794-IA16
			1794-IB8
			1794-IV16
			1794-IM8
			1794-Empty slot
			1794-Empty slot
			1794-Empty slot

**Note:** Only modules that have the exact same Identifier bytes as the first matching module will be displayed in the drop-down list.

### GSD-file

This column shows the name of the GSD-file that matches the Ident number derived from the *SlaveDiag* mailbox message. If there are more files with the same Ident number in the device catalog, the first matching GSD-file will be displayed in blue color in a drop-down list.

<input checked="" type="checkbox"/>	99	NICE DEVICE	Nice Module 1	NICEDEV.GSD
			Nice Module 2	NICEDEV.GSD
<input checked="" type="checkbox"/>	104	0x1000	0x21	NICEDEV2.GSD
			0x11	


This could be the case if the device catalog contains two or more brand labeled devices, or GSD-files for two or more languages (for example NICEDEV.GSD and NICEDEV.GSE) exist.

**Note:** If the user selects another GSD-file, The *PROFIBUS Master Configuration* window will update the modules for that slave accordingly.

If no GSD-file is found the user will be able to copy the expected GSD to the device catalog by clicking the icon next to the text *No GSD found*. This will start the Install *new GS\*-file* dialog box. When the file is installed, the *PROFIBUS Master Configuration* window will verify that the installed file matches the slave and update the modules for the slave accordingly.

## Rescan

Pressing the **YES** button will trigger a new network scan. Before proceeding with the scan a message similar to the one below will appear. If a new scan is accepted, detected slaves found during the previous scan will be lost.

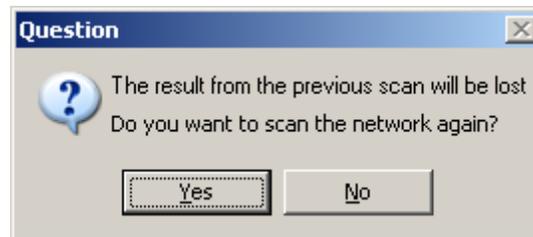


**Note:** The autoscan function cannot delete slaves in the current configuration, it can only change (if slaves differs) or add. The slave must be manually removed from the bus configuration in order to be able to add it again via the scan window.

## Adopt selected slaves

Pressing this button will cause all selected slaves to be adopted to the *PROFIBUS Master Configuration* window. Before carrying on with this action a message similar to the one below will appear.




If accepted, the *network scan* window will close and the *PROFIBUS Master Configuration* window will be populated with the slaves that were found during the network scan.

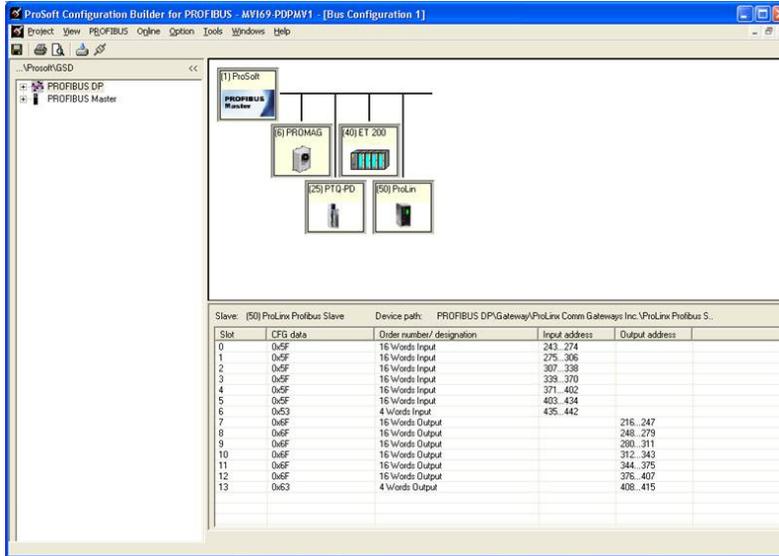

**Note:** *Slave:* is equal to the Ident number and that the *Device path:* and *Order number/designation* fields are left empty.

### Cancel and Help

If the **CANCEL** button is pressed a message similar to the one below will appear.

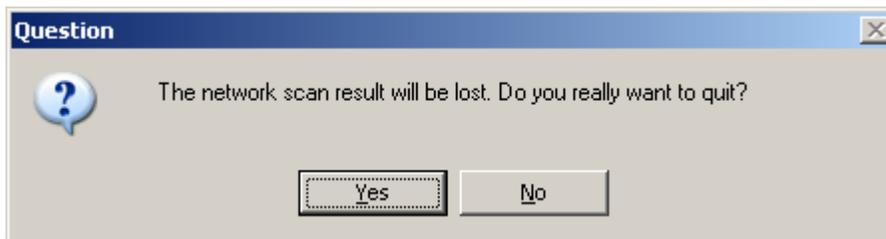

If the **HELP** button is pressed the online help will start.

### 2.3.3 Calculating the Checksums


The checksum (CRC) values are calculated from the PROFIBUS configuration data, and compare the contents of the configuration file in the module with the value reported by the processor. The checksum (CRC) value allows the processor to verify that the configuration file is valid, and has not changed since the last time the configuration file was imported to the processor. Any change to the contents of the configuration file in either location changes the unique numeric CRC value for the file.

If the checksum values do not match, the APP STATUS light illuminates on the module.

- 1 In the *PDPMV1 PROFIBUS Master Setup* dialog box, click the Calculate Checksums button.
- 2 Make a note of the checksum values so that you can enter them later if prompted.

### 2.3.4 Printing the Processor Network Memory Map

The Processor Memory Map dialog box uses the information about your PROFIBUS Master and slaves to display the data types you configured. You will need this information to determine the memory areas your application will use in the SLC processor.

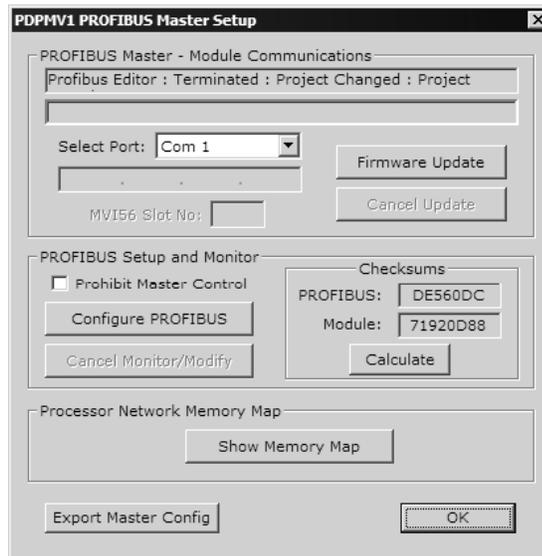




### 2.3.5 Downloading the Project to the Module Using a Serial COM Port

For the module to use the settings you configured, you must download (copy) the updated *Project* file from your PC to the module.


#### To download the project file

- 1 In the tree view in *ProSoft Configuration Builder*, click once to select the module.
- 2 Right-click the module icon to open a shortcut menu. From the shortcut menu, choose **DOWNLOAD FROM PC TO DEVICE**. The program will scan your PC for a valid com port (this may take a few seconds). When *PCB* has found a valid COM port, the *Download* dialog box will open.

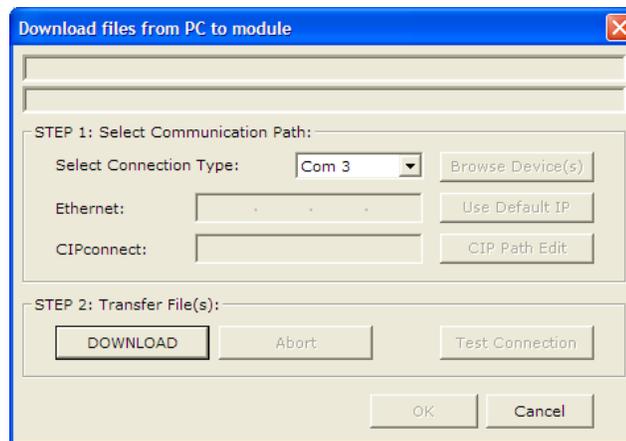

- 3 Choose the COM port to use from the dropdown list, and then click the **DOWNLOAD** button.

The module will perform a platform check to read and load its new settings. When the platform check is complete, the status bar in the *Download* dialog box will display the message *Module Running*.

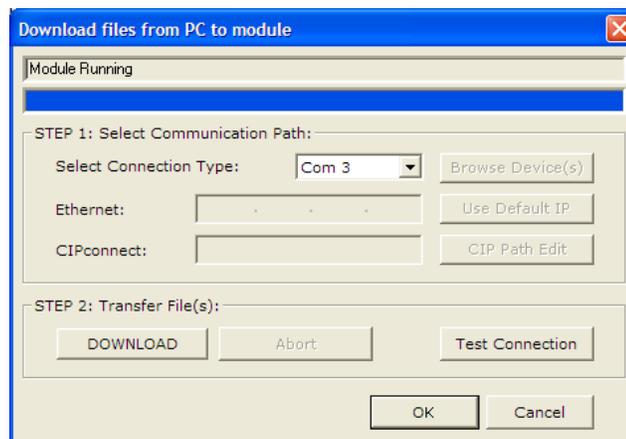

### 2.3.6 Backing Up the Project

In this step, you will create a backup copy of your project and configuration files. The backup procedure saves your data for reuse on another machine, or allows you to restore your data in the event of a system failure.

#### **To save your project and configuration files**

- 1 In *ProSoft Configuration Builder* tree view, click **[+]** to expand the *MVI46-PDPMV1* tree, and then double-click the **PROFIBUS DP** icon. This action opens the *PDPMV1 PROFIBUS Master Setup* dialog box.
- 2 In the *PDPMV1 PROFIBUS Master Setup* dialog box, click the **EXPORT MASTER CONFIG** button. This action saves the PROFIBUS network configuration for your module in an XML file. The recommended location for this file is your *My Documents* folder.


**Tip:** You can use the XML file created by ProSoft Configuration Builder in this step to simplify the task of configuring additional PROFIBUS network modules. Because it saves the entire network configuration, you can add modules quickly by modifying only the items that are unique for each device, typically the slot number and I/O addresses. To use this saved configuration, open Windows Explorer, navigate to the folder where you saved the Master Configuration XML file, and then drag the file onto the new PROFIBUS DP icon in the ProSoft Configuration Builder tree view.

- 3 In *ProSoft Configuration Builder*, open the **FILE** menu, and then choose **SAVE AS**.
- 4 Name the project file, and click **SAVE**. The recommended location for this file is your *My Documents* folder.

**Note:** All PCB project files and module-related files are automatically saved to C:\PCBExportFiles.

A complete backup consists of the Project and Master Configuration files, plus the GSD configuration files. The default location for the GSD files is *C:\Documents and Settings\All Users\Application Data\ProSoft\GSD (Windows XP / 2000)* or *C:\My Documents\*.

PCB does this complete backup for you automatically. The default location for these backup files is *C:\PCBExportFiles*. All the files associated with your PCB configuration will be stored in a folder with the same name as the name you used to save your PCB configuration (.ppf) file. When you exit PCB, you will be prompted to overwrite your *Export* folder files.

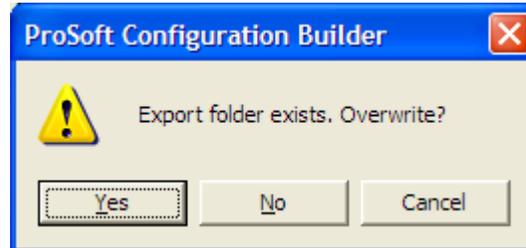

If you have made changes to your configuration settings, you should click the **YES** button every time you see this dialog box to have the backup files updated. Having all the files for your PCB configuration stored in one folder makes it easier to transfer the application from one system to the other or to send your files to ProSoft Technical Support when you need assistance.

## 2.4 Verifying Correct Operation

The final step is to verify that the MVI46-PDPMV1 module is communicating with the PROFIBUS slave. Choose the method that best suits your connection and proximity to the modules and the processor.

- If you are able to view the module directly: Look at the PROFIBUS LEDs on the MVI46-PDPMV1 (page 50)
- If you are able to connect to the module using ProSoft Configuration Builder and a serial cable: View the online status of the PROFIBUS network (page 51)
- If you are able to connect to the module using ProSoft Configuration Builder and a serial cable: View the Fieldbus Data from the MVI46-PDPMV1's Configuration/Debug menu (page 53)
- If you are able to connect to the processor using RSLogix 500: View the Data Files in RSLogix 500 (page 56)
- If you are able to connect to the processor using RSLogix 500: Send a Mailbox Message in RSLogix 500 (page 58)


### 2.4.1 Checking the PROFIBUS LEDs on the MVI46-PDPMV1

- If all four PROFIBUS LEDs (page 99) are illuminated green, then the PROFIBUS Master is communicating and exchanging data with all configured PROFIBUS slaves.
- If the COM STAT LED is green and flashing, the PROFIBUS Master is communicating and exchanging data with at least one of the configured slaves.
- If the COM STAT LED is red, there is a communication or configuration error.
- If the COM STAT LED is off, the PROFIBUS Master is not communicating with any slaves. The most likely reason is that the slaves are not correctly configured.
- After restarting the MVI46-PDPMV1 Master and the PROFIBUS slave, look at the PROFIBUS cable connection. If all the PROFIBUS LEDs on the MVI46-PDPMV1 are illuminated green, then the Master is communicating successfully with all slaves.

## 2.4.2 Viewing the Online Status of the PROFIBUS Network


**Note:** For this procedure, you must connect a serial cable from the serial port on your PC to the RJ45 to DB9M adaptor cable on the MVI46-PDPMV1 module.

- 1 In *ProSoft Configuration Builder for PROFIBUS*, open the **ONLINE** menu, and then choose **MONITOR/MODIFY**. ProSoft Configuration Builder will establish communication with the MVI46-PDPMV1 module, and will indicate communication status.

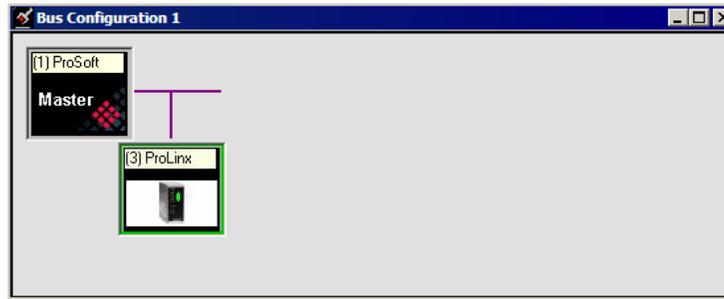

- If the slave icon in the *Bus Configuration* window has a green border, then the MVI46-PDPMV1 module is correctly communicating with the PROFIBUS slave.
- If the slave icon in the *Bus Configuration* window has a red border, then the module is not communicating with the slave.
- If the slave icon in the *Bus Configuration* window has a blue border, the slave is communicating with the Master, but is generating diagnostic data. To view diagnostic data for the slave, select the slave, and click the right mouse button to open a shortcut menu. On the shortcut menu, choose **ONLINE PROPERTIES**.


- 2 In the *Online Slave Properties* dialog box, click the **DIAGNOSTIC** tab, and select **(CHECK) DETAILS FOR SLAVE DIAGNOSTIC**. Slave diagnostic information will appear in the *Diagnostic* window. Refer to the documentation for your PROFIBUS slave to determine the meaning of the diagnostic data.

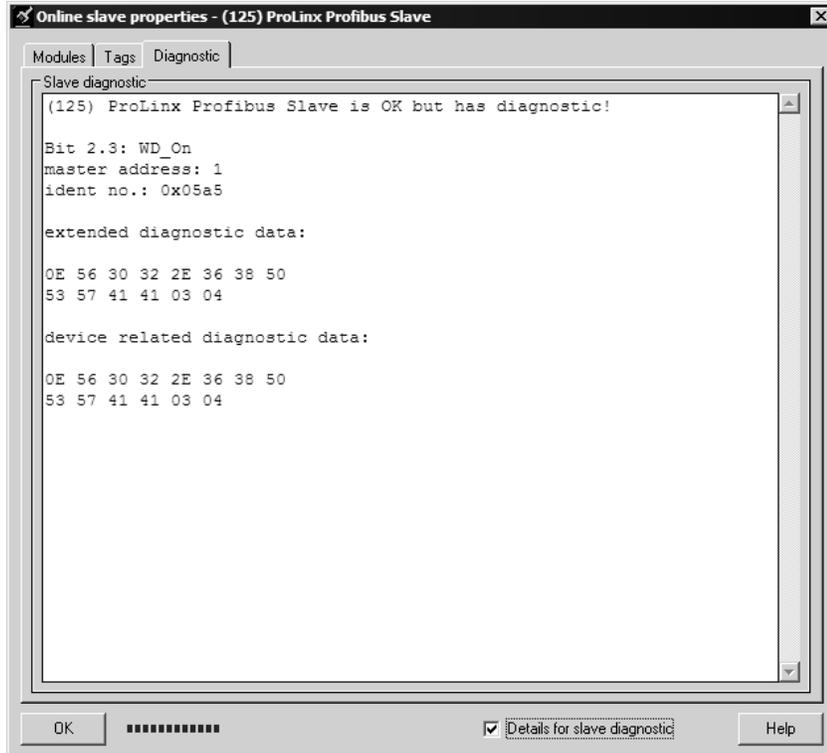

### 2.4.3 Viewing the Fieldbus Data from the MVI46-PDPMV1's Configuration/Debug Menu

**Note:** For this procedure, you must connect a serial cable from the serial port on your PC to the RJ45 to DB9M adaptor cable on the MVI46-PDPMV1 module.

- 1 In *ProSoft Configuration Builder*, select the MVI46-PDPMV1 module, then click the right mouse button to open a shortcut menu.
- 2 On the shortcut menu, choose **DIAGNOSTICS**. This action opens the *Diagnostics* dialog box.
- 3 Press [?] to display the *Main* menu, and then press [2] to view Fieldbus data.

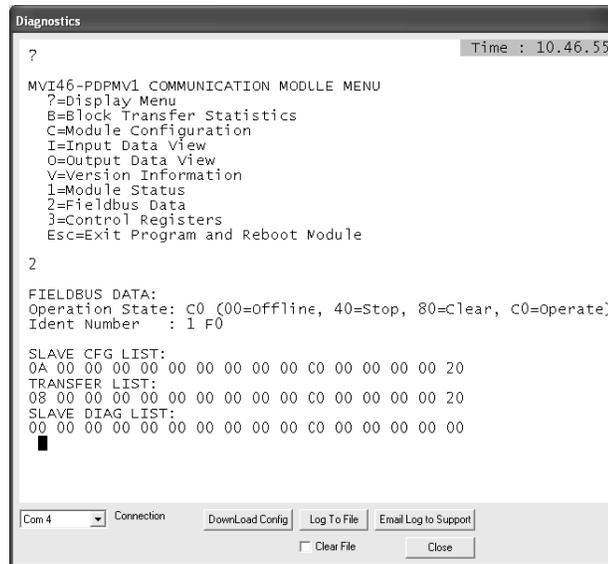


- 4 Note the value in Operation State. If the Master and the slave are communicating correctly, the operation state will be C0 (hex).
- 5 Note the values in SLAVE CFG LIST, TRANSFER LIST and SLAVE DIAG LIST. If the Master and slave are communicating successfully, the values in SLAVE CFG LIST will match the values in TRANSFER LIST.


**Note:** Each list is a hexadecimal representation of a bitmap of slave addresses on the PROFIBUS network. In the illustration above, a value of 20h in the rightmost columns of both of the first two lists means one slave at address 125 is configured **and** communicating with the Master. Notice that the values in the leftmost columns of the first two lists do not match. This means that the slave at address 1 is configured, but is not communicating with the Master. The slave at address 3, however, is both configured **and** communicating with the Master. Below is an explanation on how to read these bitmaps.

Each (XX XX) grouping represents one word containing 16 slave addresses.

***In SLAVE CFG LIST in the example above***

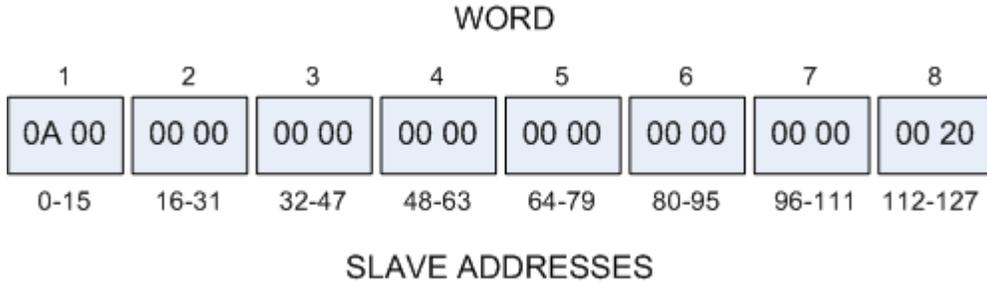


To find out which slave addresses in Word 1 are occupied by configured slaves, expand Word 1's hexadecimal numbers into a bitmap.

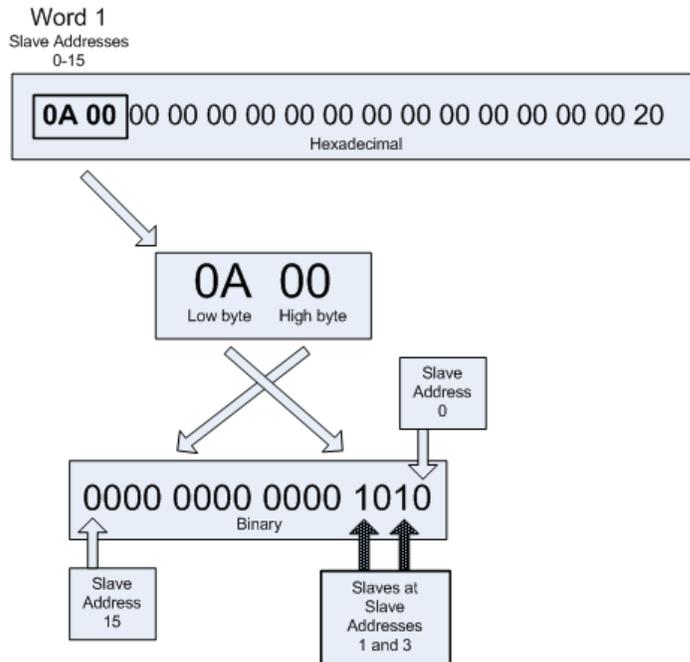

**Note:** A zero (0) in the bitmap indicates an unoccupied slave address; one (1) indicates that the slave address is occupied by a configured slave.


Here is the bitmap for Word 8:

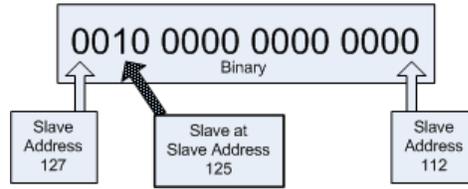

So from the SLAVE CFG LIST, we can tell that there are configured slaves at slave addresses 1, 3 and 125.

The TRANSFER LIST indicates which configured slaves are actually communicating with the Master. Notice that Word 1 is different in the TRANSFER LIST.

Here is the bitmap for Word 1 in the TRANSFER LIST:

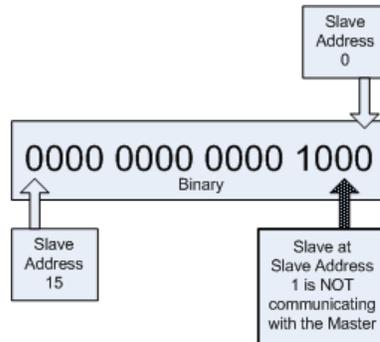


In conclusion, there are configured slaves at addresses 1,3 and 125, but only the slaves at addresses 3 and 125 are communicating with the Master.

**Tip:** This slave status data is also found in the M1 file, which is copied to the user-accessible N11 file by the sample ladder logic. You can use this data for process control. For more information, see Backplane Data Transfer (page 115).

### 2.4.4 Viewing the Data Files in RSLogix 500


**Note:** For this procedure, you must connect a serial cable from the serial port on your PC to the DB9M connector on the SLC processor.

- 1 Open the sample ladder logic in RSLogix 500.
- 2 Open the **COMMUNICATIONS** menu, and choose **GO ONLINE**.
- 3 In the *Project Browser* window, double-click **N11** data file.
- 4 Verify that N11:20 is the last word of the slave configured list

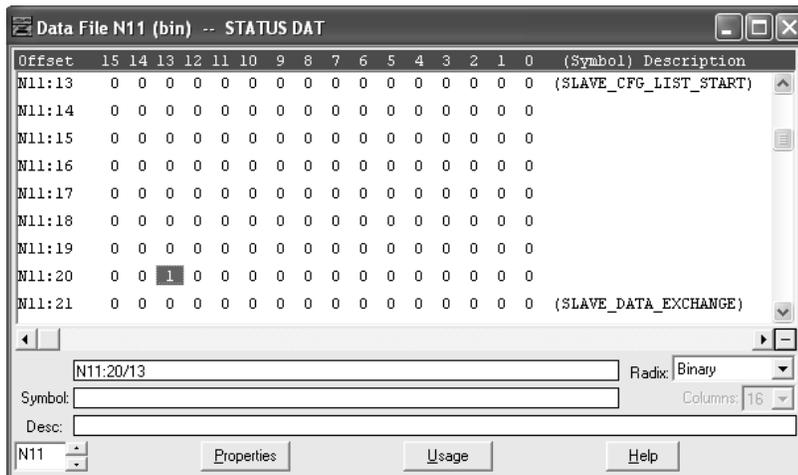

The bit in N11:20/13 is set, indicating that slave 125 is configured.

- 5 Next, check the slave data exchange list at N11:28

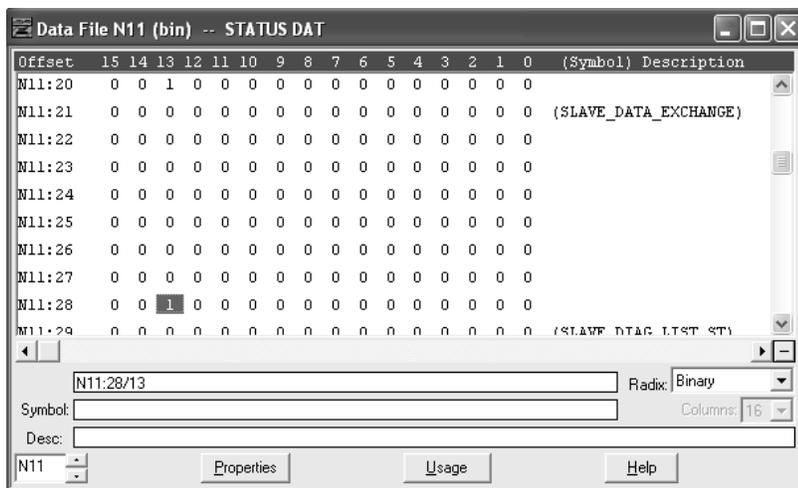

The bit in N11:28/13 is set, indicating that slave 125 is exchanging data.


**Tip:** You can add ladder logic to perform an action based on the values of these tags, for example to determine if a slave is misconfigured.

If the values of these tags show that the slave is configured, but is not transferring data, the slave is not configured correctly. Refer to the documentation provided with your PROFIBUS slave for troubleshooting procedures.


### 2.4.5 Sending a Mailbox Message in RSLogix 500

**Note:** For this procedure, you must connect a serial cable from the serial port on your PC to the DB9M connector on the SLC processor.

- 1 Open the sample ladder logic in RSLogix 500.
- 2 Open the **COMMUNICATIONS** menu, and choose **GO ONLINE**.
- 3 In the *Project Browser* window, double-click the **B3** Data File.
- 4 Enter **1** (number one) in B3:0/4

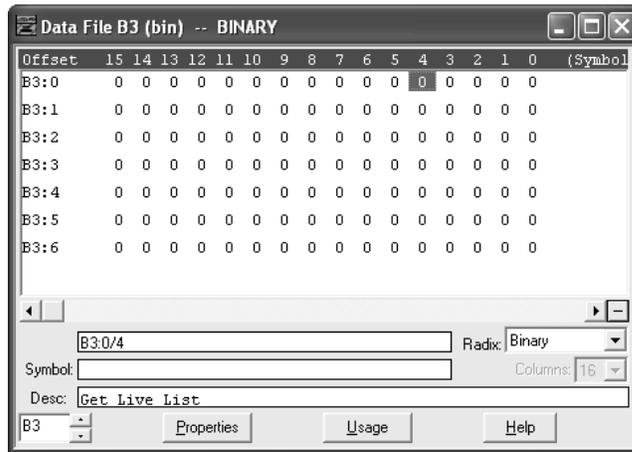

- 5 Next, double-click on N51 and read the response to verify that the MVI46-PDPMV1 responded to the GetLiveList message. The PROFIBUS Master Address in this case =1. Notice that the value has changed from 4 (not communicating) to 3 (Master).

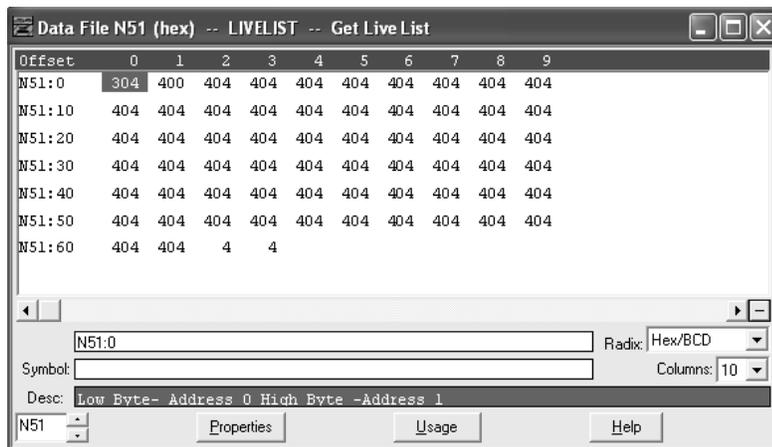

For address [125] (the PROFIBUS Slave Address configured in the Slave Configuration (page 31) procedure), notice that the value of N51:62 High byte has changed from 4 (not communicating) to 0 (Slave OK).

## 3 Ladder Logic

### *In This Chapter*


- ❖ Adding the Module to an Existing Project..... 60

Ladder logic is required for the MVI46-PDPMV1 module to work. Tasks that must be handled by the ladder logic are module data transfer, special block handling, and status data receipt. Additionally, a power-up handler may be needed to handle the initialization of the module's data and to clear any processor fault conditions.


The sample ladder logic, on the *inRAx CD-ROM*, is extensively commented, to provide information on the purpose and function of each rung. For most applications, the sample ladder will work without modification.

### 3.1 Adding the Module to an Existing Project


- 1 Add the MVI46-PDPMV1 module to the project. Double-click **I/O CONFIGURATION** in the *Controller Organization* window.

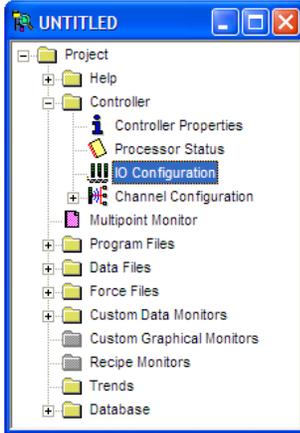


- 2 This action opens the *I/O Configuration* dialog box. Select an empty slot in the left pane, and then scroll to the bottom of the right pane.

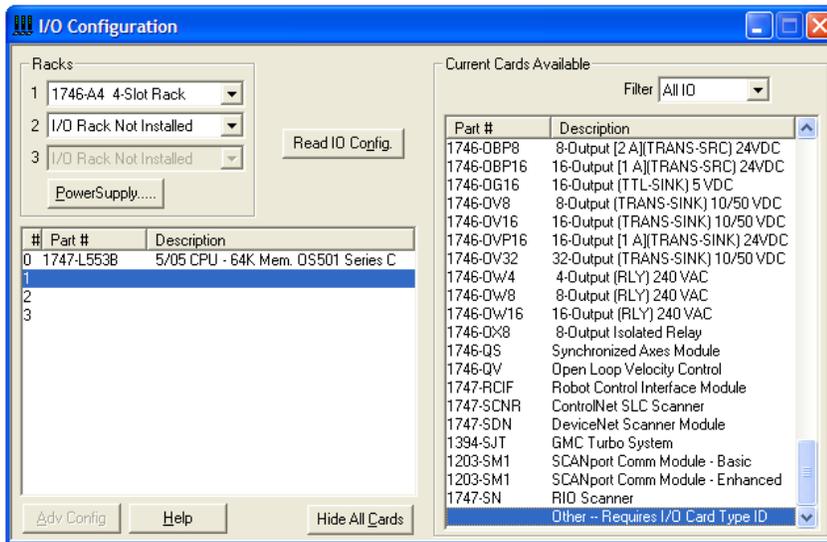


- 3 In the right pane, double-click **OTHER -- REQUIRES I/O CARD TYPE ID**. This action opens the **"OTHER" TYPE IO CARD** dialog box.

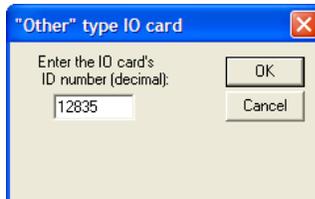

- 4 The module's I/O card ID number is 12835. Enter that value in the ID number field, and then click **OK** to dismiss the dialog box.
- 5 Observe that the module you selected is now in the list in the left pane of the *I/O Configuration* dialog box.

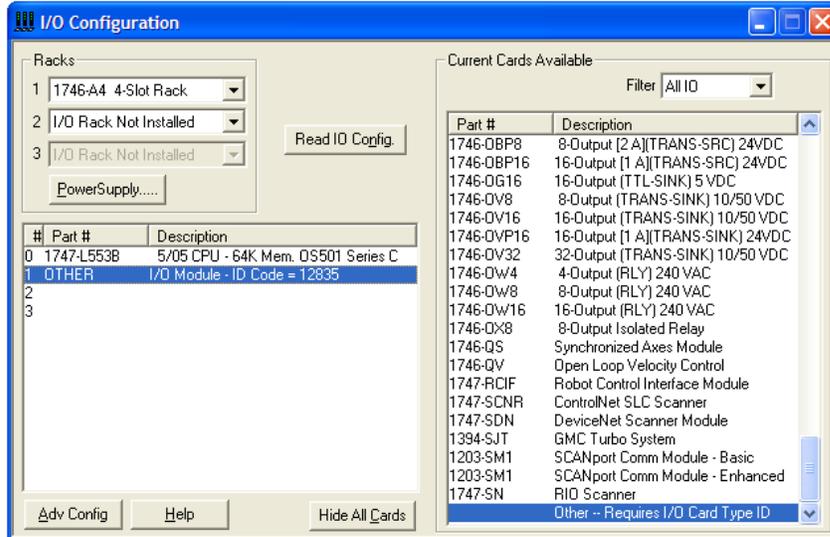

- 6 Select and double-click the new module in the left pane. This action opens the *Advanced I/O Configuration* dialog box. Fill in the dialog box with the values shown in the following illustration.

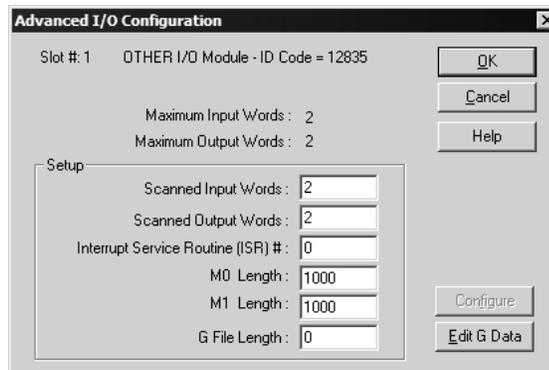

Field	Value
Scanned Input Words	2
Scanned Output Words	2
Interrupt Service Routine (ISR)#	0
M0 Length	1000
M1 Length	1000
G File Length	0

- 7 Click **OK** to save your configuration.

- 8 Copy the ladder logic and data files from the sample program and paste them into your existing program.

**Important:** Take care not to overwrite existing data files in your application with data files in the sample application. Rename either the source or the destination data files, and then search and replace references in the ladder for instances of any renamed files.

- 9 Save and download (page 19) the new application to the controller and place the processor in RUN mode.

## 4 Mailbox Messaging

### In This Chapter

❖ Mailbox Message Queuing .....	64
❖ Special Function Mailbox Messaging Commands .....	65
❖ Receiving Mailbox Message Responses from the Module .....	89
❖ Mailbox Messaging Error Codes .....	90

The MVI46-PDPMV1 PROFIBUS DP Master uses a process called Mailbox Messaging to exchange parameter data between the processor, Master, and slave devices. This process provides a way to encapsulate and prioritize commands and data sent between the PROFIBUS Master and slaves.

The PROFIBUS DP-V1 protocol specifies two types of data transmission messages (telegrams): Cyclic Data Telegrams and Acyclic Data Telegrams. Cyclic data communication is the exchange of normal slave input and output (I/O) data and is handled automatically by the Master in a defined, recurring, deterministic sequence based on the configuration you create in ProSoft Configuration Builder (PCB).

Acyclic communication extends data communication beyond normal I/O data to allow moving field device parameterization and calibration data over the bus during runtime and to allow for extended diagnostics and alarm messages. Acyclic data telegrams are transmitted in the gaps between cyclic data telegrams and, therefore, have a lower priority and get less bandwidth than cyclic data.

Mailbox Messaging commands are incorporated into the sample ladder logic. Mailbox messages and responses to mailbox messages are stored in mailbox data types.

The following chapter discusses these features in more detail.

## 4.1 Mailbox Message Queuing

The MVI46-PDPMV1 module operates asynchronously on the Mailbox Messages and as such provides for the queuing of the messages as they are received. The following queue sizes are used in the module.

Queue Type	Queue Size Max	Description
Output message from processor	126	Number of messages that the MVI46 module will queue by type of message. Note that status of the queues can be monitored via the Queue Message Count values.
Input messages for processor	126	
Alarm messages from slaves for processor	500	

### 4.1.1 Queue Timeouts

The MVI46-PDPMV1 module will only allow a message to stay in a queue for up to 10 seconds. If the PROFIBUS Master (for output messages) or the processor (for input and alarm messages) has not successfully received a message within 10 seconds, the module will clear the message out of the queue.

## 4.2 Special Function Mailbox Messaging Commands

The MVI46-PDPMV1 module supports some extended PROFIBUS functions using a mailbox data exchange mechanism.

The MVI46-PDPMV1 module supports the following special functions through this mailbox messaging scheme:

### Initiated from Processor

Message	Description
Set Operation Mode	Controls the operating state of the PROFIBUS Master
Set Slave Mode	Sends special control command to one or several slaves (Sync/Freeze)
Get Slave Diag	Gets diagnostic information from a slave
Get Slave Config	Gets slave configuration
Set Slave Address	Sets node address of a slave (if supported by the slave)
Get Live List	Gets information from all nodes on the network
MSAC1 Read	DPV1 acyclic read (Class 1)
MSAC1 Write	DPV1 acyclic write (Class 1)
Start Slave	Starts slaves dynamically
Stop Slave	Stops slaves dynamically

### DPV1 Alarm Handling: Generated by Slave Devices

Message	Description
Alarm Indications	Spontaneous alarm indication from DPV1 slave. Structure of data is slave-dependent
Alarm Confirmation	This message is sent by the MVI46 module automatically as a confirmation to the alarm indications.

The provided simplified ladder logic is required to implement these messaging mailbox exchanges.

Sending a mailbox message to the MVI46-PDPMV1 module is a relatively simple process, however, it is important to follow a certain sequence.

**Mailbox Message Structure: To MVI46 module**

Byte Offset	Type	Description
0	Message ID	Processor logic or user set. The Message ID field is used by the MVI46 module to detect a new message in the PROFIBUS output data image. When a non-zero value is detected, the message is processed immediately. The sample ladder logic assigns specific message IDs to different mailbox messages.
1	Message Info	See individual commands for data values to be entered in each of these register locations.
2	Command	
3	Data Size	
4	Frame Count	
5	Frame Number	
6	Offset High	
7	Offset Low	
8	Extended Word 1	
9	Extended Word 2	
10	Extended Word 3	
11	Extended Word 4	
12	Extended Word 5	
13	Extended Word 6	
14	Extended Word 7	
15	Extended Word 8	
-	See individual commands	
149		

**4.2.1 Mailbox Message: Set Slave Mode**

In addition to station-related user data transfer, which is executed automatically, the Master can send control commands to a single slave, a group of slaves, or all slaves simultaneously. These control commands are transmitted as multicast commands. This permits use of sync and freeze modes for event-controlled synchronization of the slaves.

The slaves begin sync mode when they receive a sync command from their assigned Master. The outputs of all addressed slaves are then frozen in their current state. During subsequent user data transmissions, the output data are stored on the slaves, but the output states remain unchanged. The stored output data are not sent to the outputs until the next sync command is received. Sync mode is concluded with the unsync command.

Similarly, a freeze control command causes the addressed slaves to assume freeze mode. In this operating mode, the states of the inputs are frozen until the Master sends the next freeze command. Freeze mode is concluded with the unfreeze command.

**Note 1:** It is only possible to send control commands when operating mode is either "CLEAR" or "OPERATE".  
**Note 2:** Not all slaves support this feature. Refer to the documentation for the actual slave for more information.

Parameter	Description
Command Initiator	Application
Command Name	SET SLAVE MODE
Command Number	0300h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

**Command and Response Layout: Set Slave Mode**

	Command		Response		
Message ID	(ID)		(ID)		
Message information	4002h		0002h		
Command	0003h		0003h		Set Slave Mode
Data size	0000h		0000h		
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	Slave Address	Group Select	Slave Address	Group Select	
Extended word 2	Control Command		Control Command		
Extended word 3	-		-		
Extended word 4	-		-		
Extended word 5	-		-		
Extended word 6	-		-		
Extended word 7	-		Extended Fault Information		
Extended word 8			Fault Information		

**Message Information**

Refer to Message Information (page 90).

**Slave Address**

Range 1 to 125; 127

If the request applies for only one slave, that slave address must be entered in the range 1 to 125. If a slave group is to be addressed, slave address should be 127 (multicast address).

**Group Select**

Range 01h to FFh (Bit Coded)

This parameter determines which group to address. Refer to the following example:

b7	b6	b5	b4	b3	b2	b1	b0
Group 8	Group 7	Group 6	Group 5	Group 4	Group 3	Group 2	Group 1

**Example:**

To address Group 1, 2, and 4, the Group Select value should be D0h. If an individual slave should be addressed, the correct group selection must also be made, because the slave will ignore the message if it does not belong to the requested group(s).

What group(s) a slave belongs to is determined during network configuration, and is downloaded during initialization to each slave via the PROFIBUS telegram *Set\_Prm*.

**Control Command**

This parameter specifies the command to send:

Bit	Explanation
0 (LSB)	Reserved, set to zero
1	Reserved, set to zero
2	Unfreeze input data
3	Freeze input data
4	Unsynchronize output data
5	Synchronize output data
6	Reserved, set to zero
7 (MSB)	Reserved, set to zero

**Combinations of the bits (Unsync/Sync and Unfreeze/Freeze)**

Bits 0 or 6	Bits 1 or 7	Explanation
0	0	No function
0	1	Function will be activated
1	0	Function will be inactive
1	1	Function will be inactive

**Fault Information and Extended Fault Information**

<b>"Fault Information" Contents</b>		<b>"Extended Fault Information" Contents</b>	
0100h	Address out of range	-	
0200h	Group number 0 not permitted	-	
0A00h	Failed to send Global Control request	0A00h	Incorrect operation mode (Clear/Operate Only)
		0150h	Invalid Freeze Group (Group is not initiated to be Freeze Group)
		0250h	Invalid Sync Group (Group is not initiated to be Sync Group)
		0350h	Incorrect Control Command
		0450h	No Sync -/ or Freeze groups enabled in Master configuration
FE00h	Command not possible in Class 2 only mode	-	
FF00h	Module not initialized	-	

**4.2.2 Mailbox Message: Get Slave Diagnostics**

This command reads diagnostic data from a specified slave.

**Note:** The response data size depends on the actual slave implementation. Range 6 to 244.

<b>Parameter</b>	<b>Description</b>
Command Initiator	Application
Command Name	GET SLAVE DIAGNOSTICS
Command Number	0400h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

**Command and Response Layout: Get Slave Diagnostics**

	Command		Response		
Message ID	(ID)		(ID)		
Message information	4002h		0002h		
Command	0004h		0004h		Get Slave Diagnostics
Data size	0000h		(Size of data)		
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	Slave Address	Type of Request	Slave Address	Type of Request	
Extended word 2	-		-		
Extended word 3	-		-		
Extended word 4	-		-		
Extended word 5	-		-		
Extended word 6	-		-		
Extended word 7	-		Extended Fault Info		
Extended word 8	-		Fault Information		
	Station Status 1		Station Status 2		Response data word 1
	Station Status 3		Station Status 4		Response data word 2
	Ident Number				Response data word 3
	Extended Diagnostic Data				Response data word 4
					...
					...
					Response data word n

**Message Information**

Refer to Message Information (page 90).

**Slave Address**

Range 1 to 125; specifies the slave from which to read diagnostics.

### **Type of request**

**00h:** Internal slave diagnostic request. Returns the diagnostic information stored in the Master. Can only be requested for slaves configured by the Master.

**Note:** Not allowed when operating in "Class 2-Only" mode.

**01h:** External slave diagnostic request. Sends a diagnostic request on the network to the specified slave. Can be requested for all slaves on the network.

### **Error code [1 ...4]**

If "Return Code" equals 8030h ("Negative indication from lower layer"), status values according to the DP-specification may be available in "Error Code 1". Error Codes 2 to 4 are reserved.

Refer to Mailbox Messaging Error Codes (page 90).

### **Return Code**

Refer to Mailbox Messaging Error Codes (page 90)

### **Fault Information**

If "Invalid Other" is returned in the Message Information word in the header of the response, information about the fault can be found here.

**0100h:** Address out of range.

**0200h:** Incorrect "Type of request"

**0A00h:** Failed to read diagnostic data from slave. Refer to Return Codes (page 91) for additional fault information.

**0B00h:** Remote station failure. Refer to Return Codes (page 91) for additional fault information.

**FE00h:** Command not possible; module operates as a Class 2 Master only.

**FF00h:** Module offline (not initialized or no valid database).

### **Station Status [1 ... 3]**

Refer to EN50170 Vol. 2 for more information.

### **Master Address**

Address of the Master that parameterized the slave.

### **Ident Number**

Unique ID assigned by the PROFIBUS User Organization.

### **Extended Diagnostic Data**

Slave user-specific data. Refer to the documentation for the actual slave for more information.

### 4.2.3 Mailbox Message: Get Slave Configuration

This command reads the actual configuration (identifier bytes) of a specified slave.

**Note:** The response data size depends on the actual slave implementation. Range 6 to 244.

Parameter	Description
Command Initiator	Application
Command Name	GET SLAVE CONFIGURATION
Command Number	0500h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

#### Command and Response Layout: Get Slave Configuration

	Command	Response	
Message ID	(ID)	(ID)	
Acyclic Message Status Word	4002h	0002h	
Command	0005h	0005h	Get Slave Configuration
Data size	0000h	(Size of data)	Number of identifier bytes (n)
Frame count	0001h	0001h	
Frame number	0001h	0001h	
Offset high	0000h	0000h	
Offset low	0000h	0000h	
Extended word 1	Slave Address	Slave Address	
Extended word 2	-	-	
Extended word 3	-	-	
Extended word 4	-	-	
Extended word 5	-	Error Code 1   Error Code 2	
Extended word 6	-	Error Code 3   Error Code 4	
Extended word 7	-	Return Code	
Extended word 8	-	Fault Information	
		Identifier byte 1	Response data word 1
		Identifier byte 2	Response data word 2
		Identifier byte 3	Response data word 3
		...	...
		Identifier byte n	Response data word n

**Acyclic Message Status Word**

Refer to Acyclic Message Status Word (page 90).

**Slave Address**

Range 1 to 125; specifies the slave from which to read the configuration.

**Error Code [1 ... 4]**

If "Return Code" equals 3080h ("Negative indication from lower layer"), status values according to the DP-specification may be available in "Error Code 1", Error Codes 2 through 3 are reserved. Refer to Mailbox Messaging Error Codes (page 90).

**Return Code**

Refer to Mailbox Messaging Error Codes (page 90).

**Fault Information**

If "Invalid other" is returned in the Acyclic Message Status Word in the header of the response, information about the fault can be found here. Refer to Acyclic Message Status Word (page 90).

**0100h:** Address out of range.

**0A00h:** Failed to execute request. Refer to Return Codes (page 91) for additional information.

**0B00h:** Remote station failure. Refer to Return Codes (page 91) for additional information.

**FF00h:** Module not initialized.

**Identifier Bytes [1 ... n]**

Refer to EN50170 Vol. 2 for information on the structure of these bytes. In addition, refer to the documentation provided with the slave device for more information.

**4.2.4 Mailbox Message: Set Slave Address**

This command makes it possible to set the node address of a specified slave, if the slave supports this feature.

**Note:** The message data size depends on the actual slave implementation. Range 0 to 240 bytes.

Parameter	Description
Command Initiator	Application
Command Name	SET SLAVE ADDRESS
Command Number	0600h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

**Command and Response Layout: Set Slave Address**

	Command		Response		
Message ID	(ID)		(ID)		
Message information	4002h		0002h		
Command	0006h		0006h		Set Slave Address
Data size	(Size of data)		(Size of data)		No. of Slave Data bytes (n)
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	Current Slave Addr.	New Slave Address	Current Slave Addr.	New Slave Address	
Extended word 2	Slave Ident Number		Slave Ident Number		
Extended word 3	No_add_Chg		No_add_Chg		
Extended word 4	-		-		
Extended word 5	-		Error Code 1	Error Code 2	
Extended word 6	-		Error Code 3	Error Code 4	
Extended word 7	-		Return Code		
Extended word 8	-		Fault Information		
Message Data byte 1	Slave Data 1		Slave Data 1		
Message Data byte 2	Slave Data 2		Slave Data 2		
Message Data byte 3	Slave Data 3		Slave Data 3		
...	...		...		
Message Data byte "n"	Slave Data n		Slave Data n		

**Message Information**

Refer to Message Information (page 90).

**Current Slave Address**

Range 1 to 125; specifies the current address of the slave.

**New Slave Address**

Range 1 to 125; specifies the new address of the slave.

### **Slave Ident Number**

Ident number for the slave; which address should be altered.

### **No\_add\_Chg**

This parameter specifies whether it is allowed to change the slave address again later. If this is not allowed, it is only possible to change the address with this function after initial reset. After the initial reset, the slave takes the default address of 126.

**00h:** Change of address is still possible at a later stage.

**01h-FFh:** Change of address is only possible after the initial address (the default address = 126).

### **Error Code [1 ...4]**

If "Return Code" equals 3080h ("Negative indication from lower layer"), status values according to the DP-specification in available in "Error Code 1". Error Codes 2 and 3 are reserved. Refer to Return Codes (page 91).

### **Return Code**

Refer to Return Codes (page 91).

### **Fault Information**

If "Invalid Other" is returned in the Message Information word in the header of the response, information about the fault can be found here:

**0100h:** Current slave address out of range.

**0200h:** New slave address out of range.

**0A00h:** Failed to execute request.

**0B00h:** Remote station failure.

**FF00h:** Module not initialized.

Refer to Mailbox Messaging Error Codes (page 90).

### **Slave Data**

With this parameter, it is possible to deliver user-specific data. The data is stored in the slave if possible (EEPROM, FLASH, or other storage media).

### 4.2.5 Mailbox Message: Get Live List

This command returns 127 bytes of information about the nodes on the network. Every byte stands for one bus subscriber, and the position of the byte in the response data assigns the address (0 to 126), the content assigns the Station Type.

This command can be sent in all operation modes (STOP, CLEAR, and OPERATE), however the module must be initialized properly.

Parameter	Description
Command Initiator	Application
Command Name	GET LIVE LIST
Command Number	1800h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

#### Command and Response Layout: Get Live List

	Command	Response	
Message ID	(ID)	(ID)	
Message information	4002h	0002h	
Command	0018h	0018h	Get Live List
Data size	0000h	0007h	127 Bytes of Data
Frame count	0001h	0001h	
Frame number	0001h	0001h	
Offset high	0000h	0000h	
Offset low	0000h	0000h	
Extended word 1	-	-	
Extended word 2	-	-	
Extended word 3	-	-	
Extended word 4	-	-	
Extended word 5	-	-	
Extended word 6	-	-	
Extended word 7	-	Return Code	
Extended word 8	-	Fault Information	
Message Data byte 1		Station Type 0	Response Data Byte 1
Message Data byte 2		Station Type 1	Response Data Byte 1
Message Data byte 3		Station Type 2	Response Data Byte 1
...		...	Response Data Byte 1
Message Data byte "n"		Station Type 126	Response Data Byte 1

**Message Information**

Refer to Message Information (page 90).

**Station Type [0 ... 126]**

**00h:** Slave Station

**01h:** Master Station not yet ready for Token ring (station only physically at the bus)

**02h:** Master Station ready to enter Token ring (there is not yet any Token transmission)

**03h:** Master Station in Token Ring (Token transmission through the station)

**04h:** Station does not exist

**Fault Information**

If "Invalid Other" is returned in the Message Information word in the header of the response, information about the fault can be found here. Refer to Message Information (page 90).

**0AH00:** Failed to build Live List.

**FF00h:** Module offline (not initialized or no valid database)

**4.2.6 Mailbox Message: Acyclic Data Read: Class 1**

This command initiates a DPV1 Class 1 acyclic read request. Refer to EN50170 (DPV1) for more information.

Parameter	Description
Command Initiator	Application
Command Name	MSAC1 READ
Command Number	2000h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

**Command and Response Layout: Acyclic Read**

	Command		Response		
Message ID	(ID)		(ID)		
Message information	4002h		0002h		
Command	0020h		0020h		Acyclic Read
Data size	0000h		(Size of data)		Number of data bytes (n)
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	Slave Addr.	Slot Number	Slave Addr.	Slot Number	
Extended word 2	Index	Length	Index	Length	
Extended word 3	-		-		
Extended word 4	-		-		
Extended word 5	-			Error Decode	
Extended word 6	-		Error Code 1	Error Code 2	
Extended word 7	-		Extended Fault information		
Extended word 8	-		Fault Information		
			Data 1		Response Data byte 1
			Data 2		Response Data byte 1
			Data 3		Response Data byte 1
			...		...
			Data n		Response Data byte 1

**Message Information**

Refer to Message Information (page 90).

**Slave Address**

Station address of the slave responder.

**Slot Number and Slot Index**

Used in the slave to address the desired data block.

### Length

This parameter specifies the number of bytes of the data block to read. If the server data block length is less than requested, the length of the response will be the actual length of the data block. If the server data block is greater or equal, the response will contain the same amount of data.

The slave may answer with an error response if data access is not allowed.

### Data [1 ... n]

Returned data.

### Fault Information and Extended Fault Information

If "Invalid Other" is returned in the Message Information word in the header of the response, information about the fault can be found here.

"Fault Information"		"Extended Fault Information" Contents
0100h	Address out of range	-
0A00h	Failed to execute request	Refer to Return Codes (page 91).
0B00h	Remote station failure	
1000h	Remote station DPV1 failure	Function_Number
1100h	Length out of range (>240 bytes)	-
1200h	Slave does not support DPV1	-
1300h	Slave not active or not present in configuration	-
FE00h	Command not possible in "Class 2-Only" mode	-
FF00h	Module offline (not initialized or no valid database)	-

### Error Decode, Error Code 1 and Error Code 2

If "Fault Information" contains error code 1000h, more information according to the DPV1 specification can be found here.

### 4.2.7 Mailbox Message: Acyclic Data Write: Class 1

This command initiates a DPV1 Class 1 acyclic write request. Refer to EN50170 (DPV1) for more information.

Parameter	Description
Command Initiator	Application
Command Name	MSAC1 WRITE
Command Number	2100h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

**Command and Response Layout: Acyclic Write**

	Command		Response		
Message ID	(ID)		(ID)		
Acyclic Message Status Word	4002h		0002h		
Command	0021h		0021h		Acyclic Write
Data size	(Size of data)		(Size of data)		Number of data bytes (n)
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	Slave Addr.	Slot Number	Slave Addr.	Slot Number	
Extended word 2	Index	Length	Index	Length	
Extended word 3	-		-		
Extended word 4	-		-		
Extended word 5	-			Error Decode-	
Extended word 6	-		Error Code 1	Error Code 2	
Extended word 7	-		Extended Fault information		
Extended word 8	-		Fault Information		
Message Data byte 1	Data 1		Data 1		
Message Data byte 2	Data 2		Data 2		
Message Data byte 3	Data 3		Data 3		
...	...		...		
Message Data byte n	Data n		Data n		

**Acyclic Message Status Word**

Refer to Acyclic Message Status Word (page 90).

**Slave Address**

Station address of the slave responder.

**Slot Number and Slot Index**

Used in the slave to address the desired data block.

**Length**

This parameter specifies the number of bytes to write. If the destination data block size is less than requested, the response will contain an error message. If the data block length is greater than or equal to the requested length, the response contains the number of bytes that have been written. The slave may answer with an error response if data access is not allowed.

**Data [1 ... n]**

Data that should be written.

**Fault Information and Extended Fault Information**

If "Invalid Other" is returned in the Acyclic Message Status Word in the header of the response, information about the fault can be found here:

<b>"Fault Information"</b>		<b>"Extended Fault Information" Contents</b>
0100h	Address out of range	-
0A00h	Failed to execute request	Refer to Return Codes (page 91).
0B00h	Remote station failure	
1000h	Remote station DPV1 failure	Function_Number
1100h	Length out of range (>240 bytes)	-
1200h	Slave does not support DPV1	-
1300h	Slave not active or not present in configuration	-
FE00h	Command not possible in "Class 2-Only" mode	-
FF00h	Module offline (not initialized or no valid database)	-

**Error Decode, Error Code 1, and Error Code 2**

If "Fault Information" contains error code 1000h, more information according to the DPV1 specification can be found here.

**4.2.8 Mailbox Message: Alarm Indication**

This message indicates to the application that a DPV1 slave has transferred an alarm message to the Master. This mailbox message is sent spontaneously by the module; the module itself initiates the mailbox communications.

Detailed information about the cause of the alarm is presented in extended words 1 to 3 and in the message data field (see below).

**Command and Response Layout: Alarm Indication**

	Command		Response	
Message ID	(ID)		(ID)	
Message information	4002h		0002h	
Command	0022h		0022h	Alarm Indication
Data size	(request length)		0000h	
Frame count	0001h		0001h	
Frame number	0001h		0001h	
Offset high	0000h		0000h	
Offset low	0000h		0000h	
Extended word 1	Slave Address	Slot Number	-	
Extended word 2	Seq Number	Alarm Spec Ack	-	
Extended word 3	Alarm Type	Ext Diag	-	
Extended word 4	-		-	
Extended word 5	-		-	
Extended word 6	-		-	
Extended word 7	-		-	
Extended word 8	Fault Information		-	
Message Data byte 1	Data 1			
Message Data byte 2	Data 2			
Message Data byte 3	Data 3			
...	...			
Message Data byte n	Data n			

**Slave Address**

Station address of the slave that issued the alarm.

**Slot Number**

Used by the slave to indicate the source of the alarm. Range 0 to 254.

**Seq Number**

Unique identification number of the alarm. Range 0 to 31.

**Alarm Spec Ack**

Provides additional information about the alarm, such as if an error appears or disappears. Also indicates whether the slave needs additional knowledge from the Master. For example: writing to a certain memory area with an Acyclic Write request.

**Alarm Type**

Identifies the alarm type such as Process Alarm, Plug Alarm, and so on. Range 1 to 6, 32 to 126.

**Extended Diagnostic Flag**

**Ffh**: Slave sends an alarm message with "Extended Diag flag" set

**00h**: Slave sends an alarm message with "Extended Diag flag" cleared

**Data [1 ... n]**

Additional manufacturer-specific alarm information (Alarm - PDU)

**Fault Information**

If the Message Information word in the header of the message indicates "Invalid Other", addition information is available in this register.

**3E00h**: Module has received an invalid alarm indication data structure from a DPV1 slave ("Slave Address" contains the node address of the slave that issued the erroneous indication).

Refer to the PNO document "Extensions to EN50170 (DPV)" for more information on how to interpret these parameters.

**4.2.9 Mailbox Message: Set Operating Mode**

This command allows setting the operating mode of the module (STOP, CLEAR, or OPERATE).

Parameter	Description
Command Initiator	Application
Command Name	SET OPERATING MODE
Command Number	0200h
Fragmented	No
Extended Header Data	Fault information may be returned in the header of the response.

**Command and Response Layout: Set Operating Mode**

	Command		Response		
Message ID	(ID)		(ID)		
Message information	4002h		0002h		
Command	0002h		0002h		Set Operation Mode
Data size	0000h		0000h		
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	Mode	Conf. Req	Mode	Conf. Req	
Extended word 2	-		-		
Extended word 3	-		-		
Extended word 4	-		-		
Extended word 5	-		-		
Extended word 6	-		-		
Extended word 7	-		-		
Extended word 8	-		Fault Information		

**Mode**

**40h:** STOP

**80h:** CLEAR

**C0h:** OPERATE

**Conf. Req.**

**00h:** Confirmation is not required

**01h:** Confirmation required. All confirmations are automatically sent by the Master; the user is not required to send a confirmation message.

**Fault Information**

If "Invalid Other" is returned in the Message Information word in the header of the response, information about the fault can be found here. Refer to Return Codes (page 91) for more information.

**0100h:** Invalid operating mode

**FF00h:** Module not initialized

### 4.2.10 Mailbox Message: Start Slave

This mailbox message starts a selection of slaves that was previously removed from the processing cycle by means of the mailbox message FB\_APPL\_STOP\_SLAVE.

This message is allowed in all Operation modes (STOP, CLEAR and OPERATE).

**Note:** The message will be accepted even if one or several slaves are not part of the configuration and can therefore obviously not be started. However, the application can find out about this situation by evaluating the "Fault information" and "Message data words" of the response.

#### Command and Response Layout: Start Slave

	Command		Response	
Message ID	(ID)		(ID)	
Message information	4002h		0002h	
Command	000Bh		000Bh	
Data size	007Eh		007Eh	
Frame count	0001h		0001h	
Frame number	0001h		0001h	
Offset high	0000h		0000h	
Offset low	0000h		0000h	
Extended word 1				
Extended word 2	-		-	
Extended word 3	-		-	
Extended word 4	-		-	
Extended word 5	-		-	
Extended word 6	-		-	
Extended word 7	-		Additional Fault Information	
Extended word 8	-		Fault Information	
Message data word 1	Slave 0	Slave 1	Slave 0	Slave 1
Message data word 2	Slave 2	Slave 3	Slave 2	Slave 3
Message data word 3 to 62	...	...	...	..
Message data word 63	Slave 124	Slave 125	Slave 124	Slave 125

Start Slave

**Command:**

- Message data word 1-63  
Byte-array stating which slave/slaves to start. Array index is equal to slave address.  
0: Do not affect slave  
1: Start slave  
2-255: Reserved

**Response:**

- Message information (in response header)  
"Invalid Data Size" is returned if Data size in the command header does not equal 126.  
If "Invalid Other" is returned, further information is to be found in Extended word 8.
- Additional Fault information (Extended word 7)  
If Extended word 8 equals 0x000A -"Failed to execute request" additional info can be found here.
- Fault information (Extended word 8)  
0x0001: Invalid setting in Message data word 1-63 of the command.  
0x0002: At least one slave reports a warning. Refer to Message data word 1-63.  
0x000A: Failed to execute request. Additional fault information is to be found in Extended word 7.  
0x00FE: Command not possible, module operates as class 2 Master only.  
0x00FF: Module not initialized (this command is only possible after END\_INIT).
- Message data word 1-63  
Byte-array stating the status of the slaves. Array index is equal to slave address.  
0: Slave unaffected  
1: Slave started  
2: Warning - Slave could not be started because it is not part of the configuration

### 4.2.11 Mailbox Message: Stop Slave

This mailbox message stops a selection of slaves from the processing cycle. This message is allowed in all Operation modes (STOP, CLEAR and OPERATE).

**Note:** The message will be accepted even if one or several slaves are not part of the configuration and can therefore obviously not be stopped. However, the application can find out about this situation by evaluating the "Fault information" and "Message data words" of the response.

#### Command and Response Layout: Stop Slave

	Command		Response		
Message ID	(ID)		(ID)		
Message information	4002h		0002h		
Command	000Ch		000Ch		Stop Slave
Data size	007Eh		007Eh		
Frame count	0001h		0001h		
Frame number	0001h		0001h		
Offset high	0000h		0000h		
Offset low	0000h		0000h		
Extended word 1	-		-		
Extended word 2	-		-		
Extended word 3	-		-		
Extended word 4	-		-		
Extended word 5	-		-		
Extended word 6	-		-		
Extended word 7	-		Additional Fault Information		
Extended word 8	-		Fault Information		
Message data word 1	Slave 0	Slave 1	Slave 0	Slave 1	
Message data word 2	Slave 2	Slave 3	Slave 2	Slave 3	
Message data word 3 to 62	...	...	...	...	
Message data word 63	Slave 124	Slave 125	Slave 124	Slave 125	

**Command:**

- Message data word 1-63  
Byte-array stating which slave/slaves to stop. Array index is equal to slave address.  
0: Do not affect slave  
1: Stop slave  
2-255: Reserved

**Response:**

- Message information (in response header)  
"Invalid Data Size" is returned if Data size in the command header does not equal 126.  
If "Invalid Other" is returned, further information is to be found in Extended word 8.
- Additional Fault information (Extended word 7)  
If Extended word 8 equals 0x000A -"Failed to execute request" additional info can be found here.
- Fault information (Extended word 8)  
0x0001: Invalid setting in Message data word 1-63 of the command.  
0x0002: At least one slave reports a warning. Refer to Message data word 1-63.  
0x000A: Failed to execute request. Additional fault information is to be found in Extended word 7.  
0x00FE: Command not possible; module operates as class 2 Master only.  
0x00FF: Module not initialized (this command is only possible after END\_INIT).
- Message data word 1-63  
Byte-array stating the status of the slaves. Array index is equal to slave address.  
0: Slave unaffected  
1: Slave stopped  
2: Warning - Slave could not be stopped because it is not part of the configuration  
3: Warning - Slave already stopped

### 4.3 Receiving Mailbox Message Responses from the Module

After a mailbox message has been sent, a response from the command, usually containing the requested data or the status of the command, is returned from the MVI46 module to the processor. The response is returned from the MVI46-PDPMV1 via the M1 file.

Remembering the PROFIBUS Input Data Memory Map:

Byte Offset	Name	Description
0 to 72		Configuration, Status and Control data
73		Number of Messages in the In Mailbox Queue
74		Number of Messages in the Out Mailbox Queue
75		Number of Messages in the Alarm Queue
76		Last Out Mailbox Message ID processed from Output Image
77		Current In Mailbox Control Index
78		Current Alarm Control Index
79 to 222		Incoming Mailbox Message data
223 to n		PROFIBUS Input Data

The important section relevant to the Mailbox Messaging discussion is the Incoming Mailbox Data section (Byte Offsets 79 to 222). Within this section of data, the following structure exists:

#### Mailbox Message Structure: From MVI46 module

Byte Offset	Type	Description
79	Message ID	Message ID value will match value used to generate the outgoing mailbox message
80	Message Info	See individual commands for data values to be entered in each of these register locations
81	Command	
82	Data Size	
83	Frame Count	
84	Frame Number	
85	Offset High	
86	Offset Low	
87	Extended Word 1	
88	Extended Word 2	
89	Extended Word 3	
90	Extended Word 4	
91	Extended Word 5	
92	Extended Word 6	
93	Extended Word 7	
94	Extended Word 8	
-	See individual	
222	commands	

## 4.4 Mailbox Messaging Error Codes

### 4.4.1 Acyclic Message Status Word

This register contains bit and code information about the mailbox message. The register is divided into five areas according to the following illustration:

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Message Type									ER R	C/ R	(reserved)	Error Code			

Bit / Field	Description	Contents
ERR	This bit indicates if the received command contained any errors.	0: Message OK 1: Error (See also "Error Code" below)
C/R	This bit specifies whether the message is a command or a response.	0: Response Message 1: Command Message
Error Code	If the ERR bit is set, this field contains additional information about the error.	0h: Invalid Message ID 1h: Invalid Message Type 2h: Invalid Command 3h: Invalid Data Size 4h: Message header malformed (offset 008h) 5h: Message header malformed (offset 00Ah) 6h: Message header malformed (offset 00Ch to 00Dh) 8h: Invalid Response 9h: Flash Config Error Fh: <b>Invalid Other</b> (All other values are reserved)
Message Type	This field specifies the type of the message.	1h: Application Message 2h: PROFIBUS Specific Message 3h: Memory Message 5h: Reset Message (All other values are reserved)

#### 4.4.2 Return Codes

Possible error codes in Message Data word "Return Code" (*The Return Codes can be byte swapped*)

Return Code	Name	Meaning
8010h	DPMC_ERR_V1C_CLOSED	Internal DPMC instance no longer exists
8011h	DPMC_ERR_V1C_STOPPED	Internal DPMC instance has already been stopped
8012h	DPMC_ERR_V1C_STARTED	Internal DPMC instance has already been started
8013h	DPMC_ERR_V1C_STATE_UNKNOWN	Internal DPMC instance has entered an undefined state
8021h	DPMC_ERR_V1C_REQ_ACTIVE	A request is already active
8022h	DPMC_ERR_V1C_NOT_ALLOWED	Internal DPMC module not initialized correctly
8023h	DPMC_ERR_V1C_INVALID_PAR	Invalid parameter in user request
8024h	DPMC_ERR_V1C_MEM_ALLOC	Internal memory allocation error
8025h	DPMC_ERR_V1C_L2_REQ	Unknown opcode in the confirmation
8026h	DPMC_ERR_V1C_TIMEOUT	Active request terminated with timeout
8028h	DPMC_ERR_V1C_INVALID_LEN	Invalid length in user request
8030h	DPMC_ERR_V1C_REQ_NEG <sup>1</sup>	Negative indication from lower layer
8031h	DPMC_ERR_V1C_REQ_RE	Message frame format error in response
8042h	DPMC_ERR_V1C_REQ_WITHDRAW	Request was recalled
8043h	DPMC_ERR_V1C_REQ_NOT_FOUND	Associated request block not found
80C1h	DPMC_ERR_V1C_MM_FE	Format error in request frame
80C2h	DPMC_ERR_V1C_MM_NI	Function not implemented
80C3h	DPMC_ERR_V1C_MM_AD	Access denied
80C4h	DPMC_ERR_V1C_MM_EA	Area too large
80C5h	DPMC_ERR_V1C_MM_LE	Data block length too large
80C6h	DPMC_ERR_V1C_MM_RE	Format error in response frame
80C7h	DPMC_ERR_V1C_MM_IP	Invalid parameter
80C8h	DPMC_ERR_V1C_MM_SC	Sequence conflict
80C9h	DPMC_ERR_V1C_MM_SE	Sequence error
80CAh	DPMC_ERR_V1C_MM_NE	Area non-existent
80CBh	DPMC_ERR_V1C_MM_DI	Data incomplete or incorrect
80CCh	DPMC_ERR_V1C_MM_NC	Master parameter set not compatible

Refer to Error Codes (page 92).

### 4.4.3 Error Codes

If the return code indicates DPMC\_ERR\_V1C\_REQ\_NEG, the status values according to the DP-standard may be available in Error Code 1. Refer to the PROFIBUS DP specification for information on how to interpret these status values.

Error Code	Name	Meaning
01h	L2_STATUS_UE	
02h	L2_STATUS_RR	
03h	L2_STATUS_RS	
0Ch	L2_STATUS_RDL	Refer to PROFIBUS DP specification
0Dh	L2_STATUS_RDH	
0Fh	L2_STATUS_NA	

#### 4.4.4 DP-V1 Error Codes

Possible error codes in Message Data word "Return Code".

Return Code	Name	Meaning
0003h	DPMC_ERR_M_MEM_ALLOC	Internal memory allocation error
0004h	DPMC_ERR_M_L2_REQ	Unknown opcode in the configuration
0005h	DPMC_ERR_M_INVALID_PAR	Invalid parameter in user request
0007h	DPMC_ERR_M_NOT_IN_DATA	Slave is not in DataExchange (thus no DP-V1 request can exist)
0012h	DPMC_ERR_M_REQ_ACTIVE	A request is already active
0018h	DPMC_ERR_M_NOT_ALLOWED	Internal DPMC module not initialized correctly
0021h	DPMC_ERR_M_CLOSED	Internal DPMC instance no longer exists
0022h	DPMC_ERR_M_STOPPED	Internal DPMC instance has already been stopped
0023h	DPMC_ERR_M_STARTED	Internal DPMC instance has already been started
0024h	DPMC_ERR_M_STATE_UNKNOWN	Internal DPMC instance has entered an undefined state
002Fh	DPMC_ERR_M_SLAVE_NOT_FOUND	Slave does not respond
0031h	DPMC_ERR_M_TIMEOUT	Active request terminated with timeout
0034h	DPMC_ERR_M_INVALID_LEN	Invalid length in user request
0035h	DPMC_ERR_M_REQ_NEG	Negative indication from lower layer
0036h	DPMC_ERR_M_REQ_RE	Message frame format error in response
0037h	DPMC_ERR_M_REQ_WITHDRAW	Request was recalled
0038h	DPMC_ERR_M_REQ_NOT_FOUND	Associated request block not found
0040h	DPMC_ERR_M_MM_FE	Format error in request frame
0041h	DPMC_ERR_M_MM_NI	Function not implemented
0042h	DPMC_ERR_M_MM_AD	Access denied
0043h	DPMC_ERR_M_MM_EA	Area too large
0044h	DPMC_ERR_M_MM_LE	Data block length too large
0045h	DPMC_ERR_M_MM_RE	Format error in response frame
0046h	DPMC_ERR_M_MM_IP	Invalid parameter
0047h	DPMC_ERR_M_MM_SC	Sequence conflict
0048h	DPMC_ERR_M_MM_SE	Sequence error
0049h	DPMC_ERR_M_MM_NE	Area non-existent
004Ah	DPMC_ERR_M_MM_DI	Data incomplete or incorrect
004Bh	DPMC_ERR_M_MM_NC	Master parameter set not compatible
004Ch	DPMC_ERR_M_S7_XA	
004Dh	DPMC_ERR_M_S7_XR	PROFIBUS error for DP-V1 (NRS-PDU received)
004Eh	DPMC_ERR_M_S7_XW	



## 5 Diagnostics and Troubleshooting

### In This Chapter

❖ Basic Troubleshooting Steps.....	96
❖ LED Status Indicators: Front of MVI46 Module .....	97
❖ Module Faceplate Status Indicators .....	98
❖ PROFIBUS Master Indicators.....	99
❖ Using ProSoft Configuration Builder (PCB) for Diagnostics.....	102
❖ Standard PROFIBUS Slave Diagnostic Bytes.....	108

The module provides information on diagnostics and troubleshooting in the following forms:

- LED status indicators on the front of the module provide general information on the module's status.
- Status data contained in the module can be viewed through the Configuration/Debug port, using the troubleshooting and diagnostic capabilities of *ProSoft Configuration Builder (PCB)*.
- Status data values can be transferred from the module to processor memory and can be monitored there manually or by customer-created logic.

## 5.1 Basic Troubleshooting Steps

- 1 Verify that the module is installed correctly, and is communicating with the processor.
- 2 Install the most current version of *ProSoft Configuration Builder*.
- 3 Note the color and behavior of the LED Status Indicators (lights) on the front panel. Refer to the chart in the following section for examples.

## 5.2 LED Status Indicators: Front of MVI46 Module

The LEDs indicate the module's operating status. The module has two sets of LED status indicators:

- MVI46 Module Status LEDs on the front of the module near the top
- PROFIBUS Master Status LEDs behind the door on the front of the module.

### 5.3 Module Faceplate Status Indicators




Indicator	Color	Status	Indication
CFG	Green	ON	Configuration/Debug Port is active
		OFF	Configuration/Debug Port is inactive
P1	Not Used		
P2	Not Used		
APP STATUS	Amber	ON	Configuration Error: This LED is illuminated when the PROFIBUS and module CRC values do not match between input/output blocks. Verify that the values match the values generated with the Calculate Checksums button in <i>ProSoft Configuration Builder</i> . If they do not match, you must manually change the values at the appropriate address locations listed in the Input and Output block definitions in this manual.
		OFF	Normal operation.
BP ACT	Amber	ON	The LED is ON when the module is able to communicate over the backplane.
		OFF	The LED is OFF when the module is unable to communicate with the processor. The processor is either absent or not running.
BATT	Red	OFF	The battery voltage is OK and running.
		ON	The battery voltage is low or the battery is not present. The battery LED will illuminate briefly upon the first installation of the module or if the unit has not had power for an extended period of time. This behavior is normal; however, should the LED come ON in a working installation, please contact ProSoft Technology.
OK	Red/ Green	OF	The card is not receiving any power and is not securely plugged into the rack.
		GREEN	The module is operating normally.
		RED	The program has detected an error or is being configured. If the LED remains RED for over 10 seconds, the processor program may be incompatible with the module. Check the module version and mode (Legacy or Flex) to determine the correct sample ladder logic. Remove the card from the rack and re-insert the card to restart the module's program.


## 5.4 PROFIBUS Master Indicators

LED	State	Description
TKN HLD	GREEN	The module has the token
DBASE STAT	GREEN	Database OK
MSTR STAT	GREEN	Operating mode
	GREEN-Flashing	Clear mode
	RED	Stop mode
	OFF	Offline
	GREEN-Flashing	Database download in progress
	GREEN 1 second/ RED 2 seconds	Module in Legacy mode while the Flex ladder is loaded to the processor. Check processor program.
	RED	Invalid database
	OFF	No databases have been downloaded
COM STAT	GREEN	Data exchange with all configured slaves
	GREEN-Flashing	Data exchange with at least one of the configured slaves
	RED	Bus control error (possible bus short circuit or configuration error)
	OFF	No data exchange with any configured slave
	OFF	The module does not have the token
ALL LEDs	RED	Fatal error

### 5.4.1 Examples

The following table shows some of the possible status indicators:

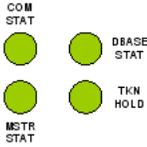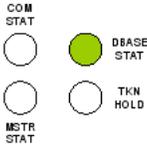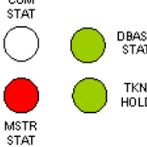	Processor Status	MVI46-PDPMV1 Module Status	PROFIBUS Master Status	PROFIBUS Master Status LED Description
Normal operation	RUN (ON)	ACTIVE (ON)		<p><b>COM STAT (GREEN/Solid or Flash):</b> Master is communicating with slaves (GREEN) or at least one (Blinking).</p> <p><b>DBASE STAT (GREEN):</b> PROFIBUS has been configured.</p> <p><b>TKN HOLD (GREEN):</b> MVI is holding the PROFIBUS token.</p> <p><b>MSTR STAT (GREEN):</b> Master is in operate mode.</p>
MVI46-PDPMV1 module does not see the processor	RUN (ON) or STOP	ACTIVE (OFF)		<p><b>COM STAT (OFF):</b> Master is not communicating with slaves.</p> <p><b>DBASE STAT (GREEN):</b> PROFIBUS has been configured.</p> <p><b>TKN HOLD (OFF):</b> Master does not have the token and is inactive</p> <p><b>MSTR STAT (OFF):</b> Master is inactive</p>
MVI PROFIBUS Master is stopped	RUN or STOP	ACTIVE		<p><b>COM STAT (OFF):</b> Master is not communicating with configured slaves.</p> <p><b>DBASE STAT (GREEN):</b> PROFIBUS has been configured.</p> <p><b>TKN HOLD (GREEN):</b> MVI is holding the PROFIBUS token.</p> <p><b>MSTR STAT (RED):</b> Master is in STOP mode.</p>

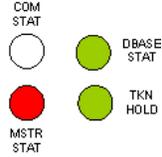	Processor Status	MVI46-PDPMV1 Module Status	PROFIBUS Master Status	PROFIBUS Master Status LED Description
CPU is stopped	STOP	ACTIVE	 <p>COM STAT (off)            DBASE STAT (green)            TKN HOLD (green)            MSTR STAT (red)</p>	<p><b>COM STAT (OFF):</b>            Master is not communicating with configured slaves.</p> <p><b>DBASE STAT (GREEN):</b>            PROFIBUS has been configured.</p> <p><b>TKN HOLD (GREEN):</b>            MVI is holding the PROFIBUS token.</p> <p><b>MSTR STAT (RED):</b>            Master is in STOP mode.</p>

## 5.5 Using ProSoft Configuration Builder (PCB) for Diagnostics

The *Configuration and Debug* menu for this module is arranged as a tree structure, with the *Main* menu at the top of the tree, and one or more sub-menus for each menu command. The first menu you see when you connect to the module is the *Main* menu.

Because this is a text-based menu system, you enter commands by typing the [command letter] from your computer keyboard in the *Diagnostic* window in *ProSoft Configuration Builder (PCB)*. The module does not respond to mouse movements or clicks. The command executes as soon as you press the [COMMAND LETTER] — you do not need to press [ENTER]. When you type a [COMMAND LETTER], a new screen will be displayed in your terminal application.

### 5.5.1 Using the Diagnostic Window in ProSoft Configuration Builder


**Tip:** You can have a ProSoft Configuration Builder Diagnostics window open for more than one module at a time.

#### To connect to the module's Configuration/Debug serial port

- 1 Start *PCB*, and then select the module to test. Click the right mouse button to open a shortcut menu.




- 2 On the shortcut menu, choose **DIAGNOSTICS**.

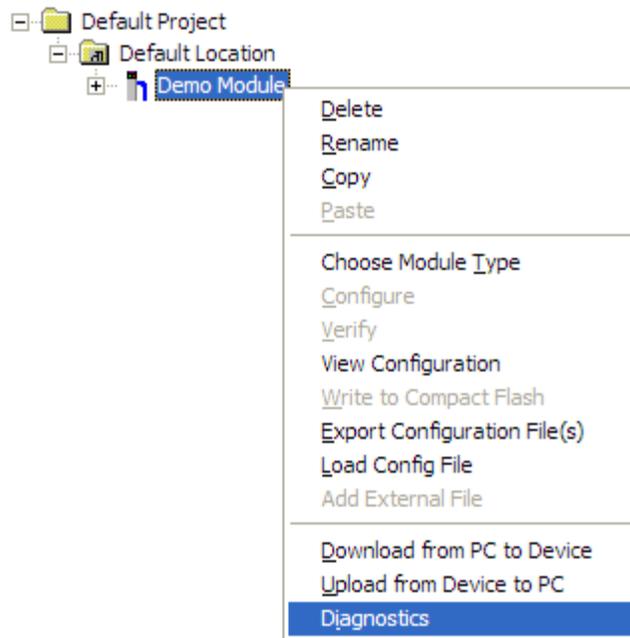


This action opens the *Diagnostics* dialog box.

- 3 Press [?] to open the *Main* menu.

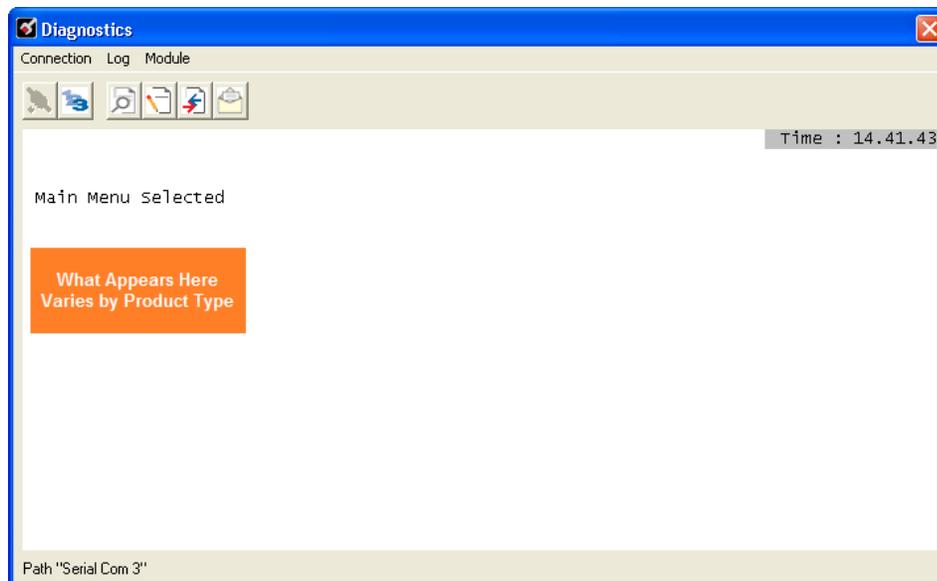

If there is no response from the module, follow these steps:

- 1 Click to configure the connection. On the *Connection Setup* dialog box, select a valid com port or other connection type supported by the module.

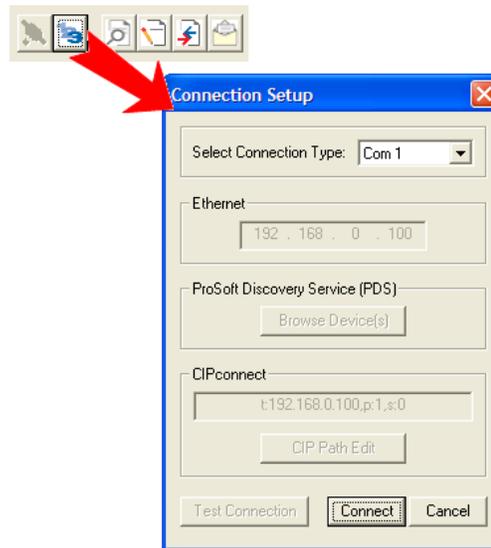


- 2 Verify that the null modem cable is connected properly between your computer's serial port and the module. A regular serial cable will not work.
- 3 On computers with more than one serial port, verify that your communication program is connected to the same port that is connected to the module.

If you are still not able to establish a connection, contact ProSoft Technology for assistance.

### 5.5.2 Navigation

All of the submenus for this module contain commands to redisplay the menu or return to the previous menu. You can always return from a submenu to the next higher menu by pressing **[M]** on your keyboard.

The organization of the menu structure is represented in simplified form in the following illustration:

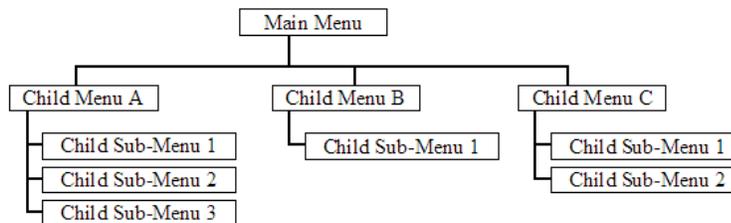

The remainder of this section shows the menus available for this module, and briefly discusses the commands available to you.

### Keystrokes

The keyboard commands on these menus are usually not case sensitive. You can enter most commands in lowercase or uppercase letters.

The menus use a few special characters (**?**, **-**, **+**, **@**) that must be entered exactly as shown. Some of these characters will require you to use the **SHIFT**, **CTRL**, or **ALT** keys to enter them correctly. For example, on US English keyboards, enter the **?** command as **SHIFT** and **/**.

Also, take care to distinguish the different uses for uppercase letter "eye" (**I**), lowercase letter "el" (**L**), and the number one (**1**). Likewise, uppercase letter "oh" (**O**) and the number zero (**0**) are not interchangeable. Although these characters look alike on the screen, they perform different actions on the module and may not be used interchangeably.

### **5.5.3 Main Menu**

When you first connect to the module from your computer, your terminal screen will be blank. To activate the main menu, press the **[?]** key on your computer's keyboard. If the module is connected properly, the following menu will appear.

```
MVI46-PDPMV1 COMMUNICATION MODULE MENU
?=Display Menu
B=Block Transfer Statistics
C=Module Configuration
I=Input Data View
O=Output Data View
V=Version Information
1=Module Status
2=Fieldbus Data
3=Control Registers
Esc=Exit Program and Reboot Module
```

**Caution:** Some of the commands available to you from this menu are designed for advanced debugging and system testing only, and can cause the module to stop communicating with the processor or with other devices, resulting in potential data loss or other communication failures. Use these commands only if you fully understand their potential effects, or if you are specifically directed to do so by ProSoft Technology Technical Support Engineers. There may be some special command keys that are not listed on the menu but that may activate additional diagnostic or debugging features. If you need these functions, you will be advised how to use them by Technical Support. Please be careful when pressing keys so that you do not accidentally execute an unwanted command.

### Redisplaying the Menu

Press **[?]** to display the current menu. Use this command when you are looking at a screen of data, and want to view the menu choices available to you.

### Viewing Block Transfer Statistics

Press **[B]** from the *Main* menu to view the *Block Transfer Statistics* screen.

Use this command to display the configuration and statistics of the backplane data transfer operations between the module and the processor. The information on this screen can help determine if there are communication problems between the processor and the module.

**Tip:** To determine the number of blocks transferred each second, mark the numbers displayed at a specific time. Then some seconds later activate the command again. Subtract the previous numbers from the current numbers and divide by the quantity of seconds passed between the two readings.

### Viewing Module Configuration

Press **[C]** to view the *Module Configuration* screen.

Use this command to display the current configuration and statistics for the module.

### Viewing Version Information

Press **[V]** to view version information for the module.

Use this command to view the current version of the software for the module, as well as other important values. You may be asked to provide this information when calling for technical support on the product.

Values at the bottom of the display are important in determining module operation. The *Program Scan Counter* value is incremented each time a module's program cycle is complete.

**Tip:** Repeat this command at one-second intervals to determine the frequency of program execution.

### Viewing Module Status

Press **[1]** to view status information about the module. This screen also contains useful information for mailbox troubleshooting:

- Scan count
- Mailbox counters
- Alarm counters
- Number of acyclic read and write operations performed by the module

You can also view the number of mailbox messages in the input and output queues, and the number of alarms in the alarm queue.

### Viewing PROFIBUS Data

Press **[2]** to view PROFIBUS data. Use this command to view information related to the status of each slave in the PROFIBUS network, and to verify that each slave is configured (SLAVE CFG LIST), exchanging data with the Master (TRANSFER LIST) and in diagnostic mode (SLAVE DIAG LIST).

You can also check the module's operation state, where:

- 00 = Offline
- 40 = Stop
- 80 = Clear
- C0 = Operate

### Viewing Control Registers

Press **[3]** to view information about the PROFIBUS Master's Control Registers. Use this command to view general information about the module, such as the firmware version and its serial number. The module status contains two possible codes:

- 0400 = module is running but not communicating with slaves
- 0401 = module is running and communicating with slaves

If the module is in STOP mode, the status code is displayed as 0400.

### Exiting the Program

Press **[ESC]** to restart the module and force all drivers to be loaded. The module will use the configuration stored in the module's flash memory to configure the module.

## 5.6 Standard PROFIBUS Slave Diagnostic Bytes

The diagnostic information consists of 6 bytes of standard diagnostic information plus any user-related diagnostic information. The standard information is shown in the tables below.

Byte	Description
0	Station status 1
1	Station status 2
2	Station status 3
3	Master address
4	Ident number high
5	Ident number low

### 5.6.1 Byte 0 - Station Status 1 Bits

Bit	Description
0	Station not existent
1	Station not ready
2	Configuration fault
3	Extended diagnostic data present
4	Not supported
5	Invalid slave response
6	Parameter fault
7	Master lock

### 5.6.2 Byte 1 - Station Status 2 Bits

Bit	Description
0	Parameter request
1	Static diagnostic
2	Slave device
3	Watchdog on
4	Freeze mode
5	Sync mode
6	Reserved
7	Slave deactivated

### **5.6.3 Byte 2 - Station Status 3 Bits**

<b>Bit</b>	<b>Description</b>
0	Reserved
1	Reserved
2	Reserved
3	Reserved
4	Reserved
5	Reserved
6	Reserved
7	Extended diagnostic overflow

### **5.6.4 Byte 3 - Master Address**

This byte shows the address of the assigned PROFIBUS Master after parameterization. If there is an error during the parameterization process, this byte will display the value FF (hexadecimal).

### **5.6.5 Byte 4 - Ident Number High**

This byte shows the high byte of the specific Ident Number assigned to the module by the PROFIBUS User Organization.

### **5.6.6 Byte 5 - Ident Number Low**

This byte shows the low byte of the specific Ident Number assigned to the module by the PROFIBUS User Organization.



## 6 Reference

### *In This Chapter*

❖ Product Specifications .....	112
❖ Functional Overview .....	114
❖ PROFIBUS comDTM.....	122
❖ Disabling the RSLinx Driver for the Com Port on the PC.....	140
❖ RS-232 Configuration/Debug Port.....	142
❖ DB9 to RJ45 Adaptor (Cable 14).....	143
❖ PROFIBUS Master Port.....	144
❖ Supported PROFIBUS Services.....	145
❖ Constructing a Bus Cable for PROFIBUS DP .....	146

## 6.1 Product Specifications

The PROFIBUS DPV1 Master module is a powerful communication interface for Rockwell Automation® SLC® processors. Developed under license from Rockwell Automation, the module incorporates proprietary backplane technology that enables powerful data exchange with SLC processors.

The module supports complete Master specifications according to IEC 61158. Acyclic parameter data can be transferred with Class 1 or Class 2 DPV1 services, allowing processors to easily communicate with slave devices supporting PROFIBUS DPV0/V1 protocol.

The module acts as an input/output module between the PROFIBUS network and the SLC processor. Data transfer from the processor is asynchronous with the I/O data transfer on the PROFIBUS network.

### 6.1.1 General Specifications

- Single slot - 1746 backplane compatible (local or extended I/O rack only - remote rack not supported)
- The module is recognized as an Input/Output module and has access to processor memory for data transfer between processor and module using M0/M1 files
- Ladder Logic is used for data transfer between module and processor. Sample ladder file included

### 6.1.2 Hardware Specifications

Specification	Description
Form Factor	Single-slot SLC chassis compatible
Backplane current load	800 mA @ 5 V
Operating Temperature	0°C to 60°C (32°F to 140°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Shock	30 g operational; 50 g non-operational
Relative Humidity	5% to 95% (with no condensation)
Processor	Compatible with Rockwell Automation SLC 5/02 M0/M1 capable processors or newer
LED indicators	Module status, Backplane transfer status, Application status, Serial activity and error LED status

### **6.1.3 Functional Specifications**

The inRAx PDPMV1 PROFIBUS Master module acts as a PROFIBUS network scanner, transferring input and output data between PROFIBUS devices and processor data memory over the backplane.

- Master Busview configuration interface via included ProSoft Configuration Builder software (Part Number PSW-PCB)
- Project-unique GSD file import library
- Monitoring and modification of process data and DPV1 acyclic data
- Multi-drop on a PROFIBUS DPV1 network with other compatible devices
- Automatic project documentation
- Automatic Bus Parameter calculation
- Online slave diagnostics
- Supports all standardized baud rates, up to 12 Mbps
- Supports extended diagnostic data (DPV1)
- Multiple Masters can be placed in a single rack
- CRC checksum determination of slave configuration consistency to processor
- Master Status LED indicators for Operations, Network Communication, Master Token-Hold and Network Configuration
- FDT/DTM PROFIBUS Master transport communication DTM software included (Part Number PSW-CDTM-PDPM)

#### **PROFIBUS Master Specifications**

- Up to 125 slaves can be connected with a repeater
- Up to 1536 cyclic bytes input and 1536 bytes output data
- Supports Extended Diagnostic Data
- RS-485 optically isolated PROFIBUS interface with on board DC-DC converter
- Acyclic communications (DPV1), Read and Write
- Alarm handling (DPV1)
- Supports Sync and Freeze commands
- Supports PROFIdrive 3.1 compliant parameter read and write operations
- Supports Multicast and Broadcast telegrams (DPV1)

#### **PROFIBUS Master Port**

- DB-9F optically isolated RS-485
- Ready, Run, Error and Token LED Indicators
- PROFIBUS DPV1 RS-485 interface with a 9-pin D shell female connector and isolated opto-couplers

## 6.2 Functional Overview

The MVI46 module communicates with the processor over the backplane using only the following two data files:

- M1 Data File
- M0 Data File

This section of the Application Reference Guide describes the data structures and transfer mechanisms used to transfer data between the MVI46-PDPMV1 module and the SLC processor using these files.

### 6.2.1 About the PROFIBUS Protocol

PROFIBUS (Process Field Bus) is a widely-used, open-standards protocol created by a consortium of European factory automation suppliers in 1989. PROFIBUS is a Master/slave protocol. The Master establishes a connection to one or more remote slaves. When the connection is established, the Master sends the PROFIBUS poll messages (called telegrams in PROFIBUS) to the slave or slaves. The MVI46-PDPMV1 module works as a Master only. It cannot be a slave to some other Master.

The MVI46-PDPMV1 module also acts as an input/output module between devices on a PROFIBUS network and the Rockwell Automation SLC processor. The module uses an internal database to pass data and mailbox requests and responses between the processor and the slave devices on the PROFIBUS network.

PROFIBUS specifications include a variety of network types. The network type supported by the MVI46-PDPMV1 module is PROFIBUS DP version 1.0, which is designed for remote I/O systems, motor control centers, and variable speed drives.

### **6.2.2 Backplane Data Transfer**

The MVI46-PDPMV1 module communicates directly over the SLC backplane. Data is transferred between the module and the SLC processor across the backplane using the processor's M1 and M0 files.

Data received from PROFIBUS slaves and module status data are copied from the module's internal memory database into the processor's M1 file by the module's backplane driver. Ladder logic is then used to copy this data from the M1 file into SLC data tables, so that it may be more easily used in customer application process logic.

Process logic is also used to move data from application data tables into the M0 output file to be transferred to the module. The module's firmware program extracts the data and places it in the module's internal database.


To read data from the module, use the COP instruction to copy data from the processor's M1 file to a user data file. To write data to the module, use the COP instruction to copy data from a user file to the processor's M0 file.

The M1 and M0 data files are structured to provide movement of:

- PROFIBUS DPV0 or V1 Cyclic Input data from PROFIBUS slave devices to the SLC
- PROFIBUS DPV0 or V1 Cyclic Output data from the SLC to PROFIBUS slave devices
- MVI46-PDPMV1 module configuration and status from the module to the processor
- PROFIBUS DPV1 Acyclic requests (Mailbox Messages) from the processor through the module to PROFIBUS slaves
- PROFIBUS DPV1 Acyclic responses (Mailbox Input Messages) from PROFIBUS slaves through the module to the processor

**Note:** The sample ladder provided for the MVI46-PDPMV1 module automatically copies the M1 file to the N11 file. You can edit this instruction so that the M1 data is copied to any suitable file of your choice.

In addition to user data, the M1 file also contains status data for the module, which can be used for module diagnostics. The following illustration shows how the data is moved between the PROFIBUS network, the MVI46-PDPMV1 module and the SLC processor.

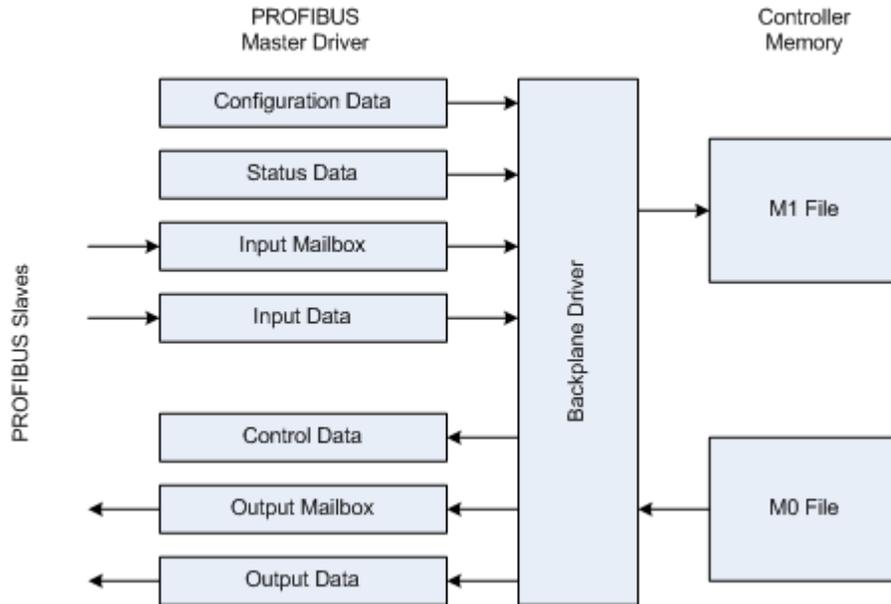

M1 Input Image

**Input Data Area Map (M1 File)**

M1 Word Offset	Description
0 to 12	Configuration Data
13 to 78	Status/Control Data
79 to 222	In Mailbox Acyclic Data
223 to n	PROFIBUS Cyclic Input Data

**Note:** The sample ladder provided for the MVI46-PDPMV1 module automatically copies the M1 file to the N11 file, starting at word offset 0. You can edit this instruction so that the M1 data is copied to any suitable file of your choice.

**Configuration Data in the Input Image**

**Module Configuration Data (M1 Word Offsets 0 to 12)**

<b>M1 Word Offset</b>	<b>Description</b>
0 to 4	Unique module 10-byte pattern as text "MVI4PDPMV1"
5	Reserved for future use
6	User-configured PROFIBUS input data size stated as a word count.
7	User-configured PROFIBUS output data size stated as a word count.
8	Reserved for future use
9	Reserved for future use
10	Reserved for future use
11	<p><b>Low byte:</b> User-configured flag to indicate if input data is byte-swapped in each word before placing in the input image for the controller. If 0, no swapping. If not 0, then swap bytes in each word</p> <p><b>High byte:</b> User-configured flag to indicate if output data is byte-swapped in each word after receiving from the output image of the controller. If 0, no swapping. If not 0, then swap bytes in each word</p>
12	<p><b>Low byte:</b> Module software major version number</p> <p><b>High byte:</b> Module software minor version number</p>

**Status Data in the Input Image**

**PROFIBUS Slave Status Data (M1 Word Offsets 13 to 36)**

<b>M1 Word Offset</b>	<b>Description</b>
13 to 20	Fieldbus data - slave configuration list (8 words: 16 slave addresses per word) 0=No configured slave at slave address 1=Configured slave at slave address
21 to 28	Fieldbus data - slave data transfer list (8 words: 16 slave addresses per word) 0=Slave not communicating with Master 1=Slave communicating with Master
29 to 36	Fieldbus data - slave diagnostic list (8 words: 16 slave addresses per word) 0=No diagnostic data for slave 1=Diagnostic data is being generated for slave

**Slave List Structure for Offset Words 13, 21 and 29**

	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 0	Slave 7	Slave 6	Slave 5	Slave 4	Slave 3	Slave 2	Slave 1	Slave 0
Byte 1	Slave 15	Slave 14	Slave 13	Slave 12	Slave 11	Slave 10	Slave 9	Slave 8
Byte 2	Slave 23	Slave 22	Slave 21	Slave 20	Slave 19	Slave 18	Slave 17	Slave 16
Byte 3	Slave 31	Slave 30	Slave 29	Slave 28	Slave 27	Slave 26	Slave 25	Slave 24
Byte 4	Slave 39	Slave 38	Slave 37	Slave 36	Slave 35	Slave 34	Slave 33	Slave 32
...	...	...	...	...	...	...	...	...
Byte 15	Slave 127	Slave 126	Slave 125	Slave 124	Slave 123	Slave 122	Slave 121	Slave 120

**PROFIBUS Master Status Data (M1 Word Offsets 37 to 78)**

M1 Word Offset	Description
37	<p><b>Low byte:</b> Not used</p> <hr/> <p><b>High byte:</b> PROFIBUS Master operating state                      0x0000=Offline                      0x4000=Stop                      0x8000=Clear                      0xC000=Operate</p>
38	<p>PROFIBUS Master PNO identification number (Bytes will be swapped)  <b>Low byte:</b> Most significant byte (MSB)  <b>High byte:</b> Least significant byte (LSB)</p>
39 to 40	<p>Unique 32-bit serial number for the PROFIBUS Master</p>
41	<p>Software version number for the PROFIBUS Master software.  <b>Low byte:</b> Most significant byte (MSB)  <b>High byte:</b> Least significant byte (LSB)                      Example for Version 1.40:                      High Byte: 0x40                      Low Byte: 0x01</p>
42	<p>PROFIBUS Master module's operating status  <b>Low byte:</b> Most significant byte (MSB)  <b>High byte:</b> Least significant byte (LSB)                      Bit 2=Application Status                      0: Application Stopped                      1: Application Running                      Bit 8=data exchange (FBRS)                      0: There is no data exchange with any of the assigned slaves                      1: There is Data Exchange with at least one of the assigned slaves                      Bit 9=slave input frozen/cleared (FBFC)                      0: A slave's inputs in the IN area are cleared if a slave is not in Data Exchange                      1: A slave's inputs in the IN area are frozen if a slave is not in Data Exchange                      Bit 12=reset (RDR)                      0: No action                      1: A reset is requested by the PROFIBUS Master module because a new database has been downloaded</p>
43 to 44	<p>CRC32 checksum for PROFIBUS Master configuration downloaded from configuration utility</p>

<b>M1 Word Offset</b>	<b>Description</b>
45 to 46	Module configuration checksum for module configuration downloaded from configuration utility
47	Module program scan counter. Can be used to gauge application code scan time performance
48	Module PROFIBUS output image data update counter - Counter representing the number of times the output data image is transferred to the module's internal Master
49	Module PROFIBUS input image data update counter - Counter representing the number of times the input data image is transferred from the module's internal Master.
50	Module out mailbox counter
51	Module in mailbox counter
52	Module alarm IND receive counter - Number of spontaneous alarm messages received from slave.
53	Module alarm CON receive counter - Number of confirmation messages received from slaves indicating that the slave received the confirmation message from the module
54	Module acyclic read request message counter - Number of acyclic read request messages processed by the module
55	Module acyclic write request message counter - Number of acyclic write request messages processed by the module
56	Module backplane read count - Rollover counter of the number of module to processor backplane read data transfers
57	Module backplane write count - Rollover counter of the number of module to processor backplane write data transfers
58	Module backplane error count - Rollover counter of the number of module to processor backplane data transfers that have failed
59	File Error Word - This is a bitmapped value that indicates which files are not present. Bit 0: Problem with PDPMV1.CFG file Bit 1: Not Used Bit 2: Problem with PDPMV1.DDB file Bit 3: Problem with PDPMV1.XML file Bits 4 to 15 not used. If this word has a value other than 0, the CFG ERR LED on the module will be illuminated.
60 to 72	Reserved for future use (13 words)
73	In mailbox queue count - Number of message in the in mailbox queue
74	Out mailbox queue count - Number of message in the out mailbox queue
75	Alarm queue count - Number of message in the alarm queue
76	Last out mailbox message ID processed from output image
77	Current in mailbox control index
78	Current alarm control index

### Mailbox Communication

Mailbox requests are built and sent through ladder logic according to the data listed in the BLD\_MB routine.

The module immediately responds with a confirmation message consisting of the Mailbox Out Message Response to the processor.

After the mailbox request is processed by the module, it sends the Mailbox In Message to the processor. Note that the ladder should refer to the command data to copy the mailbox response to the correct data file. For example:

```
command = 02 => Set Operating Mode Response 1
```

### Input Data

This section contains the PROFIBUS Cyclic Input data received from the slave or slaves.

### M0 Output Image

#### Output Data Area Map (M0 File)

M0 Word Offset	Description
0	Last in mailbox control index
1	Last alarm control index
2 to 3	PROFIBUS CRC32
4 to 5	Module CRC32
6 to 149	Out Mailbox Acyclic Data
150 to <i>n</i>	PROFIBUS Cyclic Output Data

### 6.2.3 PROFIBUS DP Architecture

The PROFIBUS DPV1 network supports multiple Master systems with several slaves.

The following table shows the most important features of PROFIBUS DPV1:

Standard	EIN 501 70 DIN 19245
Transmission equipment (Physical)	EIA RS-485 IEC 1158-2 (through link or coupler) Fiber Optic Cable (not available)
Transfer procedure	Half-duplex
Bus topology	Linear bus with active bus termination
Bus cable type	Shielded twisted pair conductors
Connector	9-pin D-Sub
Number of nodes on the bus	Max: 32 with no repeaters Max: 125 with 3 repeaters in 4 segments

### Bus Access

Two different bus access procedures handle the various communication requirements for the PROFIBUS DPV1 topology:

- Token Passing
- Polling

### Token Passing

Token passing ring is the basis for communication between the more complex, active stations. All stations have the same rights in that a token is passed from station to station in a logical ring. The token is passed to each station with a maximum, definable token cycle time. A station is given transmission rights for the duration of time that it has the token.

### Master/Slave Polling

Master/slave polling guarantees a cyclic, real-time based data exchange between the station with transmission rights, the active station, and its subordinates, the passive stations. In this case, the Master is able to pass data to the slave and/or receive data. The services in layer 2 (field-bus data link in ISO-OSI reference model) organize this communication.

## **6.2.4 Communication Types**

In addition to point-to-point data transfer, the PROFIBUS protocol can also handle the following types of communication.

- Broadcast communication: An active node sends an unacknowledged message to all other nodes (Master and slaves)
- Multicast communication (control instructions): An active node sends an unacknowledged message to a group of nodes (Master and slaves)

## **6.2.5 Master/Slave Communication Phases**

The communication between the Master and the slaves takes place in the following phases:

- Parameterization and configuration phase
- Usable data transfer phase

Before a DP slave can be integrated into the usable data transfer phase, the parameterization and configuration phase runs a device identification test that verifies that the planned configuration matches the actual device configuration for each slave in the PROFIBUS network. The test verifies that:

- The device is actually there
- It is the right type of device
- The station address set on the device matches the station address in the bus configuration
- The formats, telegram length information, and bus parameters are correct and
- The number of configured inputs and outputs is correct

### 6.3 PROFIBUS comDTM

DTM (Device Type Manager) is a standard way to provide all necessary data and functionality for a communication device, for example a PROFIBUS DP card. This technology is similar to the way Microsoft Windows supports printer drivers supplied by manufacturers and available to any Windows application, rather than requiring a custom printer driver for each specific application.

PROFIBUS comDTM, distributed by ProSoft Technology, is a DTM for PTQ and MVI series PDPMV1 modules and ProLinx PDPMV1 gateways. Configuration is available through Ethernet for the PTQ and ProLinx series PDPMV1, and through RS-232 serial for the MVI series PDPMV1 modules. Ethernet configuration is also available through the CIPConnect® feature for MVI56-PDPMV1 and MVI69-PDPMV1 modules (see note).

PROFIBUS comDTM allows configuration tools, instruments, and communication devices on a field network to recognize and use the module's capabilities.

#### Communication Channels Supported

Product	Serial		Ethernet	
	Local RS-232 Port		Local Ethernet Port	CIPconnect
MVI46-PDPMV1	Supported			
MVI56-PDPMV1	Supported			Supported (see note)
MVI69-PDPMV1	Supported			Supported (see note)
PTQ-PDPMV1			Supported	
ProLinx PDPMV1			Supported	

**Note:** MVI56-PDPMV1 requires firmware version 1.28.000 or later to support CIPconnect-enabled PC programs (1756-ENBT support). The 1756-ENBT card must be located in the same rack as the MVI56-PDPMV1. Bridging through multiple racks is not supported by the comDTM software. MVI69-PDPMV1 requires firmware version 1.37.002 or later to support CIPconnect through the Ethernet port to L32E and L35E CompactLogix processors.

**Note:** This functionality requires comDTM version 1.0.1.5 with install version 1.01.0003. For information on how to check the comDTM version and install version, refer to Verifying the comDTM Version and comDTM Install Version (page 135).

#### 6.3.1 ProSoft Technology Product Availability

Part Number	Description
PSW-cDTM-PDPM	PROFIBUS DPV1 Master comDTM software gateway

### **6.3.2 Introduction to PROFIBUS comDTM**

#### Why Use PROFIBUS comDTM?

Customers from around the world have different machines, fieldbuses, and other end-user equipment. Each is equipped with the field bus requested by their end-user. Since there are so many variations, the automation solution in their standard machine ends up being different from case to case.

This means that service engineers need to have different configuration tools for every fieldbus. Or maybe even one for every device. You want one, but the reality is you have many. This is where PROFIBUS comDTM can help with configuring and communicating with different networks, products and suppliers.

#### What is FDT?

FDT (Field Device Tool) is the specification for software interfaces for the integration of field devices, drives, and controls in engineering and configuration tools. FDT is manufacturer-independent and allows for trouble-free parameterization and configuration of the user's specific processing system.

FDT technology standardizes the communication interface between field devices and systems. The key feature is its independence from the communication protocol and the software environment of either the device or the host system. FDT allows any device to be accessed from any host through any protocol.

The FDT container implements the FDT specification. It serves as an interface between FDT and a superior application. It uses the DTMs to gain access to the devices. FDT frame application is an engineering or configuration tool which has an FDT container.

FDT technology comprises three key components: the Frame Application, Device DTMs, and Communication DTMs.

- The DTM (Device Type Manager) is used for the configuration and maintenance of field devices, drives and so on. It is only functional with an FDT container.
- The FDT container implements the FDT specification. It serves as interface between FDT and a superior application. It uses the DTMs to gain access to devices.
- FDT frame application is an engineering or configuration tool that has an FDT container. The user interface of the DTMs is displayed here.

To better understand the functionality of these components, consider the analogy of the Internet - a standard web browser allows users to view countless web pages created by many content providers. The host system supplier typically creates the Frame Application, just as Microsoft supplies the Internet Explorer web browser. Just as a web browser opens a web page that contains code from the company that makes the web page, an FDT frame opens the Device DTM, which is the plug-in software from the device vendor.

Similar to a web browser, the Frame Application has menu bars, toolbars, and a navigation tree. Visually, the frame application surrounds the device vendor's DTM. Like opening a web page from a 'favorites' navigation tree, a user can navigate down a tree that lists the field device tags, click on one, and open the device vendor's DTM inside the frame. And, like web pages that let users interact with a reservation system or a shopping service, the Device DTMs let the user interact with the field device in a wide variety of ways. The Device DTM vendor can create a graphically rich user interface that does virtually anything possible in an advanced Windows PC-type interface. The third part of the technology, the Communication DTM, provides a standardized communication Application Process Interface (API) inside the PC, interfacing between the Device Vendor's DTM and the host system's specific driver that handles pass-through communications from the PC down to the fieldbus interface card.

The host system vendor supplies a Communication DTM (comDTM) for each supported fieldbus protocol. This ensures that the details of the PC, network, interface cards, and pass-through protocols of the host system, are transparent to the device vendor's DTM. This correlates back to the internet analogy where: the web page is transparent to the PC it's running in, the brand of the network interface card in the PC, or whether communication is DSL or broadband cable. FDT technology complements and expands existing device description languages. It does not replace but rather builds upon existing DDs.

In particular, FDT expands the capabilities of DD for complex devices. Device Description languages have limitations in the graphical representation of the device at the user interface and allow only a limited integration of special features. FDT/DTM removes these limitations.


Typical frame applications are

- Pactware from The PACTware Consortium e.V (freeware)
- FieldCare from Endress & Hauser
- Field Control from ABB

### What is DTM?

DTM (Device Type Manager) is a standard way to provide all necessary data and functionality for a communication device, for example a PROFIBUS DP card. This technology is similar to the way Microsoft Windows supports printer drivers supplied by manufacturers and available to any Windows application, rather than requiring a custom printer driver for each specific application.

PROFIBUS comDTM, distributed by ProSoft Technology, is a DTM for PTQ and MVI series PDPMV1 modules and ProLinx PDPMV1 gateways. It allows configuration tools, instruments and communication devices on a field network to recognize and use the module's capabilities.

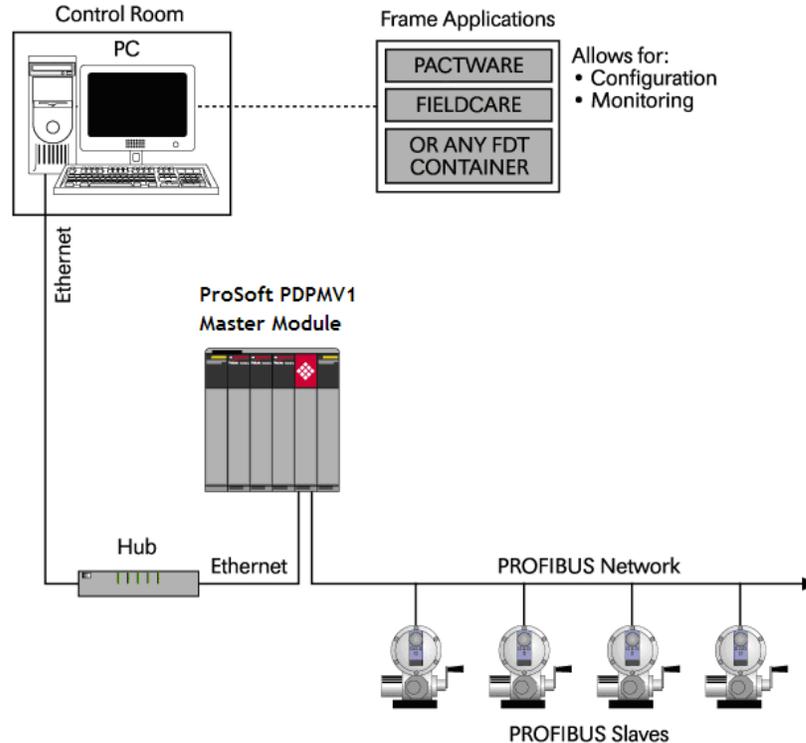

### What is PROFIBUS?

PROFIBUS (Process Field Bus) is a widely-used, open-standards protocol created by a consortium of European factory automation suppliers in 1989. PROFIBUS is a Master/slave protocol. The Master establishes a connection to the remote slave. When the connection is established, the Master sends the PROFIBUS commands to the slave.

PROFIBUS supports a variety of network types. The network type supported by the PTQ and MVI series PROFIBUS modules is PROFIBUS DP (Device Bus) version 1.0, which is designed for remote I/O systems, motor control centers, and variable speed drives.

### 6.3.3 System Requirements

Confirm that your system meets the following hardware and software requirements before you start the installation.

#### Hardware Requirements (Recommended)

- Pentium 4 Processor rated for at least 2 GHz
- 450 MB hard drive space for DTM Libraries
- Video card capable of 1024 X 768 resolution at 64k colors
- Ethernet Network Interface Card (NIC)
- One of the following ProSoft Technology PROFIBUS DPV1 Master communication modules:
  - ProLinx PDPMV1 Gateway, Ethernet only, serial port not supported
  - PTQ-PDPMV1 Ethernet only, serial port not supported
  - MVI series PDPMV1 RS232 serial
  - MVI56-PDPMV1 RS232 serial, or with CIPconnect and 1756-ENBT module for Ethernet support
  - MVI69-PDPMV1 RS232 serial, or with CIPconnect for Ethernet support

**Note for MVI series and PTQ users:** The Ethernet connection implements a version of UDP protocol that dynamically allocates a random UDP port for every connection. This implementation limits the possibility of using most serial-to-Ethernet converters to access the MVI series PDPMV1 serial port, since many Ethernet-to-serial converters require the configuration of a fixed UDP port, which is not available for the current implementation.

**Note for MVI56-PDPMV1 users:** The Ethernet connection uses CIPconnect to communicate with the MVI56-PDPMV1 (firmware version 1.28.000 is CIPconnect enabled and is required for 1756-ENBT support). The 1756-ENBT card must be located in the same rack as the MVI56-PDPMV1. Bridging through multiple racks is not supported by the comDTM software.

**Note for MVI69-PDPMV1 users:** The Ethernet connection uses CIPconnect to communicate with the MVI69-PDPMV1 (requires firmware version 1.37.002 or later to support CIPconnect through the Ethernet port to L32E and L35E CompactLogix processors).

**Note:** This functionality requires comDTM version 1.0.1.5 with install version 1.01.0003. For information on how to check the comDTM version and install version, refer to Verifying the comDTM Version and comDTM Install Version (page 135).

#### Software Requirements (Minimum)

- Windows NT 4.0 Service Pack 6A, Windows 2000 SP3 or Windows XP Professional SP2, or better
- Microsoft Internet Explorer Version 6.0, or better
- FDT 1.2.1 compliant FDT frame application. Compatible applications include:
  - PACTware
  - FieldCare
  - M&M fdtCONTAINER

Some FDT Containers require the following components:

- Microsoft Management Console
- Adobe Acrobat Reader 5.0, or better

### 6.3.4 Installation

**Important:** You must have Administrator rights on your computer to install this application.  
**Important:** Please open and read the *Readme* file before starting the installation. The *Readme* file is located in Utilities > comDTM > *Readme* on the *ProSoft Solutions Product CD-ROM*.

#### To install comDTM


- 1 Insert the *ProSoft Solutions Product CD-ROM* in an available CD-ROM drive in your computer. Wait for the startup screen to appear.
- 2 On the startup screen, click **PRODUCT DOCUMENTATION**. This action opens a *Windows Explorer* file tree window.
- 3 Double-click to open the **UTILITIES** folder, then navigate to **comDTM > comDTM INSTALL**.
- 4 Double-click the **SETUP.EXE** file. This action starts the installation wizard.
- 5 Follow the instructions on the installation wizard to install the program.
- 6 Click **FINISH** to complete the installation. If you are prompted to restart your computer, save your work in any applications that are running, close the applications, and allow the computer to restart.

**Note:** During installation, you will be prompted to accept or change the location for the database folder. The default location for this folder is the Program Files directory on your local hard drive (normally Drive C:). If you intend to allow multiple workstations to access the same database folder, you should choose a network drive that other workstations can access.





**Note:** You must use the same PROFIBUS device address that you used when setting up the device.

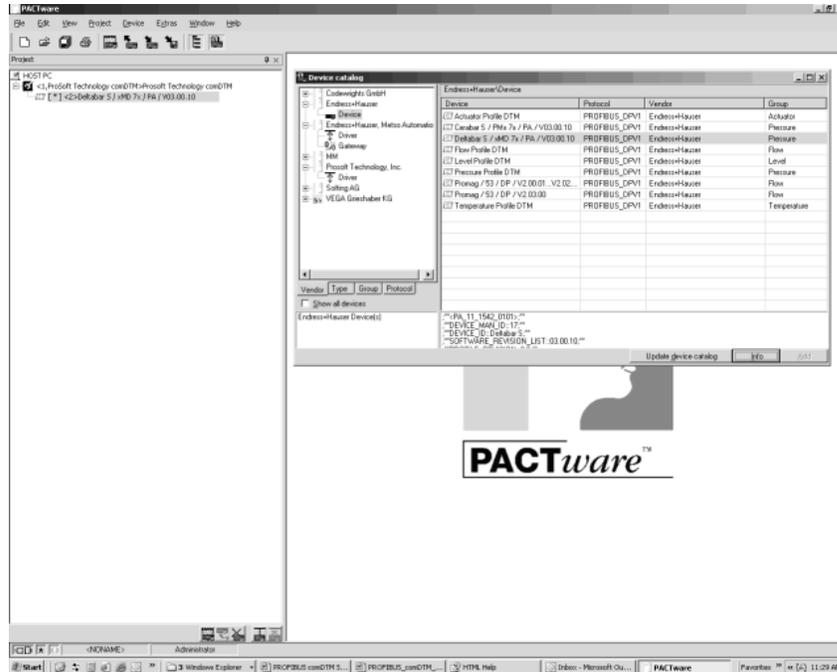


Connecting the comDTM to the Master to Establish Communication

**Note:** The features described in this section require the current version of PROFIBUS comDTM. You can always download the newest version from [www.prosoft-technology.com](http://www.prosoft-technology.com).


- 1 From the Windows **START** button, navigate to **PROGRAMS > PROSOFT TECHNOLOGY**, and then choose **PROSOFT TRANSPORT PATH EDITOR**.

- 2 If you have not created a communication path, click the **Add** button. If you have already created a path, skip to step 5.

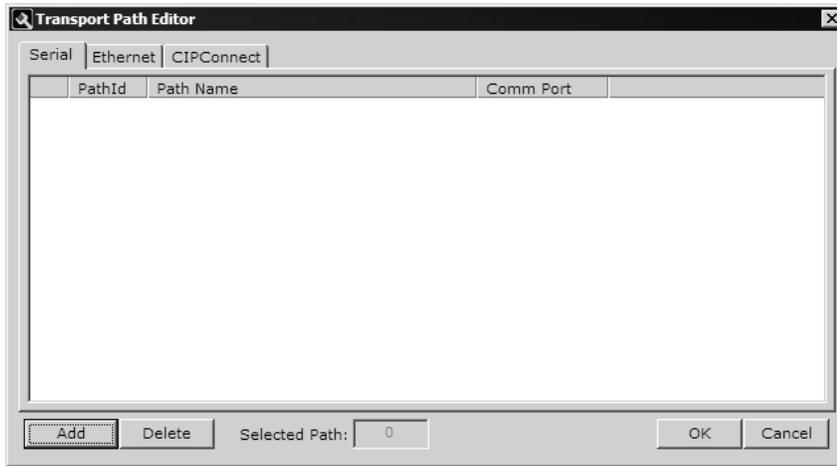


- 3 For PTQ-PDPMV1 and ProLinx-PDPMV1 users: Select the **ETHERNET** tab, and enter the IP Address of the module or gateway. Enter a descriptive path name.


**Note:** Do not include the underscore ( \_ ) for the path name.

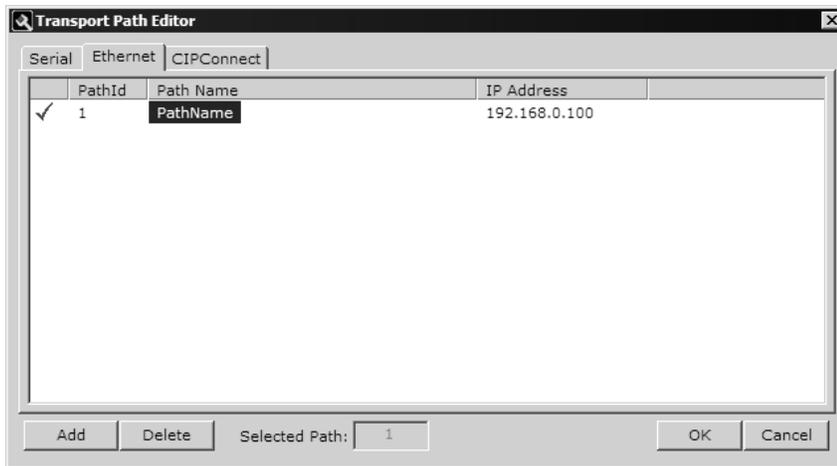

For MVI-PDPMV1 users: Select the **SERIAL** tab and enter the COM port number on your PC connected to the module. Enter a descriptive path name.

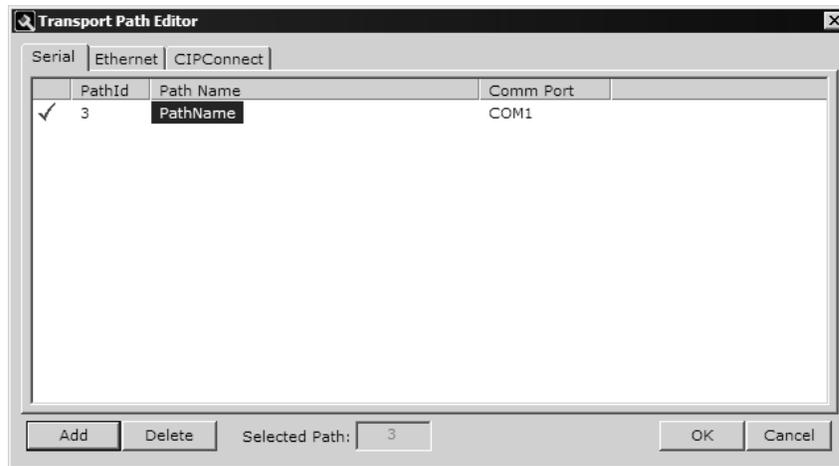


For MVI56-PDPMV1 and MVI69-PDPMV1 users with CIPconnect: Select the **CIPCONNECT** tab, and then click the **ADD** button.

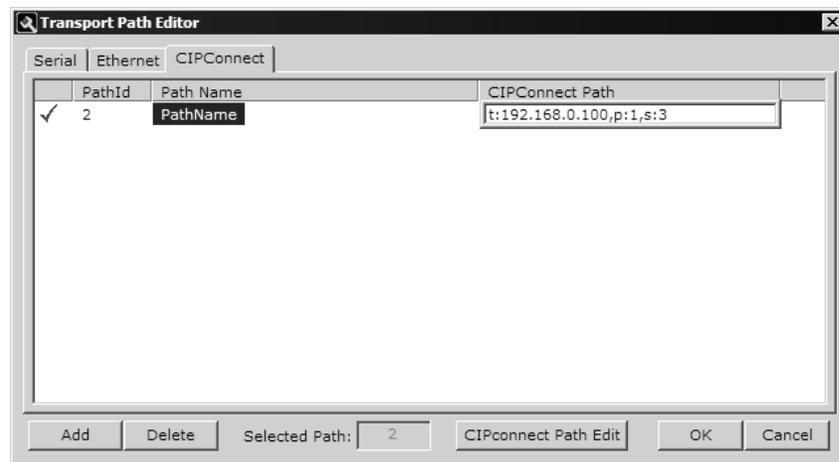

Click the **CIPCONNECT PATH EDIT** button to define the path for this application. The CIPconnect Path Editor allows the configuration of the path between your PC and the MVI56-PDPMV1 or MVI69-PDPMV1 module.


For the following example, the PC will be connected through Ethernet to a 1756-ENBT communication card (IP=192.168.0.100) and the MVI56-PDPMV1 card is located in slot 3 of the same rack.

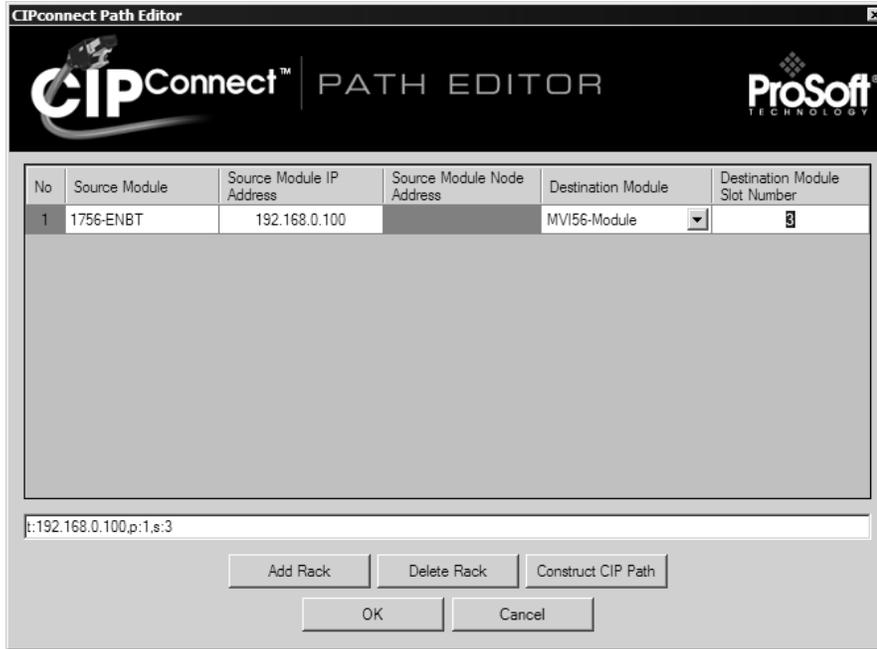


For more information, please refer to Using the CIPconnect Path Editor.

**Note:** CIPconnect is available for MVI56-PDPMV1 firmware version 1.28.000 (or later) and for MVI69-PDPMV1 firmware version 1.37.002 (or later). This functionality requires comDTM version 1.0.1.5 with install version 1.01.0003 (or later). For information on how to check the comDTM version and install version, refer to Verifying the comDTM Version and comDTM Install Version (page 135).


- When you have configured the communication path, click the **OK** button to confirm. The communication path will be displayed at the top grid panel as shown in the following illustration.

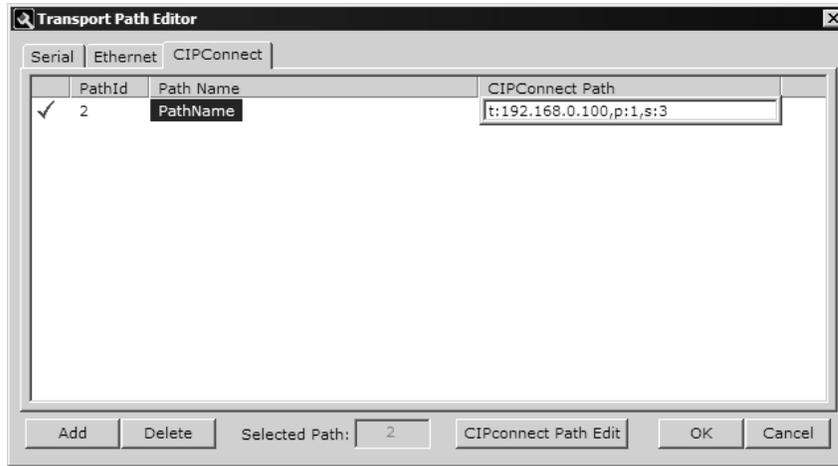


- Select the path and click the **OK** button to exit the *Transport Path Editor* window.

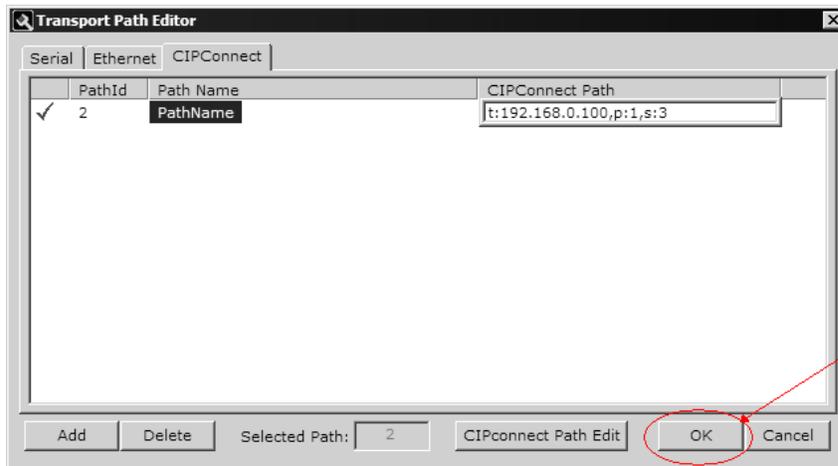

- Select the **comDTM** icon and click the right mouse button to open a shortcut menu. On the shortcut menu, choose **CONNECT**. If the connection is successful, the icon will be highlighted, as shown in the following illustration.

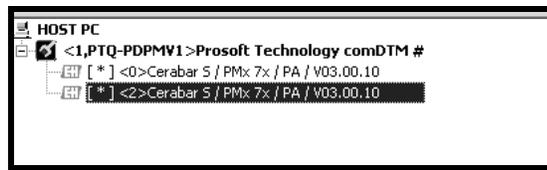

When the comDTM is connected with the Master, PACTware indicates the connection Master by displaying a green plug in the status bar.

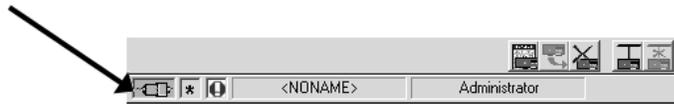


This completes the installation and Quick Start Guide for the ProSoft Technology PROFIBUS comDTM. Refer to the online help and documentation additional information on each DTM component you have installed and configured.

The comDTM provides a *Guided Tour* section in the online help that explains the basic features and operation of the program. To open the online help, click the right mouse button on **PROSOFT TECHNOLOGY COMDTM**, and choose **ADDITIONAL FUNCTIONS > ONLINE HELP** from the shortcut menu.



Click the **GUIDED TOUR** icon. Use the navigation buttons on each help page to view the help topics.

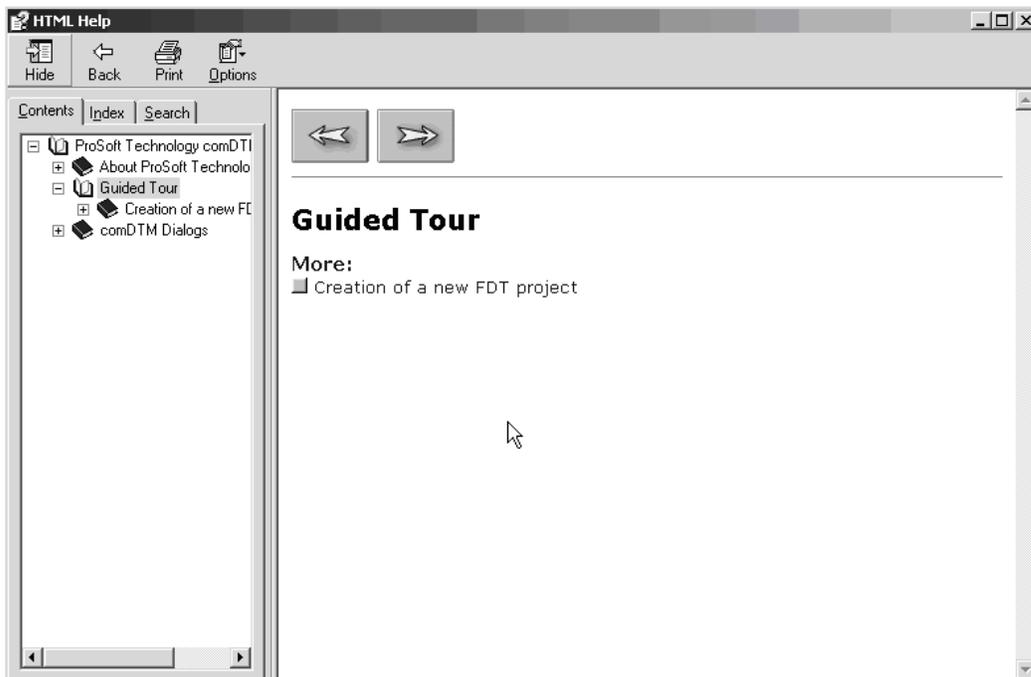

Refer to the documentation and online help for your FDT frame program for specific FDT frame instructions.

### 6.3.6 Verifying the comDTM Version and comDTM Install Version


#### Introduction

There are two versions associated to the comDTM – the comDTM version and the comDTM install version. Starting with comDTM version 1.0.1.5, each upgrade will indicate the same comDTM version but a different comDTM install version.

This section describes how to check the comDTM version and comDTM install version.


#### Checking the comDTM Version

Refer to the *Version* column indicated when you add the comDTM to the DTM Container project.

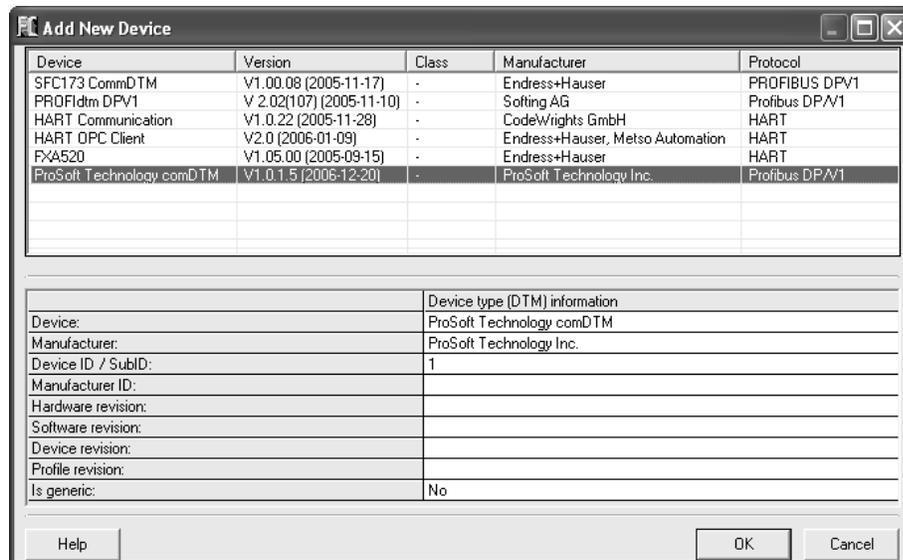


Checking the comDTM Install Version


- 1 Click the **START** menu and then choose **CONTROL PANEL**.

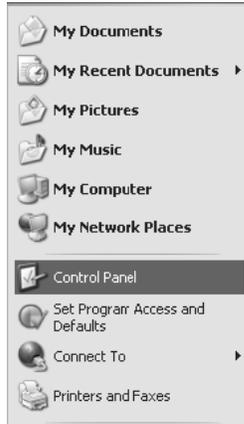


- 2 In the list of **CONTROL PANEL** applets, select **ADD OR REMOVE PROGRAMS**.

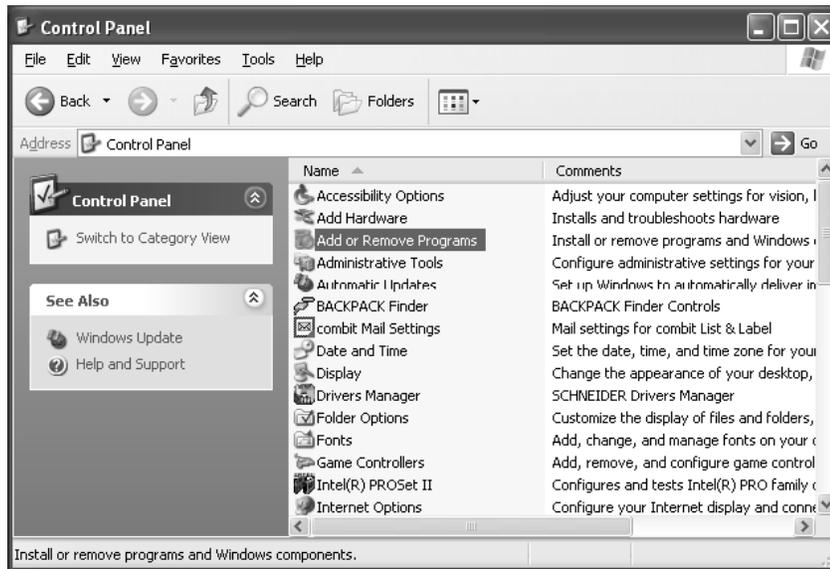

- 3 Select **PROSOFT TECHNOLOGY COM-DTM**, and then click on the link **CLICK HERE FOR SUPPORT INFORMATION**.

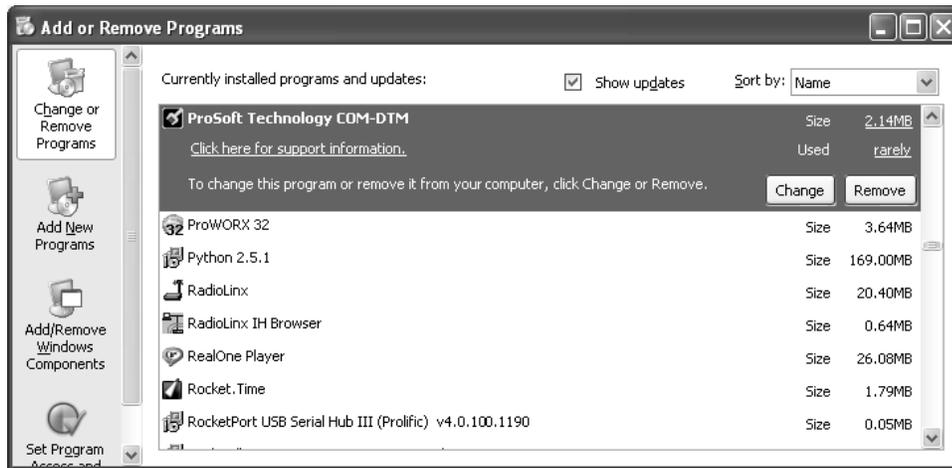


- 4 You will see the comDTM Install Version in the *Version* field, as shown in the following illustration (1.01.0003 for this example).

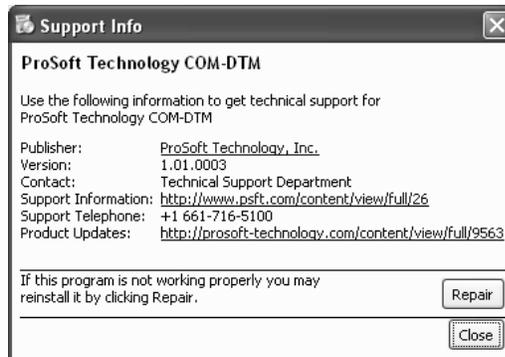


### Checking the Install Version for Vista


- 1 Select **CONTROL PANEL**.

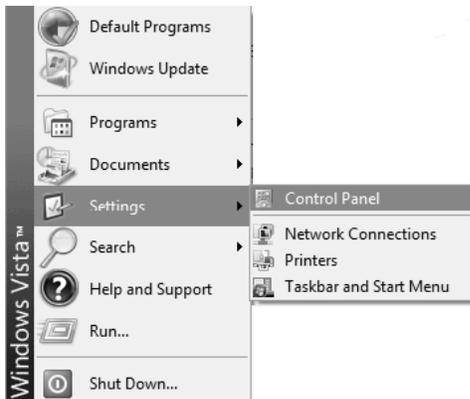


## 2 Select UNINSTALL PROGRAMS.

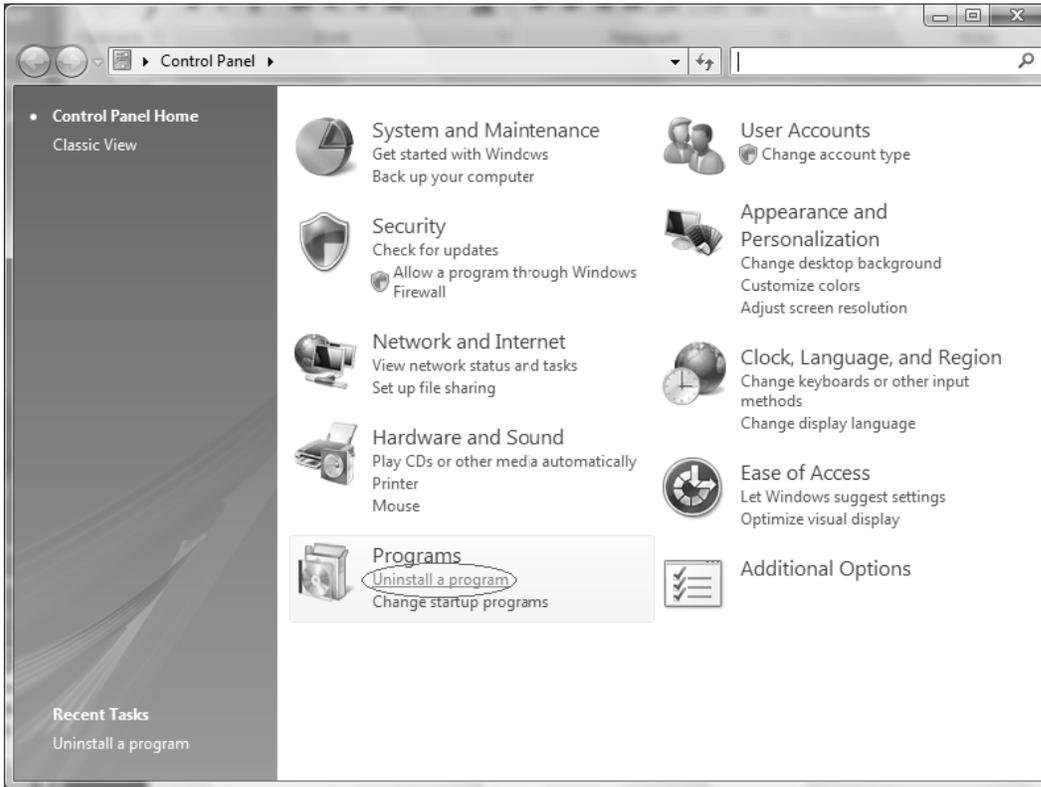


## 3 Select Prosoft Technology COM-DTM (click once)

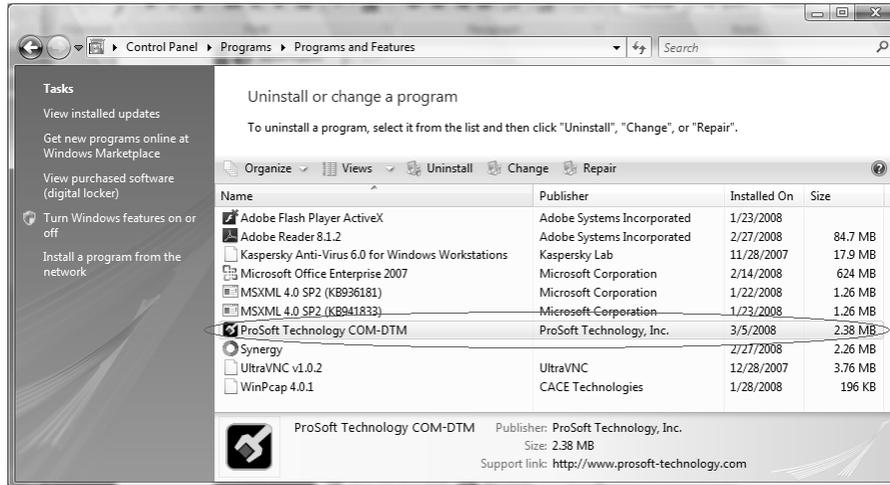

4 Click the **ORGANIZE** tab and select **LAYOUT > DETAILS PANE**.

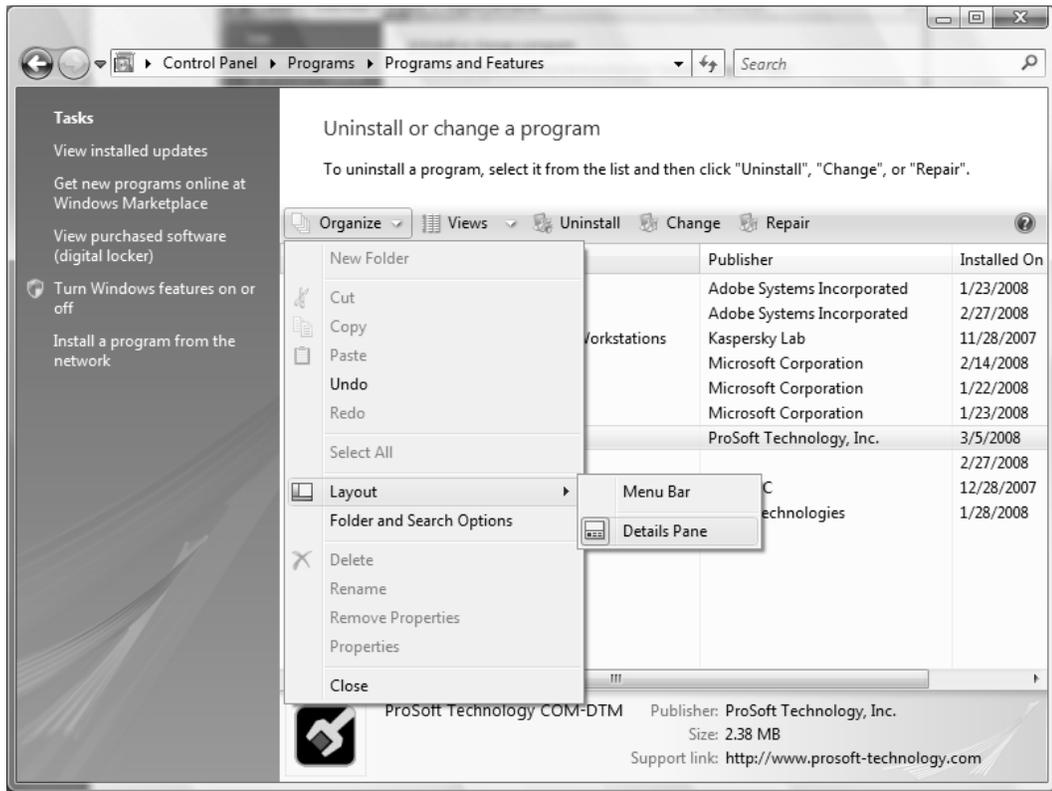


5 Check the Install Version at the bottom right portion of the window.

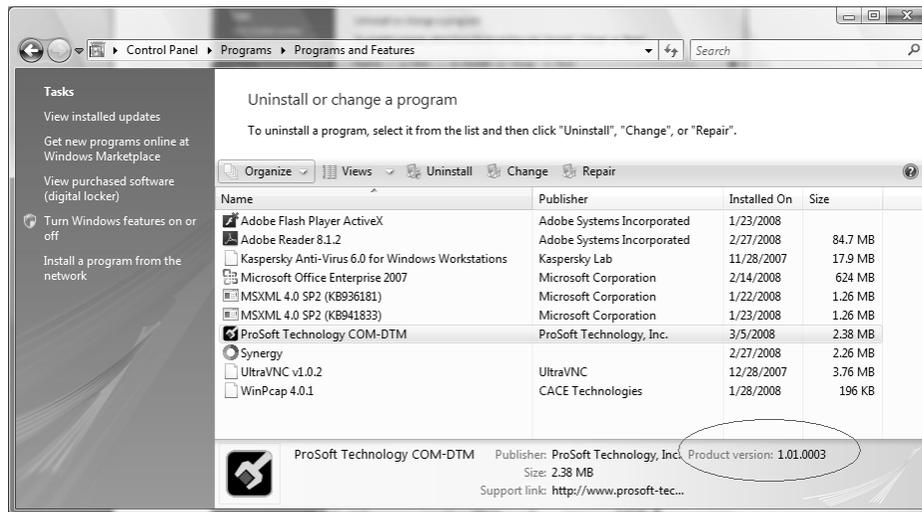


### 6.4 Disabling the RSLinx Driver for the Com Port on the PC

The communication port driver in *RSLinx* can occasionally prevent other applications from using the PC's COM port. If you are not able to connect to the module's configuration/debug port using *ProSoft Configuration Builder (PCB)*, *HyperTerminal* or another terminal emulator, follow these steps to disable the *RSLinx* driver.

- 1 Open *RSLinx* and go to **COMMUNICATIONS > RSWHO**.
- 2 Make sure that you are not actively browsing using the driver that you wish to stop. The following shows an actively browsed network.

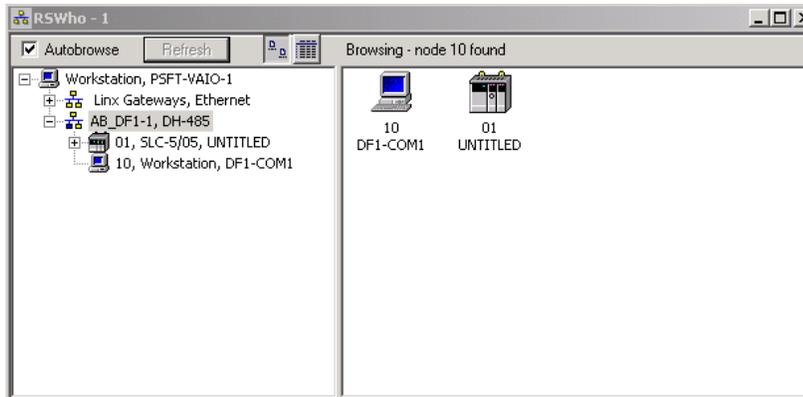

- 3 Notice how the DF1 driver is opened, and the driver is looking for a processor on node 1. If the network is being browsed, then you will not be able to stop this driver. To stop the driver your *RSWho* screen should look like this:

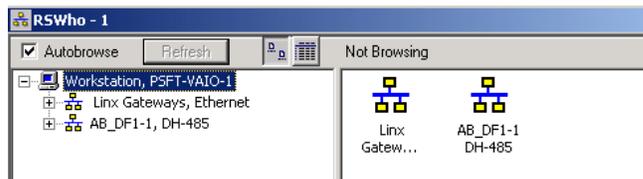


Branches are displayed or hidden by clicking on the  or the  icons.



- 4 When you have verified that the driver is not being browsed, go to **COMMUNICATIONS > CONFIGURE DRIVERS**.


You may see something like this:

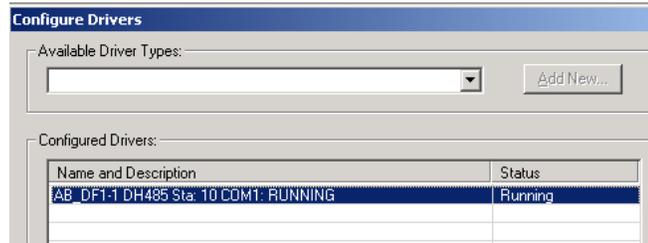

If you see the status as running, you will not be able to use this com port for anything other than communication to the processor. To stop the driver press the **STOP** button on the side of the window:



5 After you have stopped the driver you will see the following.

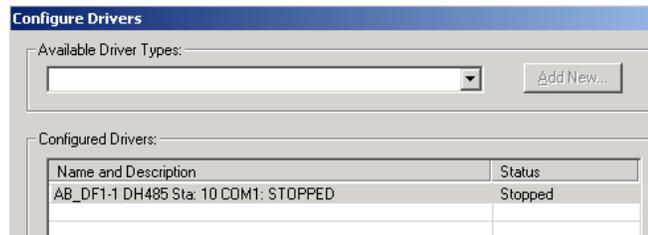


6 You may now use the com port to connect to the debug port of the module.



**Note:** You may need to shut down and restart your PC before it will allow you to stop the driver (usually only on *Windows NT* machines). If you have followed all of the above steps, and it will not stop the driver, then make sure you do not have *RSLogix* open. If *RSLogix* is not open, and you still cannot stop the driver, then reboot your PC.

## 6.5 RS-232 Configuration/Debug Port

This port is physically an RJ45 connection. An RJ45 to DB-9 adapter cable is included with the module. This port permits a PC-based terminal emulation program to view configuration and status data in the module and to control the module. The cable pinout for communications on this port is shown in the following diagram.

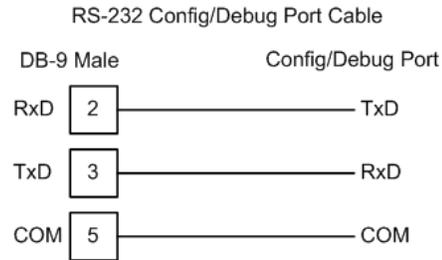

### 6.6 DB9 to RJ45 Adaptor (Cable 14)

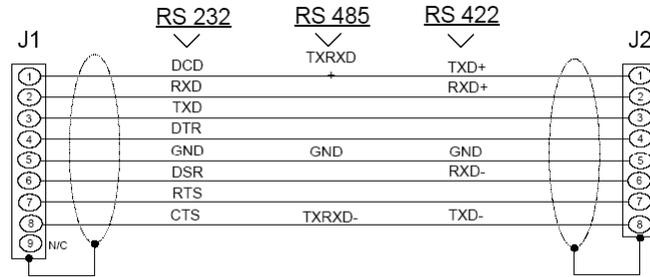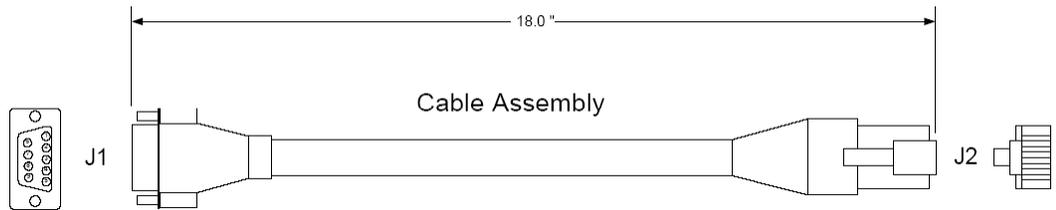


Wiring Diagram

## 6.7 PROFIBUS Master Port

The following diagram has been imported from the PROFIBUS Master documentation. Note that the signals to reference are the D-Sub signals in the table.

D-Sub (male)	Board to Board	Screw Terminal	Signal
Housing	1	5	Cable shield
1	4	-	-
2	7	-	-
3	6	4	B-Line
4	3	6	RTS
5	2	2	GND_BUS
6	8	1	+5V BUS (output)
7	9	-	-
8	5	3	A-Line
9	10	-	-

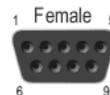

## 6.8 Supported PROFIBUS Services

The following table lists all available services according to the PROFIBUS specification.

Service	PROFIBUS Version	Master Class 1		Master Class 2	
		Request	Response	Request	Response
DDLML_Data-Exchange	DP-V0	Yes		No	
DDLML_Set_Prm	DP-V0	Yes		No	
DDLML_Chk_cfg	DP-V0	Yes		No	
DDLML_Slave Diag	DP-V0	Yes		No	
DDLML_Global_Control	DP-V0	Yes		No	
DDLML_Get_Cfg	DP-V0			Yes	
DDLML_Set_Slave_Add	DP-V0			Yes	
DDLML_Read_Input	DP-V0			No	
DDLML_Read_Output	DP-V0			No	
DDLML_Get_Master_Diag	DP-V0		Yes		
DDLML_Start_Seq	DP-V0		No	No	
DDLML_Download	DP-V0		No	No	
DDLML_Upload	DP-V0		No	No	
DDLML_End_Seq	DP-V0		No	No	
DDLML_Act_Param_Brct	DP-V0		No	No	
DDLML_Act_Param	DP-V0		No	No	
MSAC1_Read	DP-V1	Yes			
MSAC1_Write	DP-V1	Yes			
MSAL1_Alarm	DP-V1		Yes		
MSAL1_Alarm_Ack	DP-V1		Yes		
MSAC2_Initiate	DP-V1			No	
MSAC2_Read	DP-V1			No	
MSAC2_Write	DP-V1			No	
MSAC2_DataTransport	DP-V1			No	
MSAC2_Abort	DP-V1			No	
Data_eXchange_Broadcast	DP-V2	No			
Isochrone_mode (Takt sync)	DP-V2	No			
Extended_Set_Prm (Subscriber)	DP-V2	No			

## 6.9 Constructing a Bus Cable for PROFIBUS DP


The bus cable for connecting PROFIBUS DP devices must be constructed by the user. A special PROFIBUS cable (twisted pair) is required here. This standard cable is available from various manufacturers and is a Belden part number 3079A.

If you plan to construct your own bus cable, the following part numbers are provided for your convenience.

- PROFIBUS connector: Siemens part number 6ES7972-0BA40-0XA0
- PROFIBUS cable: Belden part number 3079A.


To construct the cable, proceed as follows:

- 1 Cut the cable to the required length.
- 2 Prepare the cable ends as shown in the illustration (dimensions in mm):

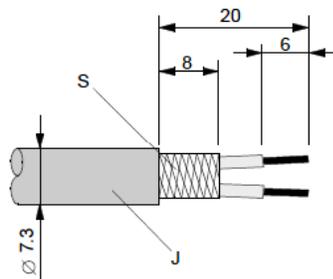

- J** PVC Jacket
- S** Braided shielding

- 3 Remove the PVC jacket J to the indicated length.
- 4 Wrap the provided copper shielding F around the shield braiding S:

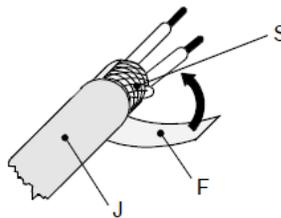


- J** PVC jacket
- S** Braided shielding
- F** Copper foil shielding

Additional foil can be obtained from 3M.

- 5 Plug the leads of the corresponding cable(s) into the terminals as shown:
  - Green leads in terminal A
  - Red lead in terminal B


- **Note:** Do **not** tighten the corresponding screws yet.

Connection terminal assignment on the PROFIBUS DP:

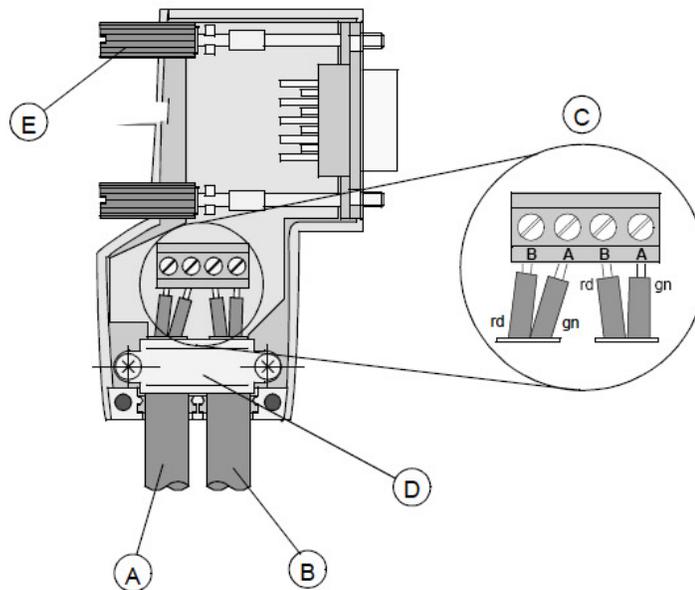

- A** Incoming cable
- B** Outgoing cable
- C** Connection terminals (only once (B,A))
- D** Cable cleat for relieving tension
- E** Bus connector screws

- 6** Attach the cables with the provided cable cleat to create a robust shielded connection and to relieve any tension as shown:

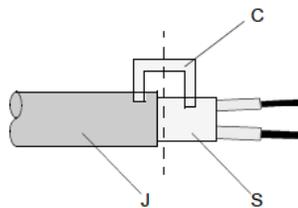

- J** PVC Jacket
- S** Braided shielding with foil shielding
- C** Cable cleat

- **Note:** Half of the cable jacket must lie under the cable cleat!

Pay attention to the cable cleat installation instructions.

- 7** Fasten the individual wires of the PROFIBUS cable to the terminals
- 8** Close the connector housing.

- **Note:** The shielding of both cables is connected internally with the metal housing of the connector.


- 9 Complete the Central Shielding Measures (below) and grounding operations for the shielding before you connect the cable connector to the module.
- 10 Plug the PROFIBUS DP connector into the module and secure it with the screws.

### Bus Begin and Bus End

The PROFIBUS connector with termination is required at the beginning and the end of the bus. These connectors emulate the line impedance.

It is recommended that at least one connector with diagnostics interface is used.


Wiring diagram for a PROFIBUS DP cable

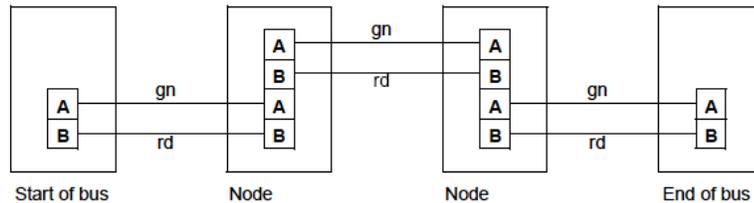

### Grounding and Shielding for Systems with Equipotential Bonding


Each cable shield should be galvanically grounded with the earth using FE/PE grounding clamps immediately after the cable has been connected to the cabinet.

This example indicates the shielding connection from the PROFIBUS cable to the FE/PE rail.

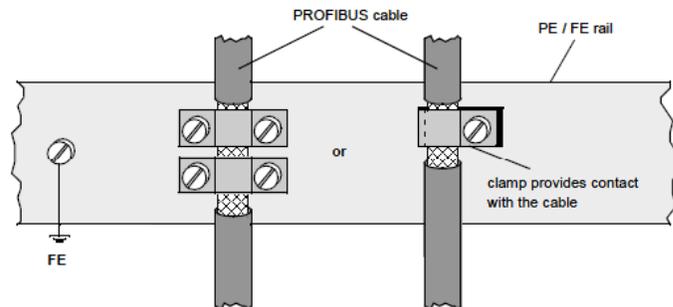

- **Note:** An equalization current can flow across a shield connected at both ends because of fluctuations in ground potential. To prevent this, it is imperative that there is potential equalization between all the attached installation components and devices.

This example indicates the system components and devices in a system with equipotential bonding.

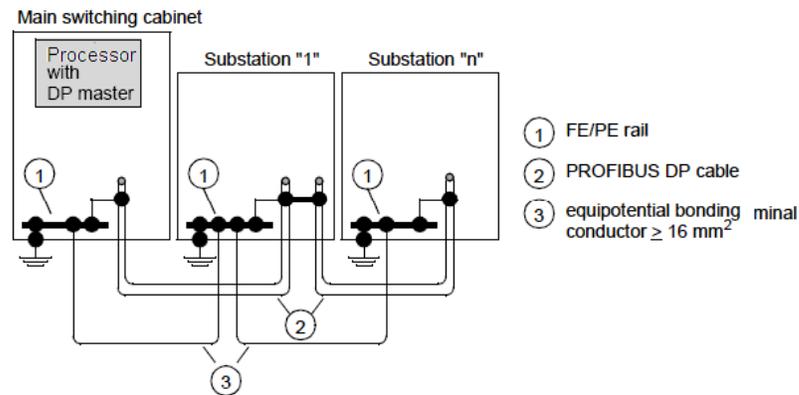


### Grounding and Shielding for Systems without Equipotential Bonding

**Note:** Grounding and shielding is to be carried out the same as for systems **with** equipotential bonding.

If this is not possible because of system or construction specific reasons however, use distributed ground with a capacitive coupling of high frequency interference signals.

This representation shows distributed grounding with capacitive coupling.

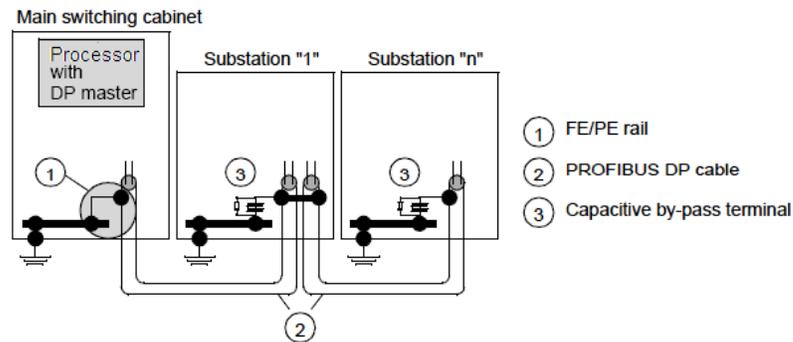



## 7 Support, Service & Warranty

### In This Chapter

- ❖ Contacting Technical Support ..... 151
- ❖ Return Material Authorization (RMA) Policies and Conditions..... 153
- ❖ LIMITED WARRANTY..... 155

### **Contacting Technical Support**

ProSoft Technology, Inc. (ProSoft) is committed to providing the most efficient and effective support possible. Before calling, please gather the following information to assist in expediting this process:

- 1 Product Version Number
- 2 System architecture
- 3 Network details

If the issue is hardware related, we will also need information regarding:

- 1 Module configuration and associated ladder files, if any
- 2 Module operation and any unusual behavior
- 3 Configuration/Debug status information
- 4 LED patterns
- 5 Details about the serial, Ethernet or fieldbus devices interfaced to the module, if any.

**Note:** For technical support calls within the United States, an after-hours answering system allows 24-hour/7-days-a-week pager access to one of our qualified Technical and/or Application Support Engineers. Detailed contact information for all our worldwide locations is available on the following page.

---

<b>Internet</b>	Web Site: <a href="http://www.prosoft-technology.com/support">www.prosoft-technology.com/support</a> E-mail address: <a href="mailto:support@prosoft-technology.com">support@prosoft-technology.com</a>
<b>Asia Pacific</b> (location in Malaysia)	Tel: +603.7724.2080, E-mail: <a href="mailto:asiapc@prosoft-technology.com">asiapc@prosoft-technology.com</a> Languages spoken include: Chinese, English
<b>Asia Pacific</b> (location in China)	Tel: +86.21.5187.7337 x888, E-mail: <a href="mailto:asiapc@prosoft-technology.com">asiapc@prosoft-technology.com</a> Languages spoken include: Chinese, English
<b>Europe</b> (location in Toulouse, France)	Tel: +33 (0) 5.34.36.87.20, E-mail: <a href="mailto:support.EMEA@prosoft-technology.com">support.EMEA@prosoft-technology.com</a> Languages spoken include: French, English
<b>Europe</b> (location in Dubai, UAE)	Tel: +971-4-214-6911, E-mail: <a href="mailto:mea@prosoft-technology.com">mea@prosoft-technology.com</a> Languages spoken include: English, Hindi
<b>North America</b> (location in California)	Tel: +1.661.716.5100, E-mail: <a href="mailto:support@prosoft-technology.com">support@prosoft-technology.com</a> Languages spoken include: English, Spanish
<b>Latin America</b> (Oficina Regional)	Tel: +1-281-2989109, E-Mail: <a href="mailto:latinam@prosoft-technology.com">latinam@prosoft-technology.com</a> Languages spoken include: Spanish, English
<b>Latin America</b> (location in Puebla, Mexico)	Tel: +52-222-3-99-6565, E-mail: <a href="mailto:soporte@prosoft-technology.com">soporte@prosoft-technology.com</a> Languages spoken include: Spanish
<b>Brasil</b> (location in Sao Paulo)	Tel: +55-11-5083-3776, E-mail: <a href="mailto:brasil@prosoft-technology.com">brasil@prosoft-technology.com</a> Languages spoken include: Portuguese, English

---

## 7.1 Return Material Authorization (RMA) Policies and Conditions

The following Return Material Authorization (RMA) Policies and Conditions (collectively, "RMA Policies") apply to any returned product. These RMA Policies are subject to change by ProSoft Technology, Inc., without notice. For warranty information, see Limited Warranty (page 155). In the event of any inconsistency between the RMA Policies and the Warranty, the Warranty shall govern.

### 7.1.1 Returning Any Product

- a) In order to return a Product for repair, exchange, or otherwise, the Customer must obtain a Return Material Authorization (RMA) number from ProSoft Technology and comply with ProSoft Technology shipping instructions.
- b) In the event that the Customer experiences a problem with the Product for any reason, Customer should contact ProSoft Technical Support at one of the telephone numbers listed above (page 151). A Technical Support Engineer will request that you perform several tests in an attempt to isolate the problem. If after completing these tests, the Product is found to be the source of the problem, we will issue an RMA.
- c) All returned Products must be shipped freight prepaid, in the original shipping container or equivalent, to the location specified by ProSoft Technology, and be accompanied by proof of purchase and receipt date. The RMA number is to be prominently marked on the outside of the shipping box. Customer agrees to insure the Product or assume the risk of loss or damage in transit. Products shipped to ProSoft Technology using a shipment method other than that specified by ProSoft Technology, or shipped without an RMA number will be returned to the Customer, freight collect. Contact ProSoft Technical Support for further information.
- d) A 10% restocking fee applies to all warranty credit returns, whereby a Customer has an application change, ordered too many, does not need, etc. Returns for credit require that all accessory parts included in the original box (i.e.; antennas, cables) be returned. Failure to return these items will result in a deduction from the total credit due for each missing item.

### **7.1.2 Returning Units Under Warranty**

A Technical Support Engineer must approve the return of Product under ProSoft Technology's Warranty:

- a) A replacement module will be shipped and invoiced. A purchase order will be required.
- b) Credit for a product under warranty will be issued upon receipt of authorized product by ProSoft Technology at designated location referenced on the Return Material Authorization
  - i. If a defect is found and is determined to be customer generated, or if the defect is otherwise not covered by ProSoft Technology's warranty, there will be no credit given. Customer will be contacted and can request module be returned at their expense;
  - ii. If defect is customer generated and is repairable, customer can authorize ProSoft Technology to repair the unit by providing a purchase order for 30% of the current list price plus freight charges, duties and taxes as applicable.

### **7.1.3 Returning Units Out of Warranty**

- a) Customer sends unit in for evaluation to location specified by ProSoft Technology, freight prepaid.
- b) If no defect is found, Customer will be charged the equivalent of \$100 USD, plus freight charges, duties and taxes as applicable. A new purchase order will be required.
- c) If unit is repaired, charge to Customer will be 30% of current list price (USD) plus freight charges, duties and taxes as applicable. A new purchase order will be required or authorization to use the purchase order submitted for evaluation fee.

**The following is a list of non-repairable units:**

- 3150 - All
- 3750
- 3600 - All
- 3700
- 3170 - All
- 3250
- 1560 - Can be repaired, only if defect is the power supply
- 1550 - Can be repaired, only if defect is the power supply
- 3350
- 3300
- 1500 - All

## 7.2 LIMITED WARRANTY

This Limited Warranty ("Warranty") governs all sales of hardware, software, and other products (collectively, "Product") manufactured and/or offered for sale by ProSoft Technology, Incorporated (ProSoft), and all related services provided by ProSoft, including maintenance, repair, warranty exchange, and service programs (collectively, "Services"). By purchasing or using the Product or Services, the individual or entity purchasing or using the Product or Services ("Customer") agrees to all of the terms and provisions (collectively, the "Terms") of this Limited Warranty. All sales of software or other intellectual property are, in addition, subject to any license agreement accompanying such software or other intellectual property.

### 7.2.1 What Is Covered By This Warranty

- a) *Warranty On New Products:* ProSoft warrants, to the original purchaser, that the Product that is the subject of the sale will (1) conform to and perform in accordance with published specifications prepared, approved and issued by ProSoft, and (2) will be free from defects in material or workmanship; provided these warranties only cover Product that is sold as new. This Warranty expires three (3) years from the date of shipment for Product purchased **on or after** January 1st, 2008, or one (1) year from the date of shipment for Product purchased **before** January 1st, 2008 (the "Warranty Period"). If the Customer discovers within the Warranty Period a failure of the Product to conform to specifications, or a defect in material or workmanship of the Product, the Customer must promptly notify ProSoft by fax, email or telephone. In no event may that notification be received by ProSoft later than 39 months from date of original shipment. Within a reasonable time after notification, ProSoft will correct any failure of the Product to conform to specifications or any defect in material or workmanship of the Product, with either new or remanufactured replacement parts. ProSoft reserves the right, and at its sole discretion, may replace unrepairable units with new or remanufactured equipment. All replacement units will be covered under warranty for the 3 year period commencing from the date of original equipment purchase, not the date of shipment of the replacement unit. Such repair, including both parts and labor, will be performed at ProSoft's expense. All warranty service will be performed at service centers designated by ProSoft.
- b) *Warranty On Services:* Materials and labor performed by ProSoft to repair a verified malfunction or defect are warranted in the terms specified above for new Product, provided said warranty will be for the period remaining on the original new equipment warranty or, if the original warranty is no longer in effect, for a period of 90 days from the date of repair.

### **7.2.2 What Is Not Covered By This Warranty**

- a) ProSoft makes no representation or warranty, expressed or implied, that the operation of software purchased from ProSoft will be uninterrupted or error free or that the functions contained in the software will meet or satisfy the purchaser's intended use or requirements; the Customer assumes complete responsibility for decisions made or actions taken based on information obtained using ProSoft software.
- b) This Warranty does not cover the failure of the Product to perform specified functions, or any other non-conformance, defects, losses or damages caused by or attributable to any of the following: (i) shipping; (ii) improper installation or other failure of Customer to adhere to ProSoft's specifications or instructions; (iii) unauthorized repair or maintenance; (iv) attachments, equipment, options, parts, software, or user-created programming (including, but not limited to, programs developed with any IEC 61131-3, "C" or any variant of "C" programming languages) not furnished by ProSoft; (v) use of the Product for purposes other than those for which it was designed; (vi) any other abuse, misapplication, neglect or misuse by the Customer; (vii) accident, improper testing or causes external to the Product such as, but not limited to, exposure to extremes of temperature or humidity, power failure or power surges; or (viii) disasters such as fire, flood, earthquake, wind and lightning.
- c) The information in this Agreement is subject to change without notice. ProSoft shall not be liable for technical or editorial errors or omissions made herein; nor for incidental or consequential damages resulting from the furnishing, performance or use of this material. The user guide included with your original product purchase from ProSoft contains information protected by copyright. No part of the guide may be duplicated or reproduced in any form without prior written consent from ProSoft.

### **7.2.3 Disclaimer Regarding High Risk Activities**

Product manufactured or supplied by ProSoft is not fault tolerant and is not designed, manufactured or intended for use in hazardous environments requiring fail-safe performance including and without limitation: the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of the product could lead directly or indirectly to death, personal injury or severe physical or environmental damage (collectively, "high risk activities"). ProSoft specifically disclaims any express or implied warranty of fitness for high risk activities.

### **7.2.4 Intellectual Property Indemnity**

Buyer shall indemnify and hold harmless ProSoft and its employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not ProSoft is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless ProSoft and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party. ProSoft makes no warranty that the product is or will be delivered free of any person's claiming of patent, trademark, or similar infringement. The Buyer assumes all risks (including the risk of suit) that the product or any use of the product will infringe existing or subsequently issued patents, trademarks, or copyrights.

- a) Any documentation included with Product purchased from ProSoft is protected by copyright and may not be duplicated or reproduced in any form without prior written consent from ProSoft.
- b) ProSoft's technical specifications and documentation that are included with the Product are subject to editing and modification without notice.
- c) Transfer of title shall not operate to convey to Customer any right to make, or have made, any Product supplied by ProSoft.
- d) Customer is granted no right or license to use any software or other intellectual property in any manner or for any purpose not expressly permitted by any license agreement accompanying such software or other intellectual property.
- e) Customer agrees that it shall not, and shall not authorize others to, copy software provided by ProSoft (except as expressly permitted in any license agreement accompanying such software); transfer software to a third party separately from the Product; modify, alter, translate, decode, decompile, disassemble, reverse-engineer or otherwise attempt to derive the source code of the software or create derivative works based on the software; export the software or underlying technology in contravention of applicable US and international export laws and regulations; or use the software other than as authorized in connection with use of Product.
- f) **Additional Restrictions Relating To Software And Other Intellectual Property**

In addition to compliance with the Terms of this Warranty, Customers purchasing software or other intellectual property shall comply with any license agreement accompanying such software or other intellectual property. Failure to do so may void this Warranty with respect to such software and/or other intellectual property.

### **7.2.5 Disclaimer of all Other Warranties**

The Warranty set forth in What Is Covered By This Warranty (page 155) are in lieu of all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

### **7.2.6 Limitation of Remedies \*\***

In no event will ProSoft or its Dealer be liable for any special, incidental or consequential damages based on breach of warranty, breach of contract, negligence, strict tort or any other legal theory. Damages that ProSoft or its Dealer will not be responsible for include, but are not limited to: Loss of profits; loss of savings or revenue; loss of use of the product or any associated equipment; loss of data; cost of capital; cost of any substitute equipment, facilities, or services; downtime; the claims of third parties including, customers of the Purchaser; and, injury to property.

\*\* Some areas do not allow time limitations on an implied warranty, or allow the exclusion or limitation of incidental or consequential damages. In such areas, the above limitations may not apply. This Warranty gives you specific legal rights, and you may also have other rights which vary from place to place.

### **7.2.7 Time Limit for Bringing Suit**

Any action for breach of warranty must be commenced within 39 months following shipment of the Product.

### **7.2.8 No Other Warranties**

Unless modified in writing and signed by both parties, this Warranty is understood to be the complete and exclusive agreement between the parties, suspending all oral or written prior agreements and all other communications between the parties relating to the subject matter of this Warranty, including statements made by salesperson. No employee of ProSoft or any other party is authorized to make any warranty in addition to those made in this Warranty. The Customer is warned, therefore, to check this Warranty carefully to see that it correctly reflects those terms that are important to the Customer.

### **7.2.9 Allocation of Risks**

This Warranty allocates the risk of product failure between ProSoft and the Customer. This allocation is recognized by both parties and is reflected in the price of the goods. The Customer acknowledges that it has read this Warranty, understands it, and is bound by its Terms.

### **7.2.10 Controlling Law and Severability**

This Warranty shall be governed by and construed in accordance with the laws of the United States and the domestic laws of the State of California, without reference to its conflicts of law provisions. If for any reason a court of competent jurisdiction finds any provisions of this Warranty, or a portion thereof, to be unenforceable, that provision shall be enforced to the maximum extent permissible and the remainder of this Warranty shall remain in full force and effect. Any cause of action with respect to the Product or Services must be instituted in a court of competent jurisdiction in the State of California.

## Index

### A

About the PROFIBUS Protocol • 114  
Acyclic Message Status Word • 67, 70, 73, 74, 77, 78, 80, 90  
Adding the Module to an Existing Project • 60  
Allocation of Risks • 158

### B

Backing Up the Project • 48  
Backplane Data Transfer • 55, 115  
Basic Troubleshooting Steps • 96  
Battery Life Advisory • 3  
Bus Access • 121  
Byte 0 - Station Status 1 Bits • 108  
Byte 1 - Station Status 2 Bits • 108  
Byte 2 - Station Status 3 Bits • 109  
Byte 3 - Master Address • 109  
Byte 4 - Ident Number High • 109  
Byte 5 - Ident Number Low • 109

### C

Calculating the Checksums • 45  
Checking the comDTM Install Version • 136  
Checking the comDTM Version • 135  
Checking the Install Version for Vista • 137  
Checking the PROFIBUS LEDs on the MVI46-PDPMV1 • 50  
Communication Types • 121  
Configuration Data in the Input Image • 116  
Configuring the MVI46-PDPMV1 Module • 23  
Configuring the PROFIBUS Master • 23, 29  
Configuring the PROFIBUS Slaves • 31, 46, 58  
Configuring the RSLinx Driver for the PC COM Port • 20  
Connecting the comDTM to the Master to Establish Communication • 129  
Connecting Your PC to the Module • 22  
Connecting Your PC to the Processor • 18  
Constructing a Bus Cable for PROFIBUS DP • 146  
Contacting Technical Support • 151, 153  
Controlling Law and Severability • 158

### D

DB9 to RJ45 Adaptor (Cable 14) • 143  
Diagnostics and Troubleshooting • 9, 95  
Disabling the RSLinx Driver for the Com Port on the PC • 140  
Disclaimer of all Other Warranties • 157  
Disclaimer Regarding High Risk Activities • 156  
Downloading the Project to the Module Using a Serial COM Port • 23, 47

Downloading the Sample Program to the Processor • 19, 62  
DP-V1 Error Codes • 93

### E

Error Codes • 91, 92  
Examples • 100  
Exiting the Program • 107

### F

Functional Overview • 114  
Functional Specifications • 113

### G

General Specifications • 112  
Guide to the MVI46-PDPMV1 User Manual • 9

### H

Hardware Requirements (Recommended) • 126  
Hardware Specifications • 112  
How to Contact Us • 2

### I

Important Installation Instructions • 3  
Input Byte Swap • 28  
Input Data • 120  
Input Data Size • 27  
Installation • 127  
Installing ProSoft Configuration Builder Software • 14  
Installing the GSD Files • 30  
Installing the Module in the Rack • 16  
Intellectual Property Indemnity • 157  
Introduction • 135  
Introduction to PROFIBUS comDTM • 123

### K

Keystrokes • 105

### L

Ladder Logic • 59  
LED Status Indicators  
Front of MVI46 Module • 97  
Limitation of Remedies \*\* • 158  
LIMITED WARRANTY • 153, 155

### M

M0 Output Image • 120  
M1 Input Image • 116  
Mailbox Communication • 120  
Mailbox Message  
Acyclic Data Read  
Class 1 • 77  
Acyclic Data Write  
Class 1 • 79  
Alarm Indication • 81  
Get Live List • 76  
Get Slave Configuration • 72

- Get Slave Diagnostics • 69
- Set Operating Mode • 83
- Set Slave Address • 73
- Set Slave Mode • 66
- Start Slave • 85
- Stop Slave • 87
- Mailbox Message Queuing • 64
- Mailbox Messaging • 63
- Mailbox Messaging Error Codes • 71, 73, 75, 90
- Main Menu • 105
- Markings • 4
- Master/Slave Communication Phases • 121
- Master/Slave Polling • 121
- Module Faceplate Status Indicators • 98
- MVI (Multi Vendor Interface) Modules • 3

## N

- Navigation • 104
- No Other Warranties • 158

## O

- Output Byte Swap • 28
- Output Data Size • 27

## P

- Package Contents • 13
- Pinouts • 3, 143, 146
- Printing the Processor Network Memory Map • 45
- Product Specifications • 9, 112
- PROFIBUS comDTM • 122
- PROFIBUS DP Architecture • 120
- PROFIBUS Master Indicators • 50, 99
- PROFIBUS Master Port • 144
- ProSoft Technology Product Availability • 122
- ProSoft Technology® Product Documentation • 2

## Q

- Queue Timeouts • 64
- Quick Start • 128

## R

- Receiving Mailbox Message Responses from the Module • 89
- Redisplaying the Menu • 105
- Reference • 9, 111
- Return Codes • 71, 73, 75, 79, 81, 84, 91
- Return Material Authorization (RMA) Policies and Conditions • 153
- Returning Any Product • 153
- Returning Units Out of Warranty • 154
- Returning Units Under Warranty • 154
- RS-232 Configuration/Debug Port • 142

## S

- Scanning for Slaves Manually • 32
- Sending a Mailbox Message in RSLogix 500 • 50, 58
- Setting Jumpers • 15

- Setting Module Parameters • 23, 26
- Setting Up the Project • 23, 24
- Software Requirements (Minimum) • 126
- Special Function Mailbox Messaging Commands • 65
- Standard PROFIBUS Slave Diagnostic Bytes • 108
- Start Here • 9, 11
- Starting FDT • 128
- Status Data in the Input Image • 117
- Support, Service & Warranty • 9, 151
- Supported PROFIBUS Services • 145
- System Requirements • 12, 126

## T

- Time Limit for Bringing Suit • 158
- Token Passing • 121

## U

- Using ProSoft Configuration Builder (PCB) for Diagnostics • 102
- Using The Autoscan Feature • 35
- Using the Diagnostic Window in ProSoft Configuration Builder • 102

## V

- Verifying Correct Operation • 50
- Verifying the comDTM Version and comDTM Install Version • 122, 126, 132, 135
- Viewing Block Transfer Statistics • 106
- Viewing Control Registers • 107
- Viewing Module Configuration • 106
- Viewing Module Status • 106
- Viewing PROFIBUS Data • 107
- Viewing the Data Files in RSLogix 500 • 50, 56
- Viewing the Fieldbus Data from the MVI46-PDPMV1's Configuration/Debug Menu • 50, 53
- Viewing the Online Status of the PROFIBUS Network • 50, 51
- Viewing Version Information • 106

## W

- Warnings • 3
- What Is Covered By This Warranty • 155, 157
- What is DTM? • 124
- What is FDT? • 123
- What Is Not Covered By This Warranty • 156
- What is PROFIBUS? • 125
- Why Use PROFIBUS comDTM? • 123

## Y

- Your Feedback Please • 2